


Service Manual

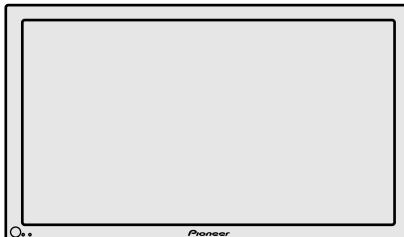

PDP-434PU

ORDER NO.
ARP3174

PLASMA DISPLAY

PDP-434PU PDP-434PE PRO-434PU

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
PDP-434PU	TUCK	AC110 - 240V	
PDP-434PE	WYVI6	AC220 - 240V	
PDP-434PE	WYVI6XK	AC220 - 240V	
PRO-434PU	KUC	AC120V	



For details, refer to "Important symbols for good services".

Confirm it

Serial No.

WYVI6 : SS #####△△
 WYVI6XK : UK#####△△

SAFETY INFORMATION



This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 - Proposition 65

NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.

SAFETY PRECAUTIONS

NOTICE : Comply with all cautions and safety related notes located on or inside the cabinet and on the chassis.

The following precautions should be observed :

1. When service is required, even though the PDP UNIT an isolation transformer should be inserted between the power line and the set in safety before any service is performed.
2. When replacing a chassis in the set, all the protective devices must be put back in place, such as barriers, nonmetallic knobs, adjustment and compartment covershields, isolation resistor-capacitor, etc.
3. When service is required, observe the original lead dress. Extra precaution should be taken to assure correct lead dress in the high voltage circuitry area.
4. Always use the manufacturer's replacement components. Especially critical components as indicated on the circuit diagram should not be replaced by other manufacturer's. Furthermore where a short circuit has occurred, replace those components that indicate evidence of overheating.
5. Before returning a serviced set to the customer, the service technician must thoroughly test the unit to be certain that it is completely safe to operate without danger of electrical shock, and be sure that no protective device built into the set by the manufacturer has become defective, or inadvertently defeated during servicing. Therefore, the following checks should be performed for the continued protection of the customer and servicetechnician.

6. Perform the following precautions against unwanted radiation and rise in internal temperature.

- Always return the internal wiring to the original styling.
- Attach parts (Gascket, Ferrite Core, Ground, Rear Cover, Shield Case etc.) surely after disassembly.
- 7. Perform the following precautions for the PDP panel.
- When the front case is removed, make sure nothing hits the panel face, panel corner, and panel edge (so that the glass does not break).
- Make sure that the panel vent does not break. (Check that the cover is attached.)
- Handle the FPC connected to the panel carefully. Twisting or pulling the FPC when connecting it to the connector will cause it to peel off from the panel.
- 8. Pay attention to the following.
- When the front case is removed, infrared ray is radiated and may disturb reception of the remote control unit.
- Pay extreme caution when the front case and rear panel are removed because this may cause a high risk of disturbance to TVs and radios in the surrounding.

Leakage Current Cold Check

With the AC plug removed from an AC power source, place a jumper across the two plug prongs. Turn the AC power switch on. Using an insulation tester (DC 500V), connect one lead to the jumpered AC plug and touch the other lead to each exposed metal part (input/output terminals, screwheads, metal overlays, control shafts, etc.), particularly any exposed metal part having a return path to the chassis. Exposed metal parts having a return path to the chassis should have a minimum resistor reading of $0.3\text{M}\Omega$ and a maximum resistor reading of $5\text{M}\Omega$. Any resistor value below or above this range indicates an abnormality which requires corrective action. Exposed metal parts not having a return path to the chassis will indicate an open circuit.

Leakage Current Hot Check

Plug the AC line cord directly into an AC power source (do not use an isolation transformer for this check).

Turn the AC power switch on.

Using a "Leakage Current Tester (Simpson Model 229 equivalent)", measure for current from all exposed metal parts of the cabinet (input/output terminals, screwheads, metal overlays, control shaft, etc.), particularly any exposed metal part having a return path to the chassis, to a known earth ground (water pipe, conduit, etc.). Any current measured must not exceed 0.5mA.


PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in PIONEER set have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a \triangle on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

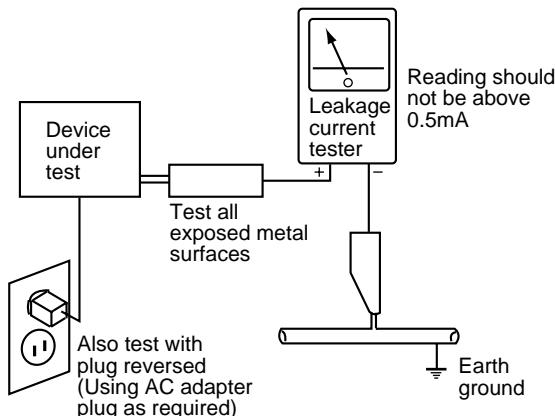

AC Leakage Test

**ANY MEASUREMENTS NOT WITHIN THE LIMITS
OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL
SHOCK HAZARD AND MUST BE CORRECTED BEFORE
RETURNING THE SET TO THE CUSTOMER.**

A ■ Charged Section

The places where the commercial AC power is used without passing through the power supply transformer. If the places are touched, there is a risk of electric shock. In addition, the measuring equipment can be damaged if it is connected to the GND of the charged section and the GND of the non-charged section while connecting the set directly to the commercial AC power supply. Therefore, be sure to connect the set via an insulated transformer and supply the current.

- 1. AC Power Cord
- 2. AC Inlet with Filter
- 3. Power Switch (S1)
- 4. Fuse (In the POWER SUPPLY Unit)
- 5. STB Transformer and Converter Transformer
(In the POWER SUPPLY Unit)
- 6. Other primary side of the POWER SUPPLY Unit

B ■ High Voltage Generating Point

The places where voltage is 100V or more except for the charged places described above. If the places are touched, there is a risk of electric shock.

1. SW POWER SUPPLY Unit.....	(215V)
2. 43 X DRIVE Assy	(-225V to 215V)
3. 43 Y DRIVE Assy	(345V)
4. 43 SCAN (A) Assy	(345V)
5. 43 SCAN (B) Assy	(345V)
6. X CONNECTOR A Assy	(-225V to 215V)
7. X CONNECTOR B Assy	(-225V to 215V)

 : Part is Charged Section.

 : Part is the High Voltage Generating Points other than the Charged Section.

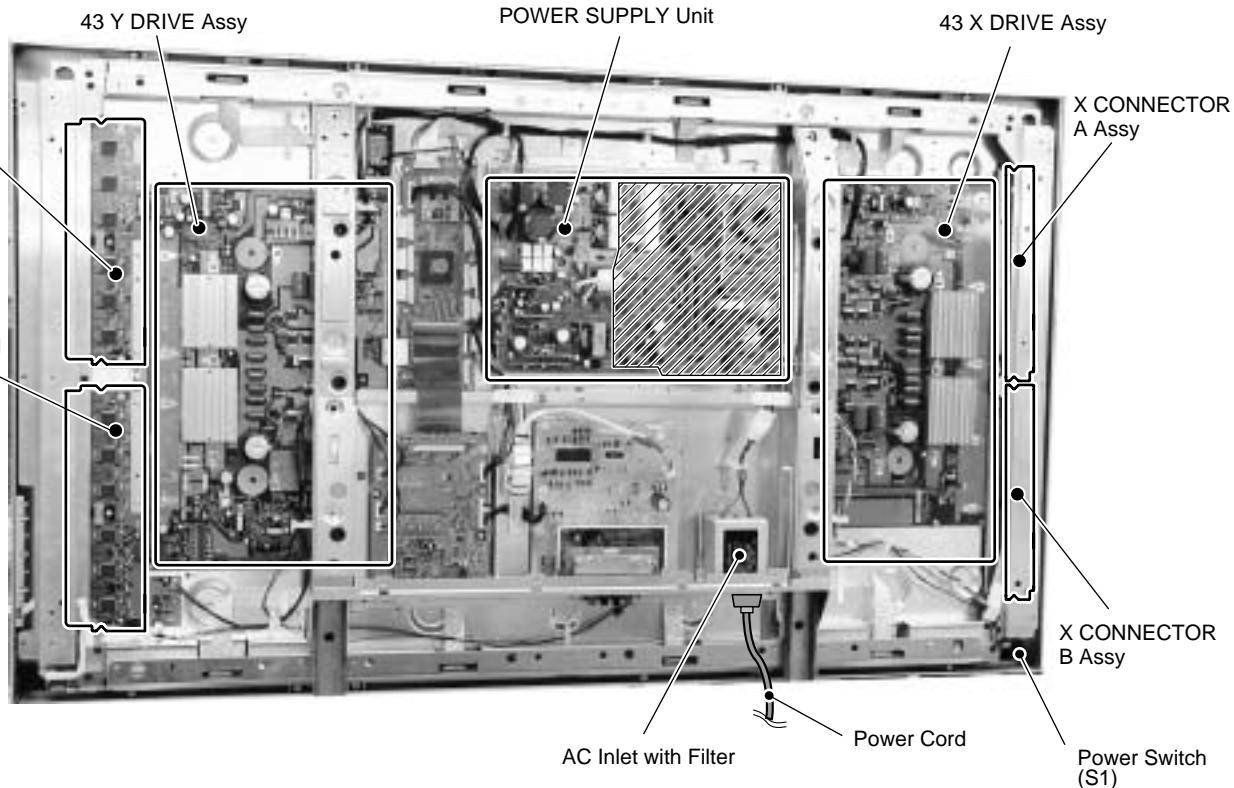


Fig.1 Charged Section and High Voltage Generating Point (Rear View)

[Important symbols for good services]

In this manual, the symbols shown below indicate that adjustments, settings or cleaning should be made securely. When you find the procedures bearing any of the symbols, be sure to fulfill them:

1. Product safety

You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.

2. Adjustments

To keep the original performances of the product, optimum adjustments or specification confirmation is indispensable. In accordance with the procedures or instructions described in this manual, adjustments should be performed.

3. Cleaning

For optical pickups, tape-deck heads, lenses and mirrors used in projection monitors, and other parts requiring cleaning, proper cleaning should be performed to restore their performances.

4. Shipping mode and shipping screws

To protect the product from damages or failures that may be caused during transit, the shipping mode should be set or the shipping screws should be installed before shipping out in accordance with this manual, if necessary.

5. Lubricants, glues, and replacement parts

Appropriately applying grease or glue can maintain the product performances. But improper lubrication or applying glue may lead to failures or troubles in the product. By following the instructions in this manual, be sure to apply the prescribed grease or glue to proper portions by the appropriate amount. For replacement parts or tools, the prescribed ones should be used.

A

B

C

D

E

F

CONTNTS

A	SAFETY INFORMATION	2
	1. SPECIFICATIONS	7
	2. EXPLODED VIEWS AND PARTS LIST	8
	2.1 PACKING	8
	2.2 CHASSIS SECTION (1)	10
	2.3 CHASSIS SECTION (2)	12
	2.4 FLAME SECTION	14
	2.5 MULTI BASE SECTION	16
	2.6 REAR SECTION	18
	2.7 FRONT PANEL SECTION	20
	2.9 PANEL CHASSIS (43) Assy (AWU1070)	21
	2.9 PANEL CHASSIS (43) Assy (AWU1070)	21
B	3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM (For SCHEMATIC DIAGRAM, Refer to ARP3175)	22
	3.1 BLOCK DIAGRAM	22
	3.1.1 OVERALL BLOCK DIAGRAM	22
	3.1.2 43 Y DRIVE ASSY	24
	3.1.3 43 X DRIVE ASSY	25
	3.1.4 PANEL IF ASSY	26
	3.1.5 DIGITAL VIDEO ASSY	31
	3.1.6 HD AUDIO AMP ASSY	33
	3.2 WAVEFORMS	34
	4. PCB CONNECTION DIAGRAM (Refer to ARP3175)	39
C	5. PCB PARTS LIST	47
	6. ADJUSTMENT	47
	6.1 ADJUSTMENT REQUIRED WHEN THE SET IS REPAIRED OR REPLACED	47
	6.2 COMMAND	47
	6.2.1 RS232C COMMAND	47
	7. GENERAL INFORMATION	54
	7.1 DIAGNOSIS	54
	7.1.1 PCB LOCATION	54
	7.1.2 DIAGNOSIS OF SHUTDOWN/POWER-DOWN INDICATED BY LEDS	55
	7.1.3 DIAGNOSIS WITH THE AID OF FACTORY MODE	60
	7.1.4 CANCELING DETECTION BY THE TRAP SWITCH	63
	7.1.5 OPERATION WHEN THE MEDIA RECEIVER IS NOT CONNECTED	64
	7.1.6 TEMPERATURE-COMPENSATION FUNCTION OF THE DRIVE-SYSTEM VOLTAGE	64
	7.1.7 POWER ON/OFF FUNCTION FOR THE LARGE-SIGNAL SYSTEM	65
	7.1.8 BACKING UP THE ADJUSTMENT VALUES FOR THE MAIN UNIT	66
	7.1.9 TROUBLESHOOTING	68
	7.1.10 DISASSEMBLY	69
	7.2 IC INFORMATION	72
D	8. PANEL FACILITIES AND SPECIFICATIONS	94



1. SPECIFICATIONS

43" Plasma Display

Item	Model: PDP-434PU	Model: PDP-434PE
Number of Pixels	1024 x 768 pixels	1024 x 768 pixels
Audio Amplifier	13 W + 13 W (1kHz, 10%, 8Ω)	13 W + 13 W (1kHz, 10%, 8Ω)
Surround System	SRS/FOCUS/TruBass	SRS/FOCUS/TruBass
Power Requirement	110-240V AC,50/60Hz,298W (0.3W Standby,120V)	220-240V AC,50/60Hz,295W (0.5W Standby)
Dimensions	1120(W) x 652 (H) x 98 (D) mm (44 1/8(W)x 25 11/16(H)x 3 7/8(D)inches)	1120(W) x 652 (H) x 98 (D) mm
Weight	30.5 kg (67.3 lbs.)	30.5 kg (67.3 lbs.)

Item	Model: PRO-434PU
Number of Pixels	1024 x 768 pixels
Audio Amplifier	13 W + 13 W (1kHz, 10%, 8Ω)
Surround System	SRS/FOCUS/TruBass
Power Requirement	120V AC,60Hz,298W (0.3W Standby)
Dimensions	1120(W) x 652 (H) x 98 (D) mm (44 1/8(W)x 25 11/16(H)x 3 7/8(D)inches)
Weight	30.5 kg (67.3 lbs.)

• Accessories

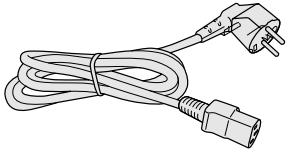
 Power Cord (PDP-434PE: ADG1214)	 Speaker Cushion x1 (AEB1384)  (Except PRO-434PU)	 Wiping Cloth x1 (AED1208)
 Power Cord (PDP-434PU: ADG1215) (PRO-434PU: ADG1215)	Binder Assy (AEC1908) <ul style="list-style-type: none"> • Bead Bands x3  <ul style="list-style-type: none"> • Speed Clamp x3  	 Ferrite Core (ATX1039)  • Cable Tie (PDP-434PE only)

2. EXPLODED VIEWS AND PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ∇ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

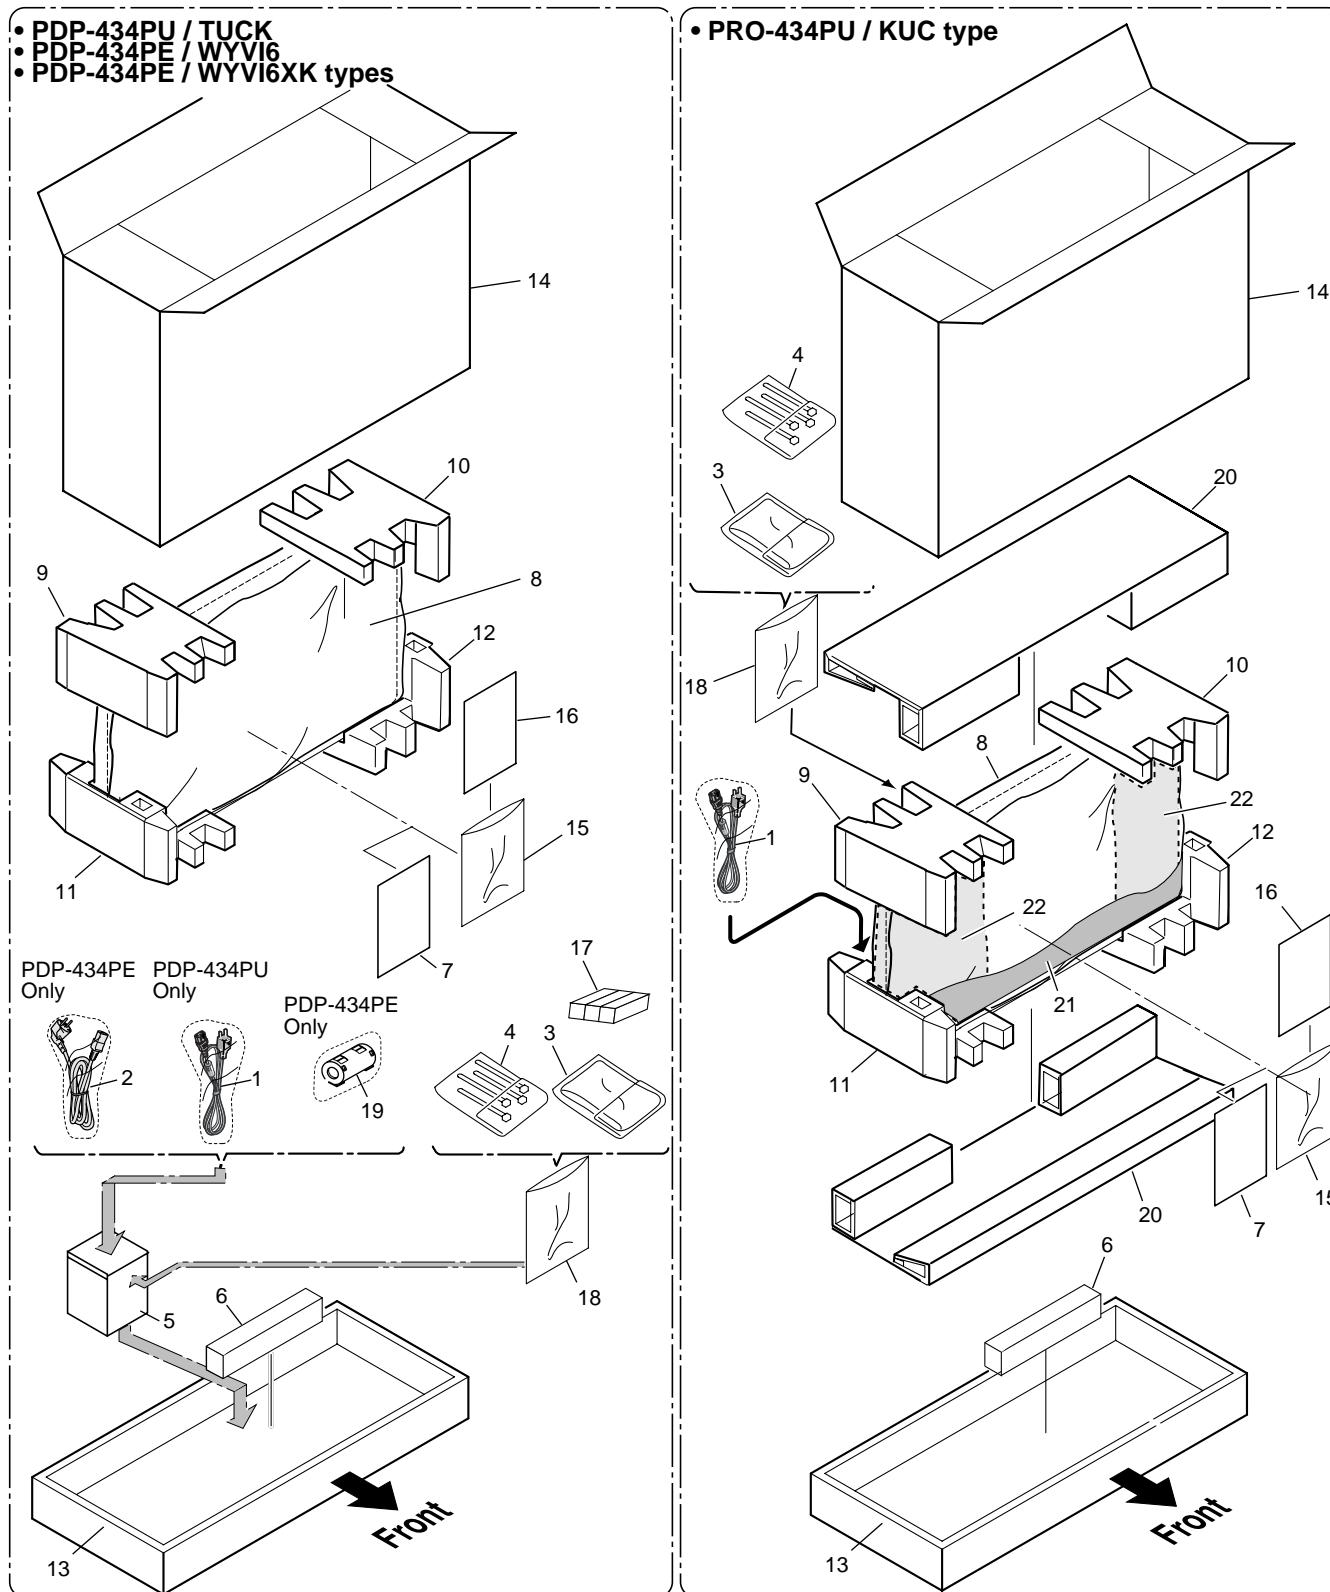

PACKING Parts List


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠ 1	Power Cord	See Contrast table (2)	13	Carton (43)	See Contrast table (2)
⚠ 2	Power Cord	See Contrast table (2)	14	Upper Carton (43)	See Contrast table (2)
3	Wiping Cloth	AED1208	15	Vinyl Bag	AHG1310
4	Binder Assy	AEC1908			
5	Code Case	See Contrast table (2)	16	Caution Card	ARM1232
			17	Speaker Cushion	See Contrast table (2)
6	Center Pad (43)	AHA2336	18	Vinyl Bag S	See Contrast table (2)
NSP 7	Warranty Card	See Contrast table (2)	19	Ferrite Core	See Contrast table (2)
8	Mirror Mat	See Contrast table (2)	20	Inner Carton	See Contrast table (2)
9	Pad (PP T- L)	AHA2315			
10	Pad (PP T- R)	AHA2316	21	Polyethirene Sheet	See Contrast table (2)
			22	Paper	See Contrast table (2)
11	Pad (PP B- L)	AHA2317			
12	Pad (PP B- R)	AHA2318			

(2) CONTRAST TABLE

PDP-434PU/ TUCK, PDP-434PE/ WYVI6, PDP-434PE/ WYVI6XK and PRO-434PU/ KUC are constructed the same except for the following :

Mark	No.	Symbol and Description	PDP-434PU TUCK	PDP-434PE WYVI6	PDP-434PE WYVI6XK	PRO-434PU KUC
⚠	1	Power Cord	ADG1215	Not used	Not used	ADG1215
⚠	2	Power Cord	Not used	ADG1214	ADG1214	Not used
NSP	5	Code Case	AHC1041	AHC1041	AHC1049	Not used
	7	Warranty Card	ARY1138	ARY1114	ARY1114	ARY1134
	8	Mirror Mat	AHG1284	AHG1284	AHG1327	AHG1284
	13	Carton (43PU)	AHD3193	AHD3193	Not used	Not used
	13	Carton (43)	Not used	Not used	AHD3189	Not used
	13	Carton (43EL)	Not used	Not used	Not used	AHD3214
	14	Upper Carton (43PU)	AHD3179	Not used	Not used	Not used
	14	Upper Carton (43PE)	Not used	AHD3180	Not used	Not used
	14	Upper Carton (43)	Not used	Not used	AHD3188	Not used
	14	Upper Carton (43EL)	Not used	Not used	Not used	AHD3215
	17	Speaker Cushion	AEB1384	AEB1384	AEB1384	Not used
	18	Vinyl Bag S	AHG1338	AHG1338	Not used	AHG1338
	19	Ferrite Core	Not used	ATX1039	ATX1039	Not used
	20	Inner Carton	Not used	Not used	Not used	AHB1250
	21	Polyethirene Sheet	Not used	Not used	Not used	AHG1341
	22	Paper	Not used	Not used	Not used	AHG1342

2.2 CHASSIS SECTION (1)

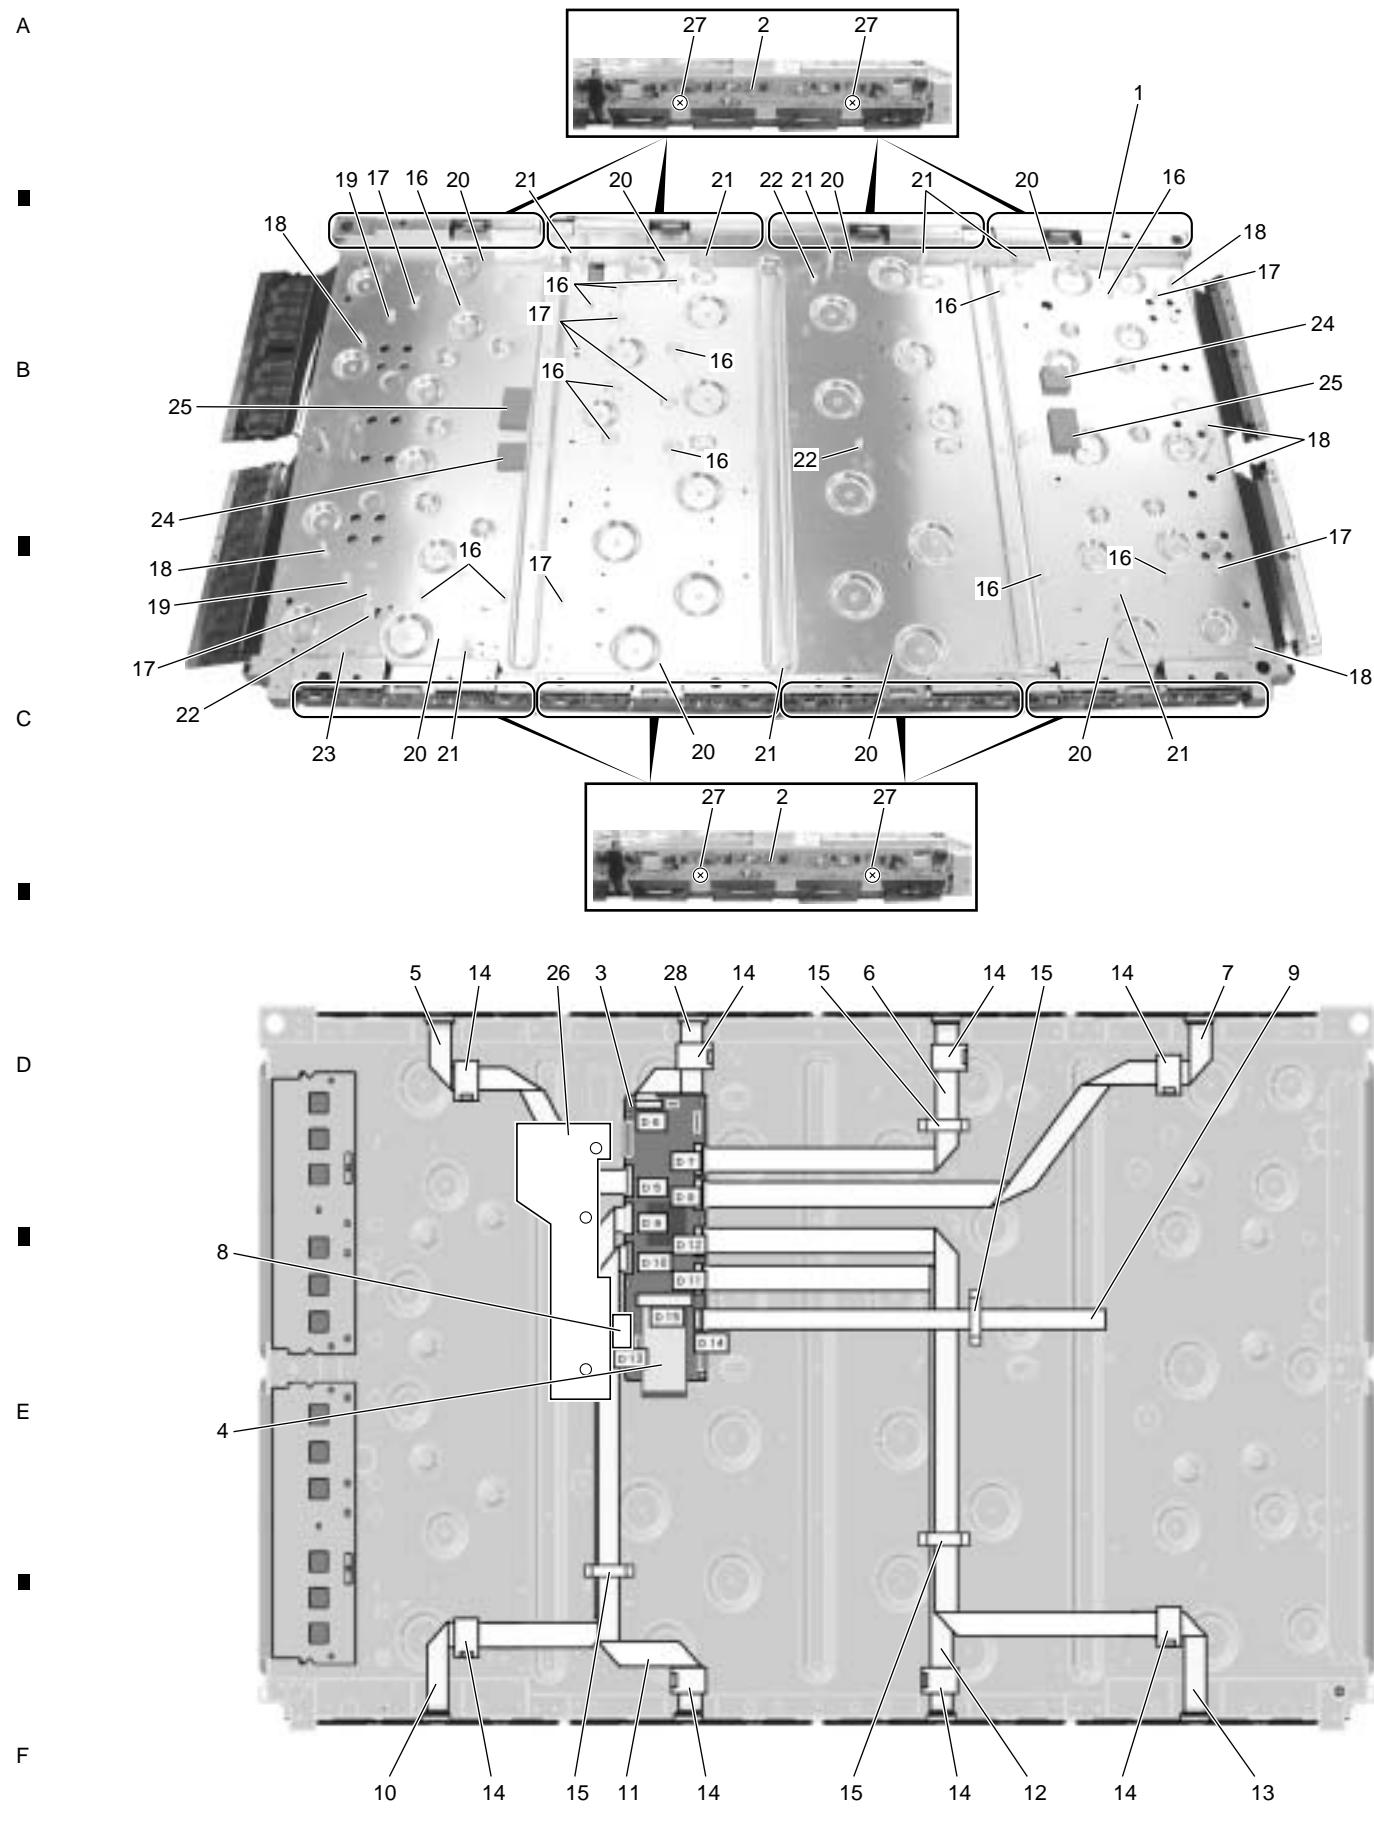

CHASSIS SECTION (1) Parts list

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
NSP 1	P.Chassis (43) Assy	AWU1070
NSP 2	43 ADDRESS Assy	AWZ6793
3	DIGITAL VIDEO Assy	AWV2070
4	FPC (114P)	ADY1081
5	Flexible Cable (J201)	ADD1215
6	Flexible Cable (J203)	ADD1217
7	Flexible Cable (J204)	ADD1218
8	Flexible Cable (J209)	ADD1223
9	Flexible Cable (J210)	ADD1224
10	Flexible Cable (J205)	ADD1219
11	Flexible Cable (J206)	ADD1220
12	Flexible Cable (J207)	ADD1221
13	Flexible Cable (J208)	ADD1222
14	Ferrite Core	ATX1048
15	Flat Clamp	AEC1879
16	PCB Spacer	AEC1941
17	PCB Support	AEC1938
18	PCB Spacer	AEC1944
19	PCB Support	AEC1958
20	Ferrite Clamp	AEC1972
21	Wire Saddle	AEC1745
22	PCB Spacer	AEC1947
23	Wire Clip	AEC1948
24	Drive Siricon Sheet	AEH1066
25	Drive Siricon Sheet	AEH1065
26	Ydrive Protect Sheet	AMR3346
27	Screw	VBB30P080FNI
28	Flexible Cable (J202)	ADD1227

A

B

C


D

E


F

2.3 CHASSIS SECTION (2)


A

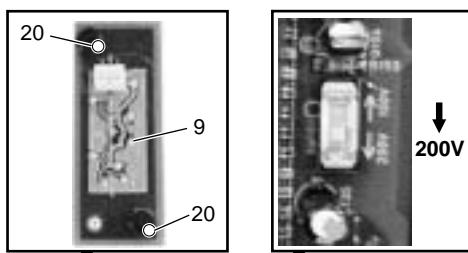


B

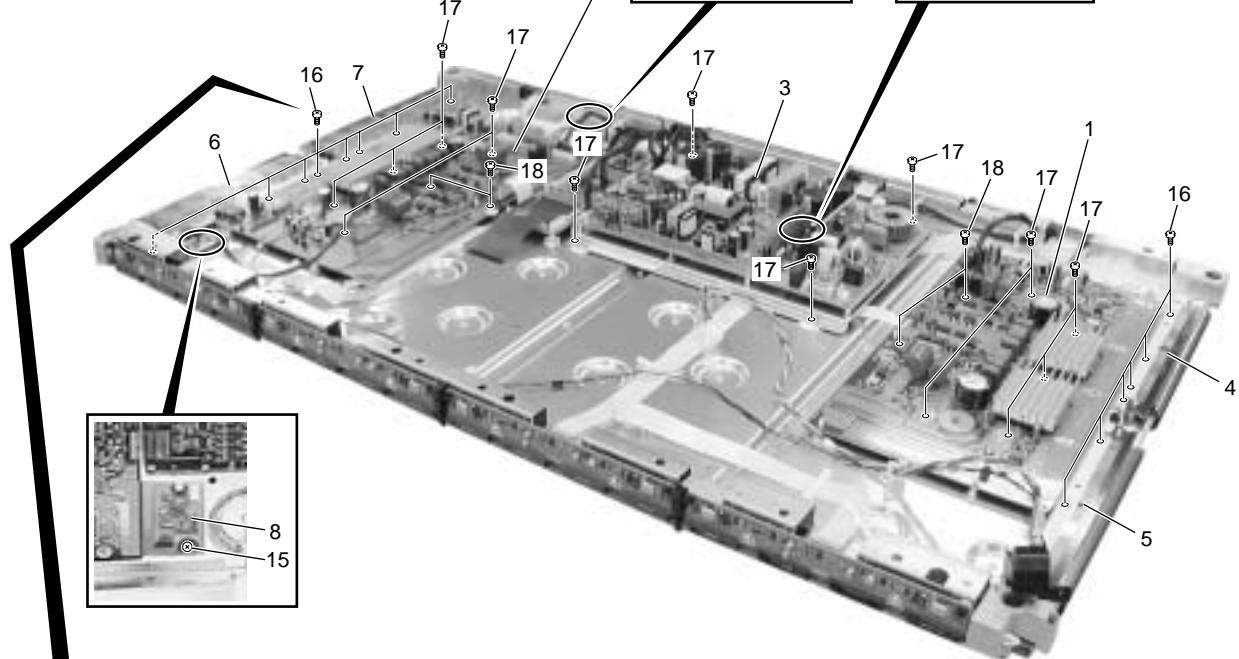

C

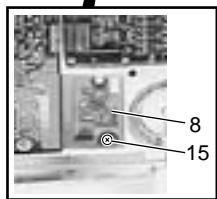

D

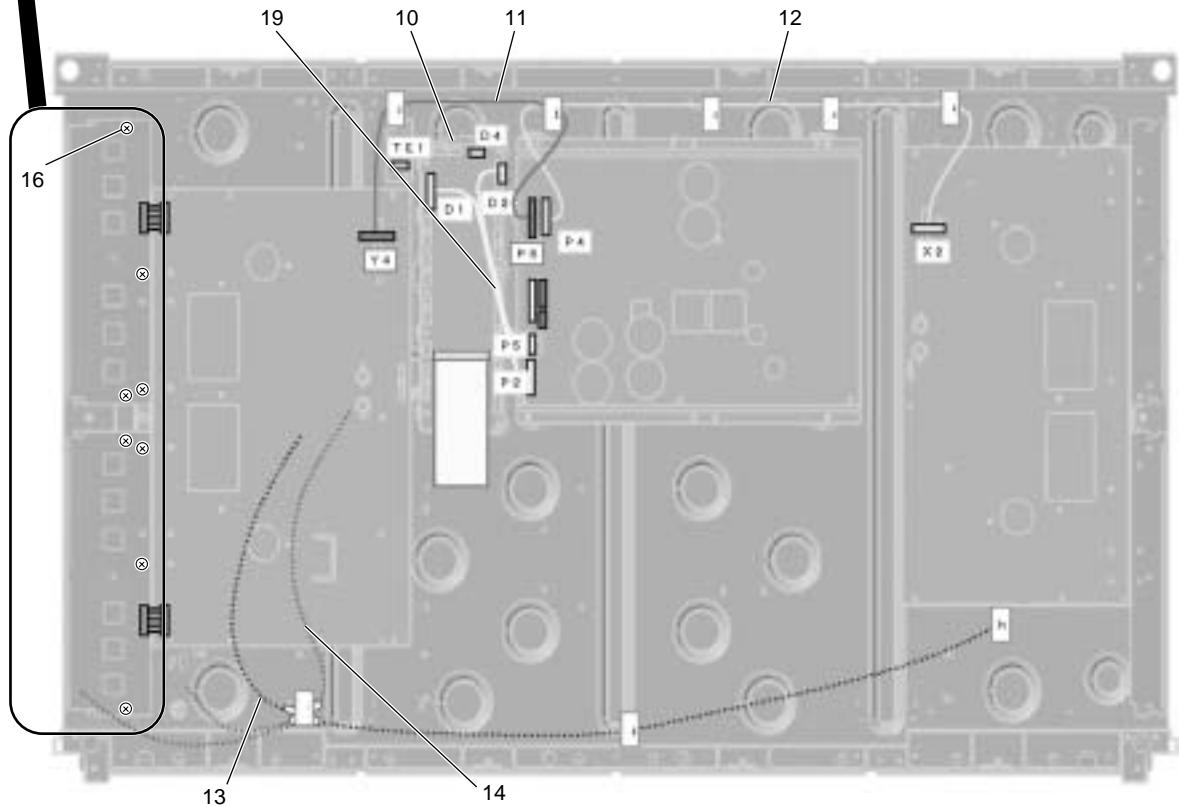

E

CHASSIS SECTION (2) Parts list

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	43 X DRIVE Assy	AWZ6794
2	43 Y DRIVE Assy	AWV2022
⚠ 3	POWER SUPPLY Unit	AXY1068
NSP 4	X CONNECTOR A Assy	AWZ6798
NSP 5	X CONNECTOR B Assy	AWZ6799
NSP 6	43 SCAN A Assy	AWZ6796
NSP 7	43 SCAN B Assy	AWZ6797
8	KEY CONTROL Assy	AWZ6789
9	PANEL SENSOR Assy	AWZ6795
10	3P Housing Wire (J109)	ADX2847
11	11P Housing Wire (J102)	ADX2840
12	12P Housing Wire(J103)	ADX2841
13	3P Housing Wire (J108)	ADX2846
14	Wire B (J106)	ADX2844
15	Screw	ABZ30P060FMC
16	Screw	PMB30P060FNI
17	Screw	VBB30P080FNI
18	Screw	PMB40P080FZK
19	Wire A (J101)	ADX2839
20	Nylon Rivet	AEC1671

A

B








C

D

E

F

2.4 FLAME SECTION

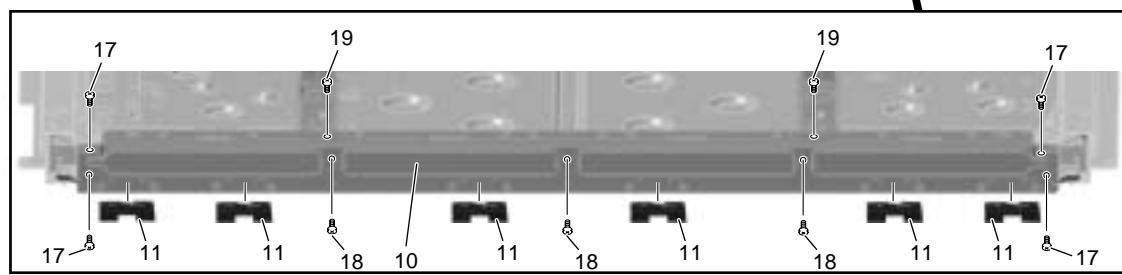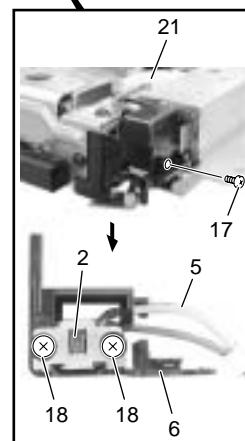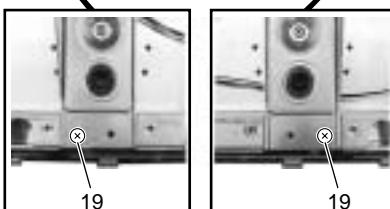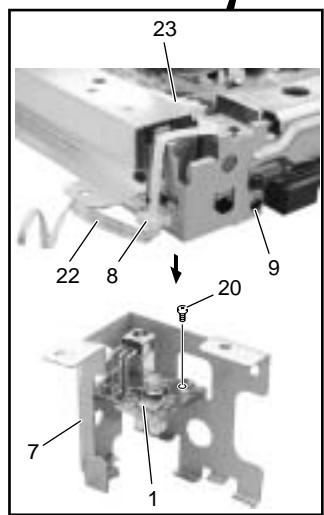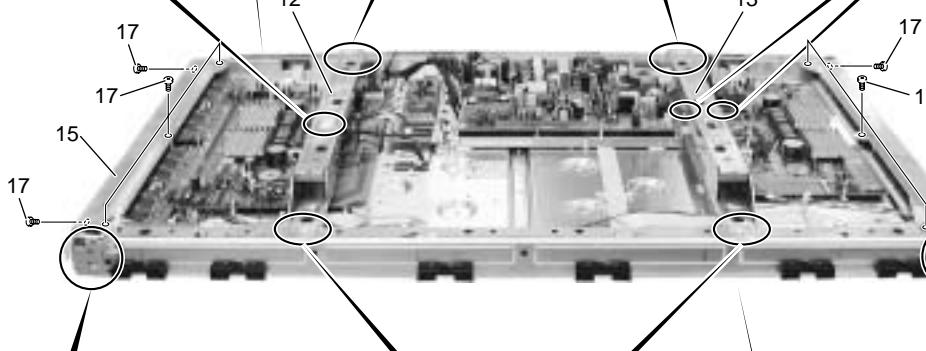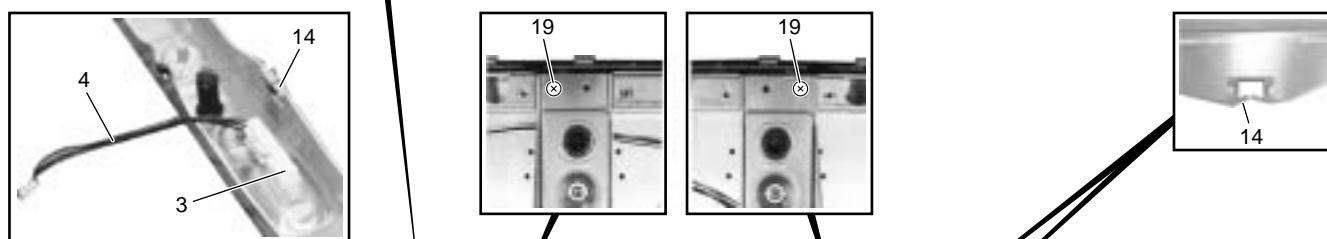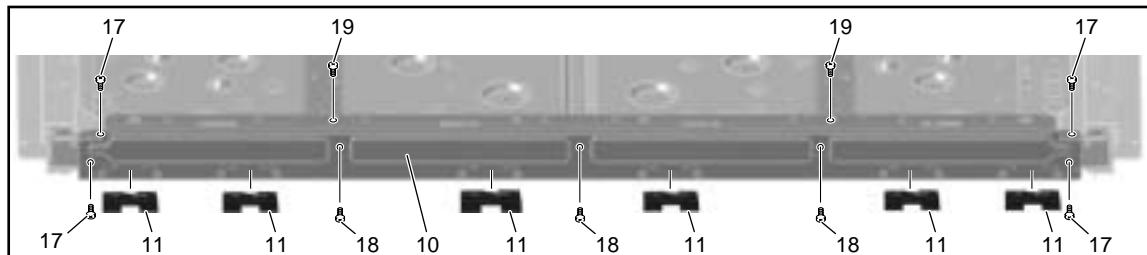

FLAME SECTION Parts list

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	PANEL IR Assy	AWZ6790
△ 2	Power Switch (S1)	ASG1092
3	Power Switch (S2)	ASG1089
4	3P Housing Wire (J107)	ADX2845
5	Housing Wire (43) (J110)	ADX2848
6	Switch Holder	AMR3349
NSP 7	IR Holder	ANG2551
8	Wire Saddle	AEC1948
9	Nylon Rivet	AEC1671
NSP 10	Front Chassis H (43)	ANA1714
11	Front Spacer	AMR3369
12	Sub Frame L Assy (43P)	ANG2545
13	Sub Frame R Assy (43P)	ANG2548
14	Edging Saddle	AEC1737
15	Front Chassis VL Assy (43)	ANA1762
16	Front Chassis VR Assy (43)	ANA1763
17	Screw	AMZ30P060FZK
18	Screw	APZ30P080FZK
19	Screw	AMZ30P080FMC
20	Screw	ABZ30P060FMC
21	Flat Clamp	AEC1884
22	Flexible Cable (J211)	ADD1225
23	Flat Clamp	AEC1879

A

B

C


D

E


F

2.5 MULTI BASE SECTION


A

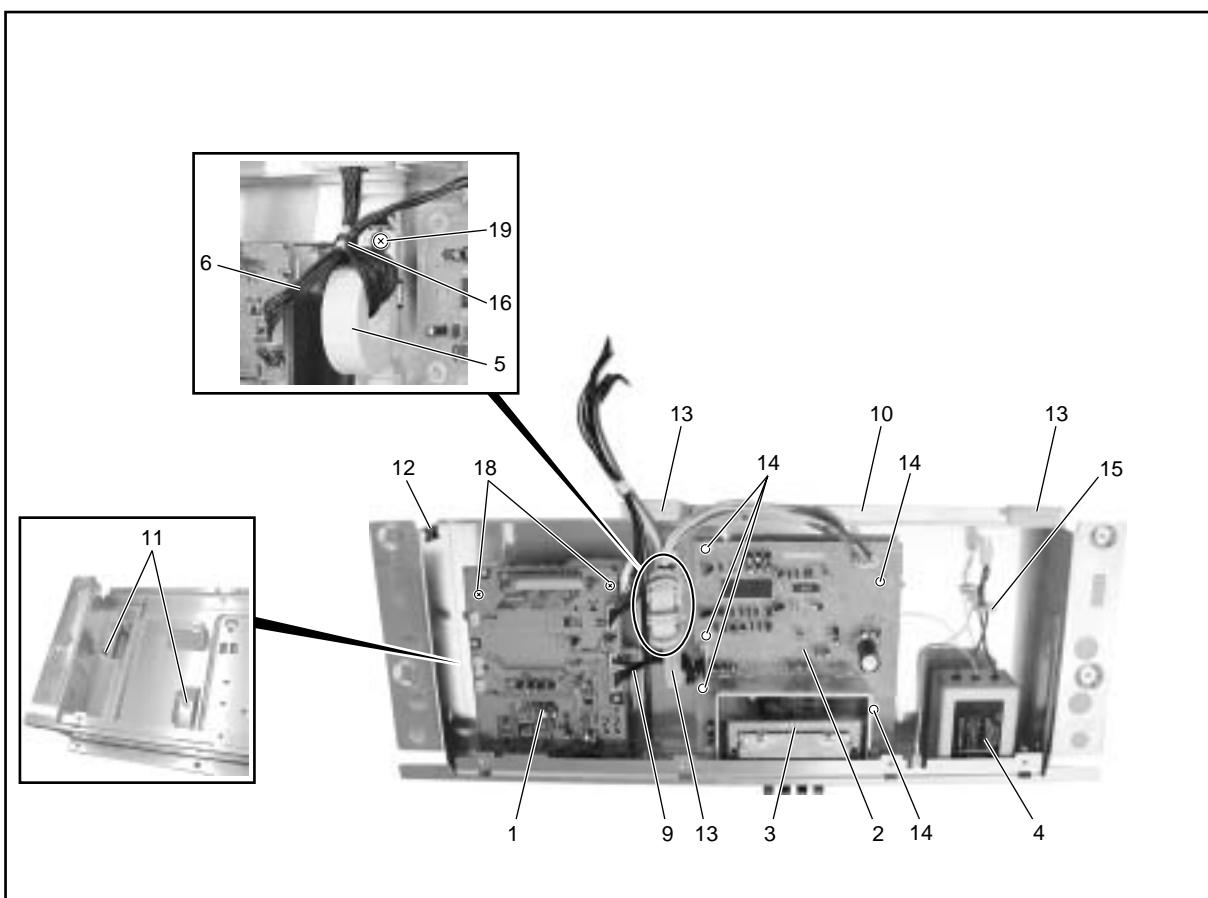

B

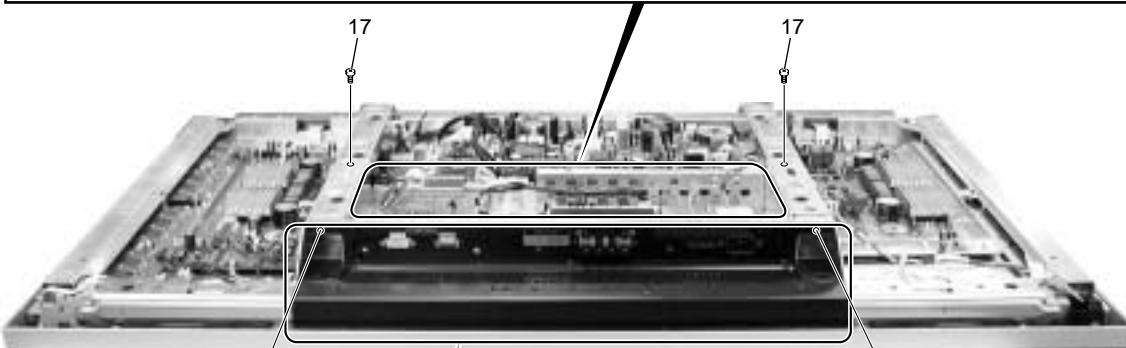

C

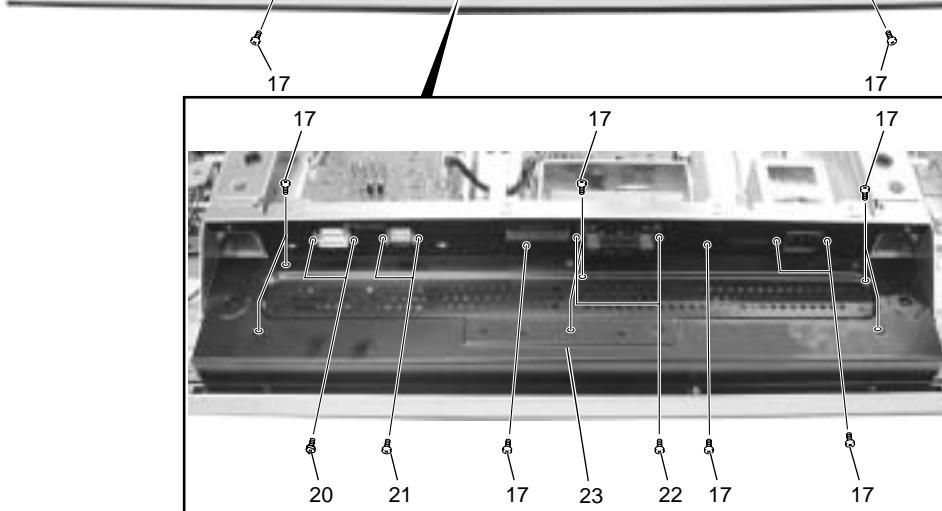

D

E

F

MULTI BASE SECTION Parts list

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	PANEL IF Assy	AWZ6786
2	HD AUDIO AMP Assy	AWZ6834
3	HD SP TERMINAL Assy	AWZ6792
4	AC Inlet	AKP1244
5	Toroidal Core	ATX1042
6	Wire C (J104)	ADX2879
7	•••••	
8	•••••	
9	13P Housing Wire (J105)	ADX2843
10	Multi Base Assy (P)	ANA1718
11	Locking Card Spacer	AEC1940
12	Edge Saddle	AEC1946
13	Clamp	AEC1884
14	PCB Spacer	AEC1941
15	Niplocker	BEC1136
16	Nyron Binder	AEC-093
17	Screw	AMZ30P060FZK
18	Screw	PMB30P060FNI
19	Screw	ABA1294
20	Hexagon Head Screw	BBA1051
21	Screw	PMZ26P060FZK
22	Screw	APZ30P080FZK
23	Under Cover Assy	ANG2589

A

B

C


D

E

F

2.6 REAR SECTION

A

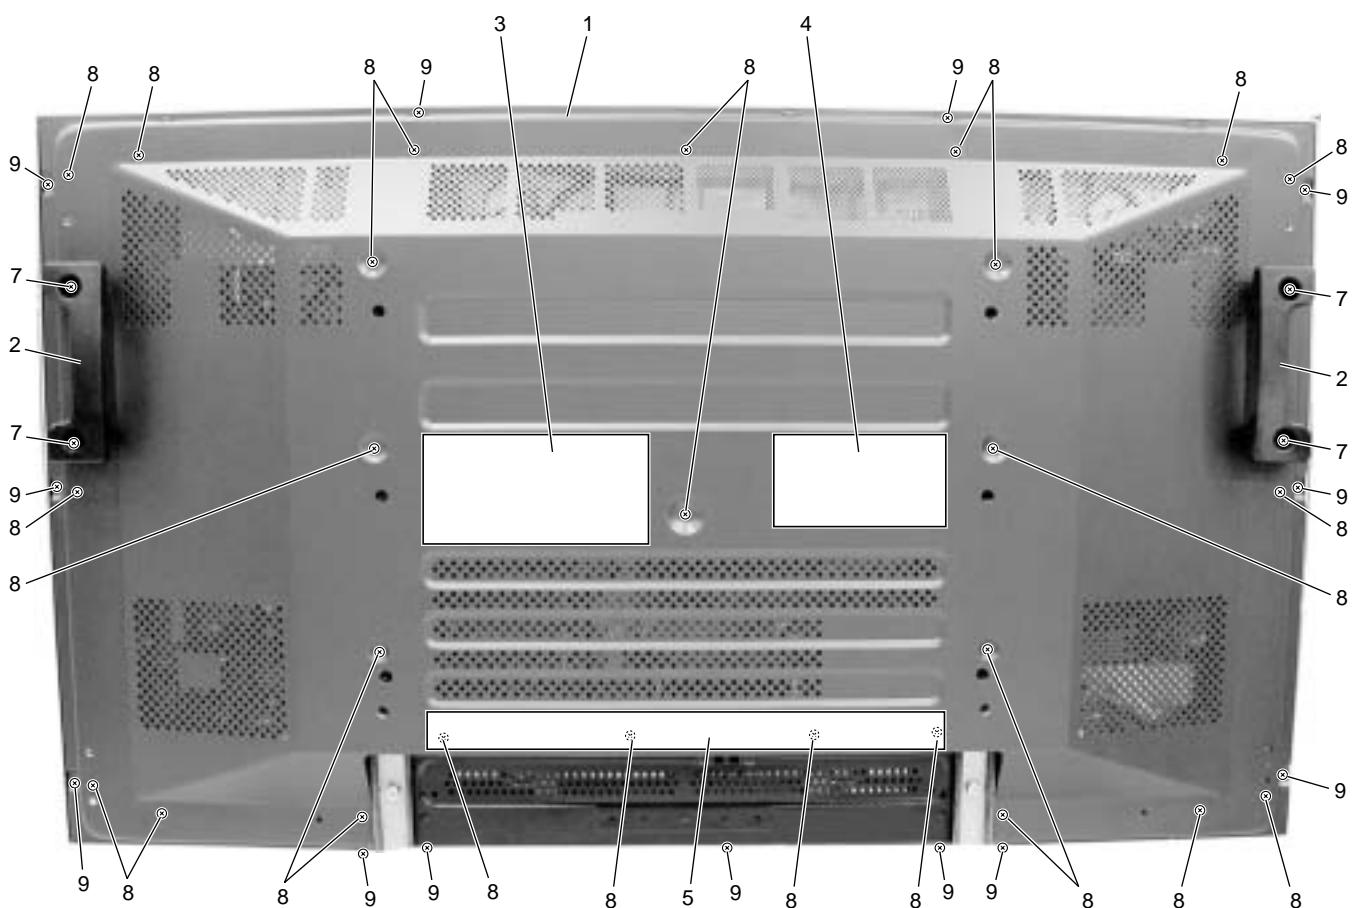

REAR SECTION Parts list

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Rear Case (43p)	ANE1612	7	Screw	PMB50P120FZK
2	Grip	AMR3380	8	Screw	AMZ30P060FZK
NSP	3 Name Label	See Contrast table (2)	9	Screw	ABZ30P100FZK
	4 Caution Label	See Contrast table (2)			
	5 Terminal Label	See Contrast table (2)			

6 ••••

(2) CONTRAST TABLE

PDP-434PU/ TUCK, PDP-434PE/ WYVI6, PDP-434PE/ WYVI6XK and PRO-434PU/ KUC are constructed the same except for the following :

Mark	No.	Symbol and Description	PDP-434PU TUCK	PDP-434PE WYVI6	PDP-434PE WYVI6XK	PRO-434PU KUC
NSP	3	Name Label	AAL2467	AAL2471	AAL2480	AAL2482
	4	Caution Label	AAX3007	AAX3007	AAX3005	AAX3007
	5	Terminal Label	AAX2997	AAX2998	AAX3006	AAX2997

B


C

D

E

F

2.7 FRONT PANEL SECTION

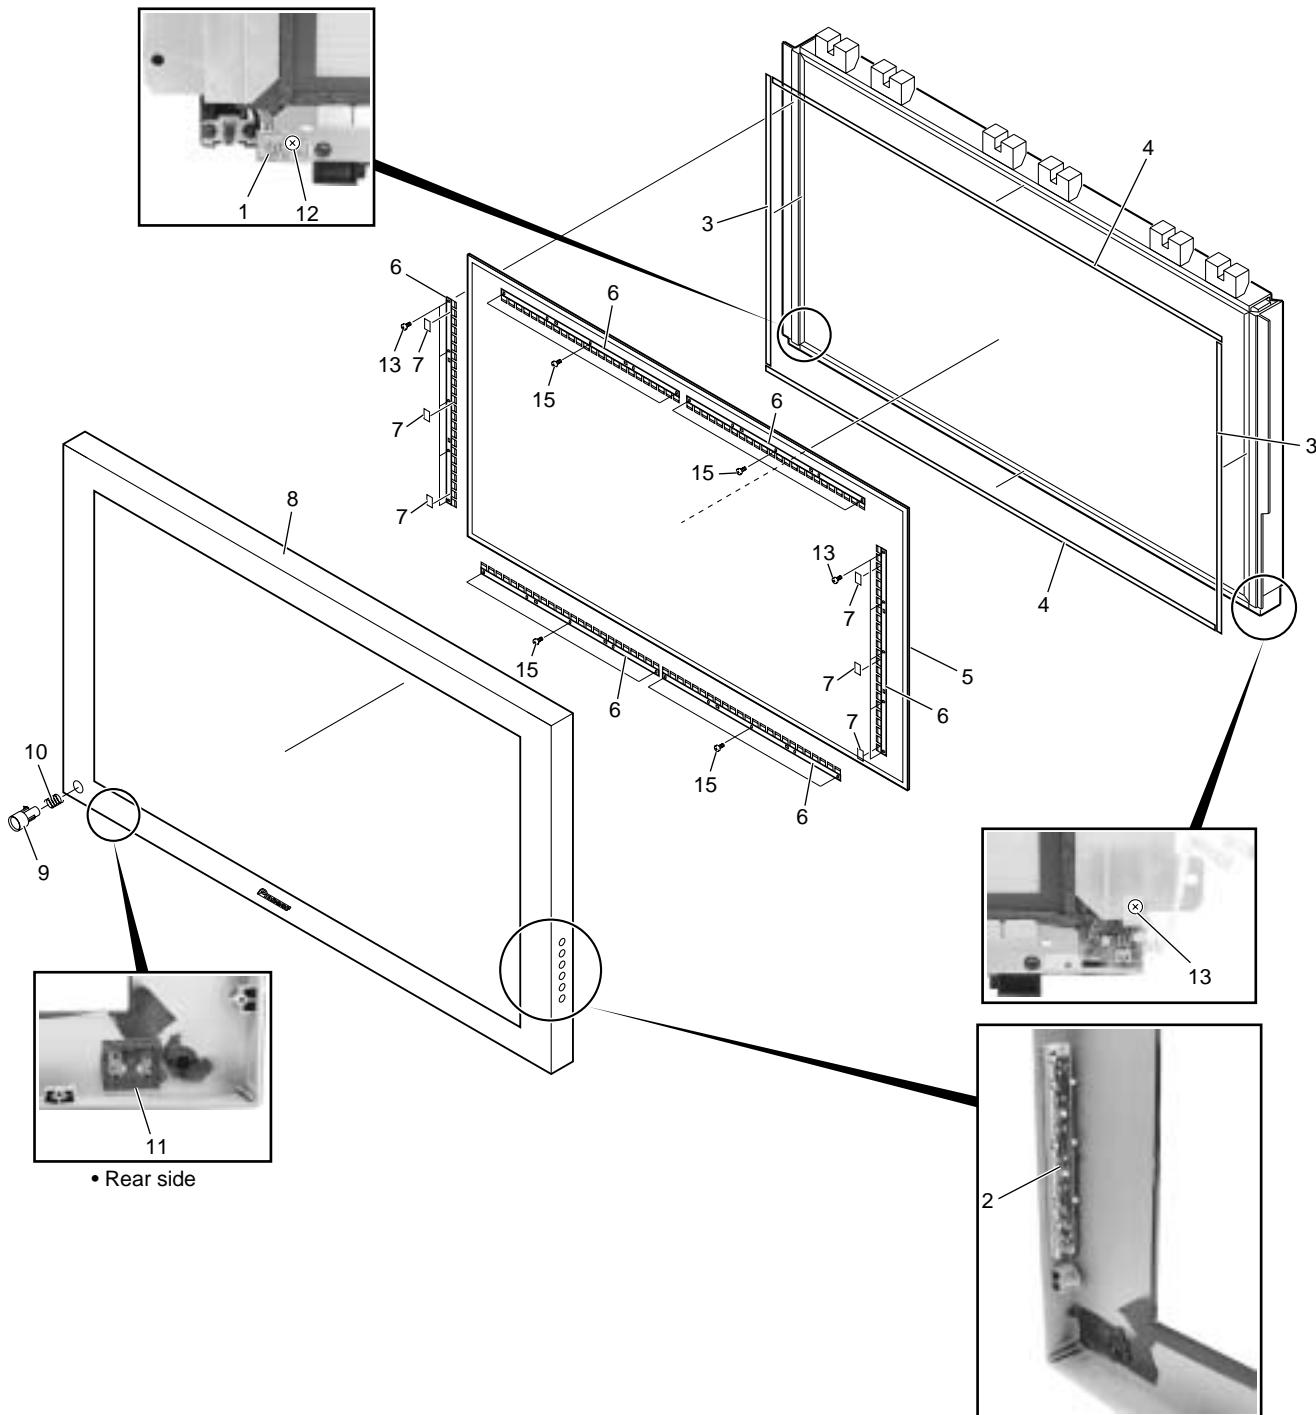

FRONT PANEL SECTION Parts list

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	PANEL LED Assy	AWZ6787	9	Power Button	See Contrast table (2)
2	PANEL KEY Assy	AWZ6788	10	Coil Spring	ABH1114
3	Panel Cushion V (43)	AED1201	11	Blind Cushion	AEB1383
4	Panel Cushion H (43)	AED1200	12	Screw	BBZ30P050FMC
5	Protect Panel Assy 43	See Contrast table (2)	13	Screw	ABZ30P060FMC
NSP	Panel Holder (43)	ANG2552	14	Serial Sheet	AAX2609
7	Cushion	AEB1393	15	Screw	APZ30P080FZK
8	Front Case Assy	See Contrast table (2)			

(2) CONTRAST TABLE

PDP-434PU/ TUCK, PDP-434PE/ WYVI6, PDP-434PE/ WYVI6XK and PRO-434PU/ KUC are constructed the same except for the following :

Mark	No.	Symbol and Description	PDP-434PU TUCK	PDP-434PE WYVI6	PDP-434PE WYVI6XK	PRO-434PU KUC
	5	Protect Panel Assy (43)	AMR3383	AMR3345	AMR3345	AMR3345
	8	Front Case Assy	AMB2779	AMB2779	AMB2779	AMB2783
	9	Power Button	AAD4123	AAD4123	AAD4123	AAD4126

2.8 PDP SERVICE Assy (AWU1079)

PDP SERVICE Assy (AWU1079) Parts list

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
NSP	1..P. Chassis (43) Assy	AWU1070		2..Front Spacer	AMR3369
NSP	2..Front Chassis H (43)	ANA1714		2..Caution Label	AAX3031
	2..Front Chassis VL (43)	ANA1762		2..Spacer	AEB1397
	2..Front Chassis VR (43)	ANA1763		2..Edging Saddle	AEC1737
	2..Sub Frame L Assy	ANG2545	NSP	2..Drive Voltage Label	ARW1097
	2..Sub Frame R Assy	ANG2548		2..Front Case (434 Service)	AMB2810 (Note)
	2..Wire Saddle	AEC1745		2..Rear Case (43P)	ANE1612 (Note)
	2..Clamp	AEC1884		Note: The front case (434 Service) and rear case (434p) attached to the Service Assy are for transportation only. Do NOT use them as parts of the unit.	
	2..PCB Support	AEC1938		2..Screw	AMZ30P060FZK
	2..PCB Spacer	AEC1941		2..Screw	AMZ30P080FMC
	2..PCB Spacer	AEC1947		2..Screw	AMZ30P080FZK
	2..Wire Clip	AEC1948		2..Screw	PMB30P060FNI
	2..Ferrite Clamp (Plastic)	AEC1972		2..Screw	VBB30P080FNI
	2..Panel Cushion H (43)	AED1200		2..Screw	ABZ30P100FZK
	2..Panel Cushion V (43)	AED1201		2..Screw	
	2..Ydrive Protect Sheet	AMR3346			

2.9 PANEL CHASSIS (43) Assy (AWU1070)


PANEL CHASSIS (43) Assy (AWU1070) Parts list


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
NSP	1..43 ADDRESS Assy	AWV2020		1..PCB Spacer	AEC1944
NSP	2..43 ADDRESS Assy	AWZ6793		1..PCB Support	AEC1958
				1..Rivet (Plastic)	AMR1066
NSP	1..43 SCAN FUKUGO Assy	AWV2023		1..FC Spacer	AMR3370
NSP	2..43 SCAN A Assy	AWZ6796		1..Adhesive	ZBA-KE3424G
NSP	2..43 SCAN B Assy	AWZ6797	NSP	1..Lotion	ZLX-AP7
NSP	2..X CONNECTOR A Assy	AWZ6798	NSP	1..Tape	ZTA-8101-12
NSP	2..X CONNECTOR B Assy	AWZ6799	NSP	1..Double Faced Tape	ZTB-5015-18
			NSP	1..Tape	ZTC-POLYCA-11
NSP	1..Address Module (IC1-IC32)	AXF1115	NSP	1..Tape	ZTC-POLYCA-20
NSP	1..Plasma Panel Assy (43") (V1)	AAV1243	NSP	1..Tape	ZTC-900UL-15
NSP	1..FPC (43XGA-X)	ADY1079	NSP	1..Silicone Rubber	ZTX-HC20-15
NSP	1..FPC (43XGA-Y)	ADY1080	NSP	1..Wiping Cloth	ZTX-MX100-13
NSP	1..Chassis Assy (43)	ANA1733	NSP	1..Film	ZTX-2102Y35-2R5
			NSP	1..Film	ZTX-2102Y45-5

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM


3.1.1 OVERALL BLOCK DIAGRAM

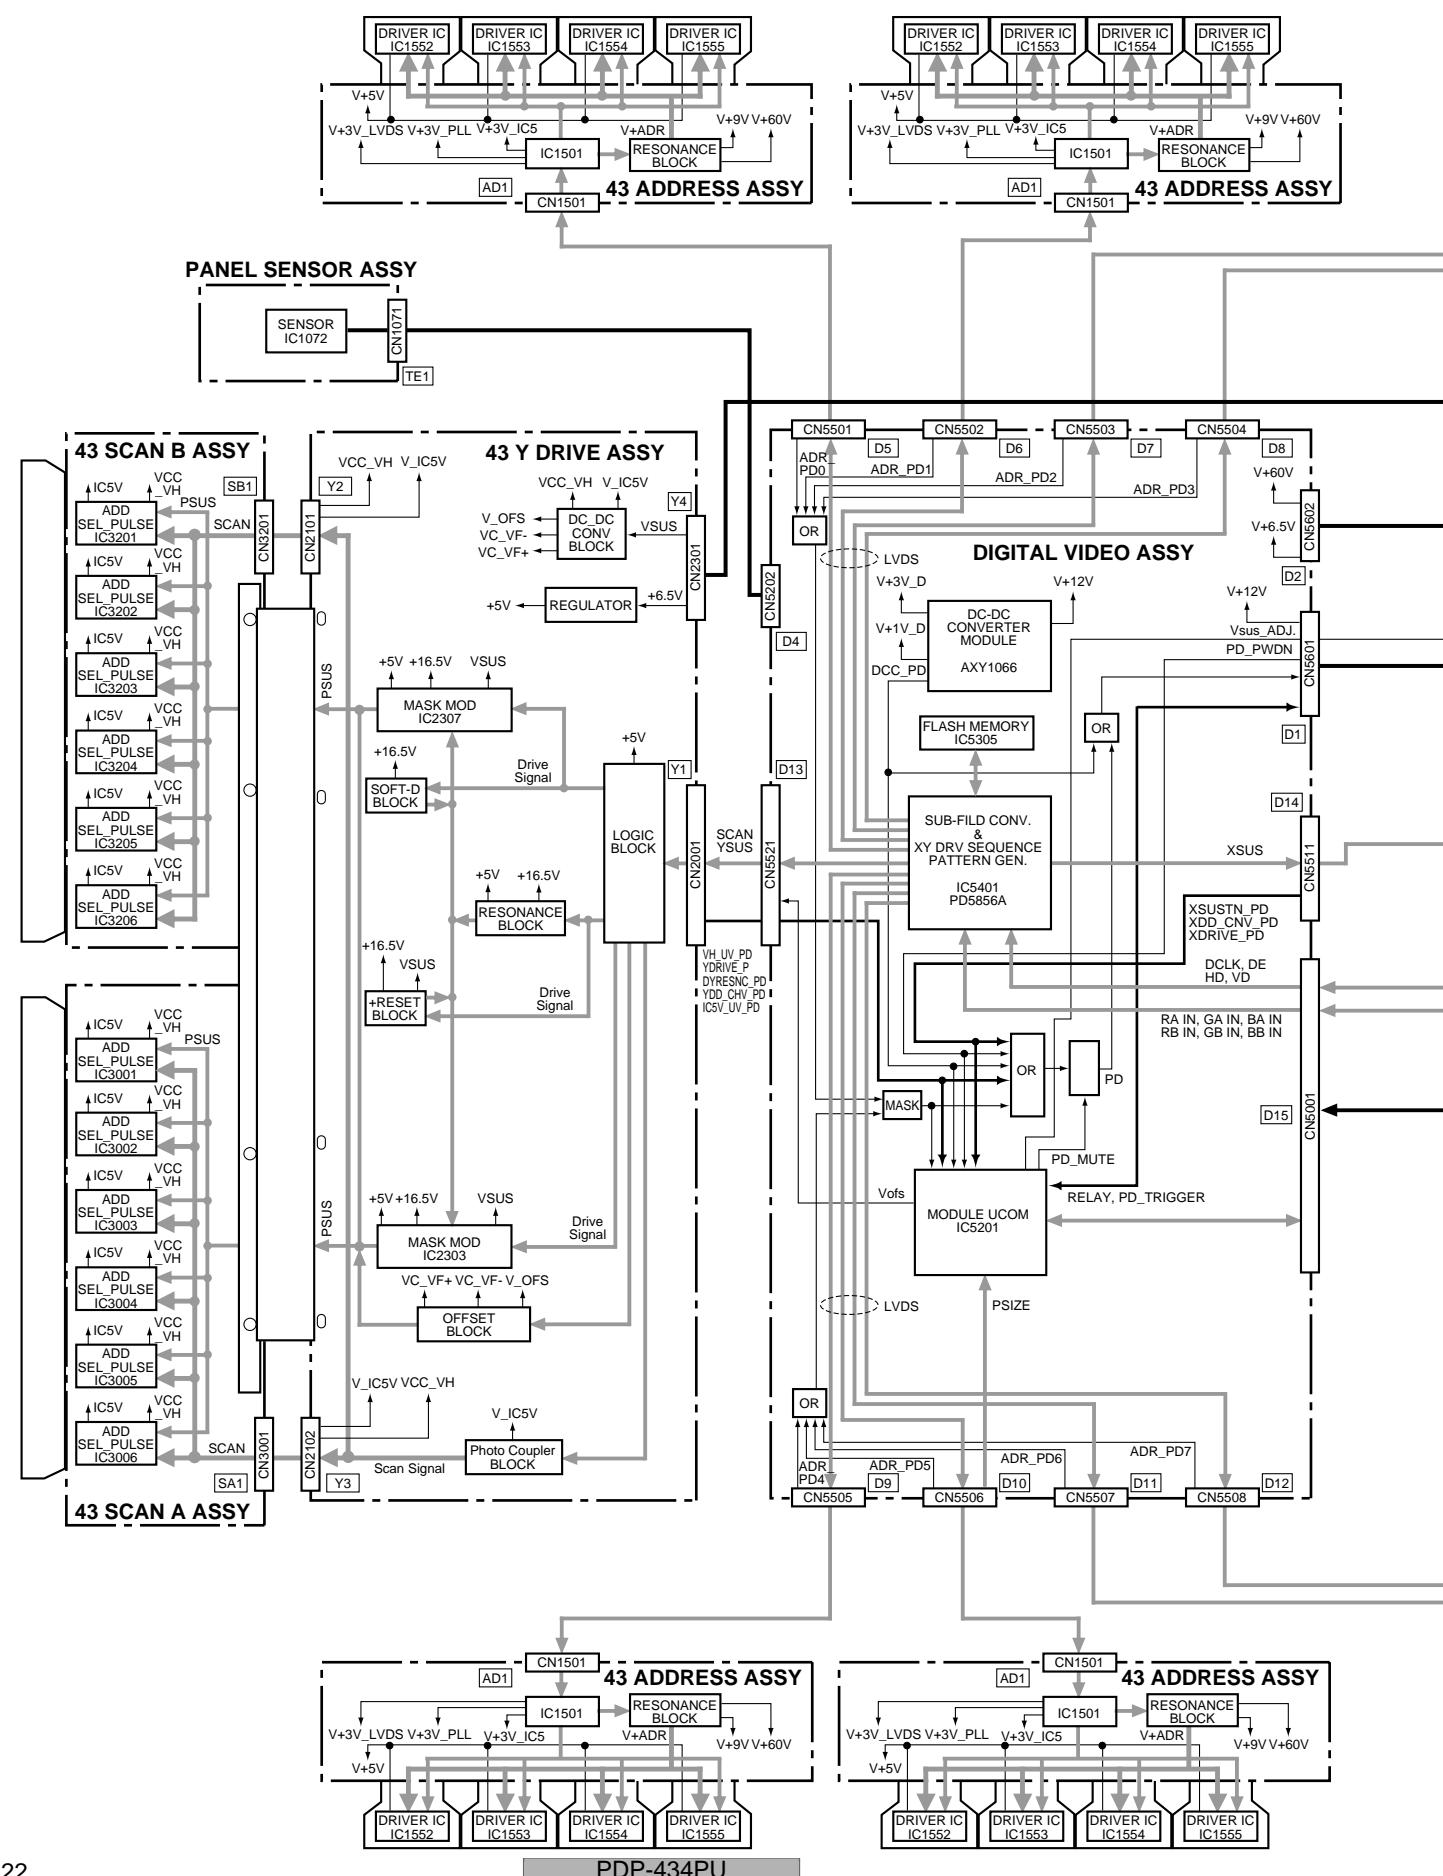

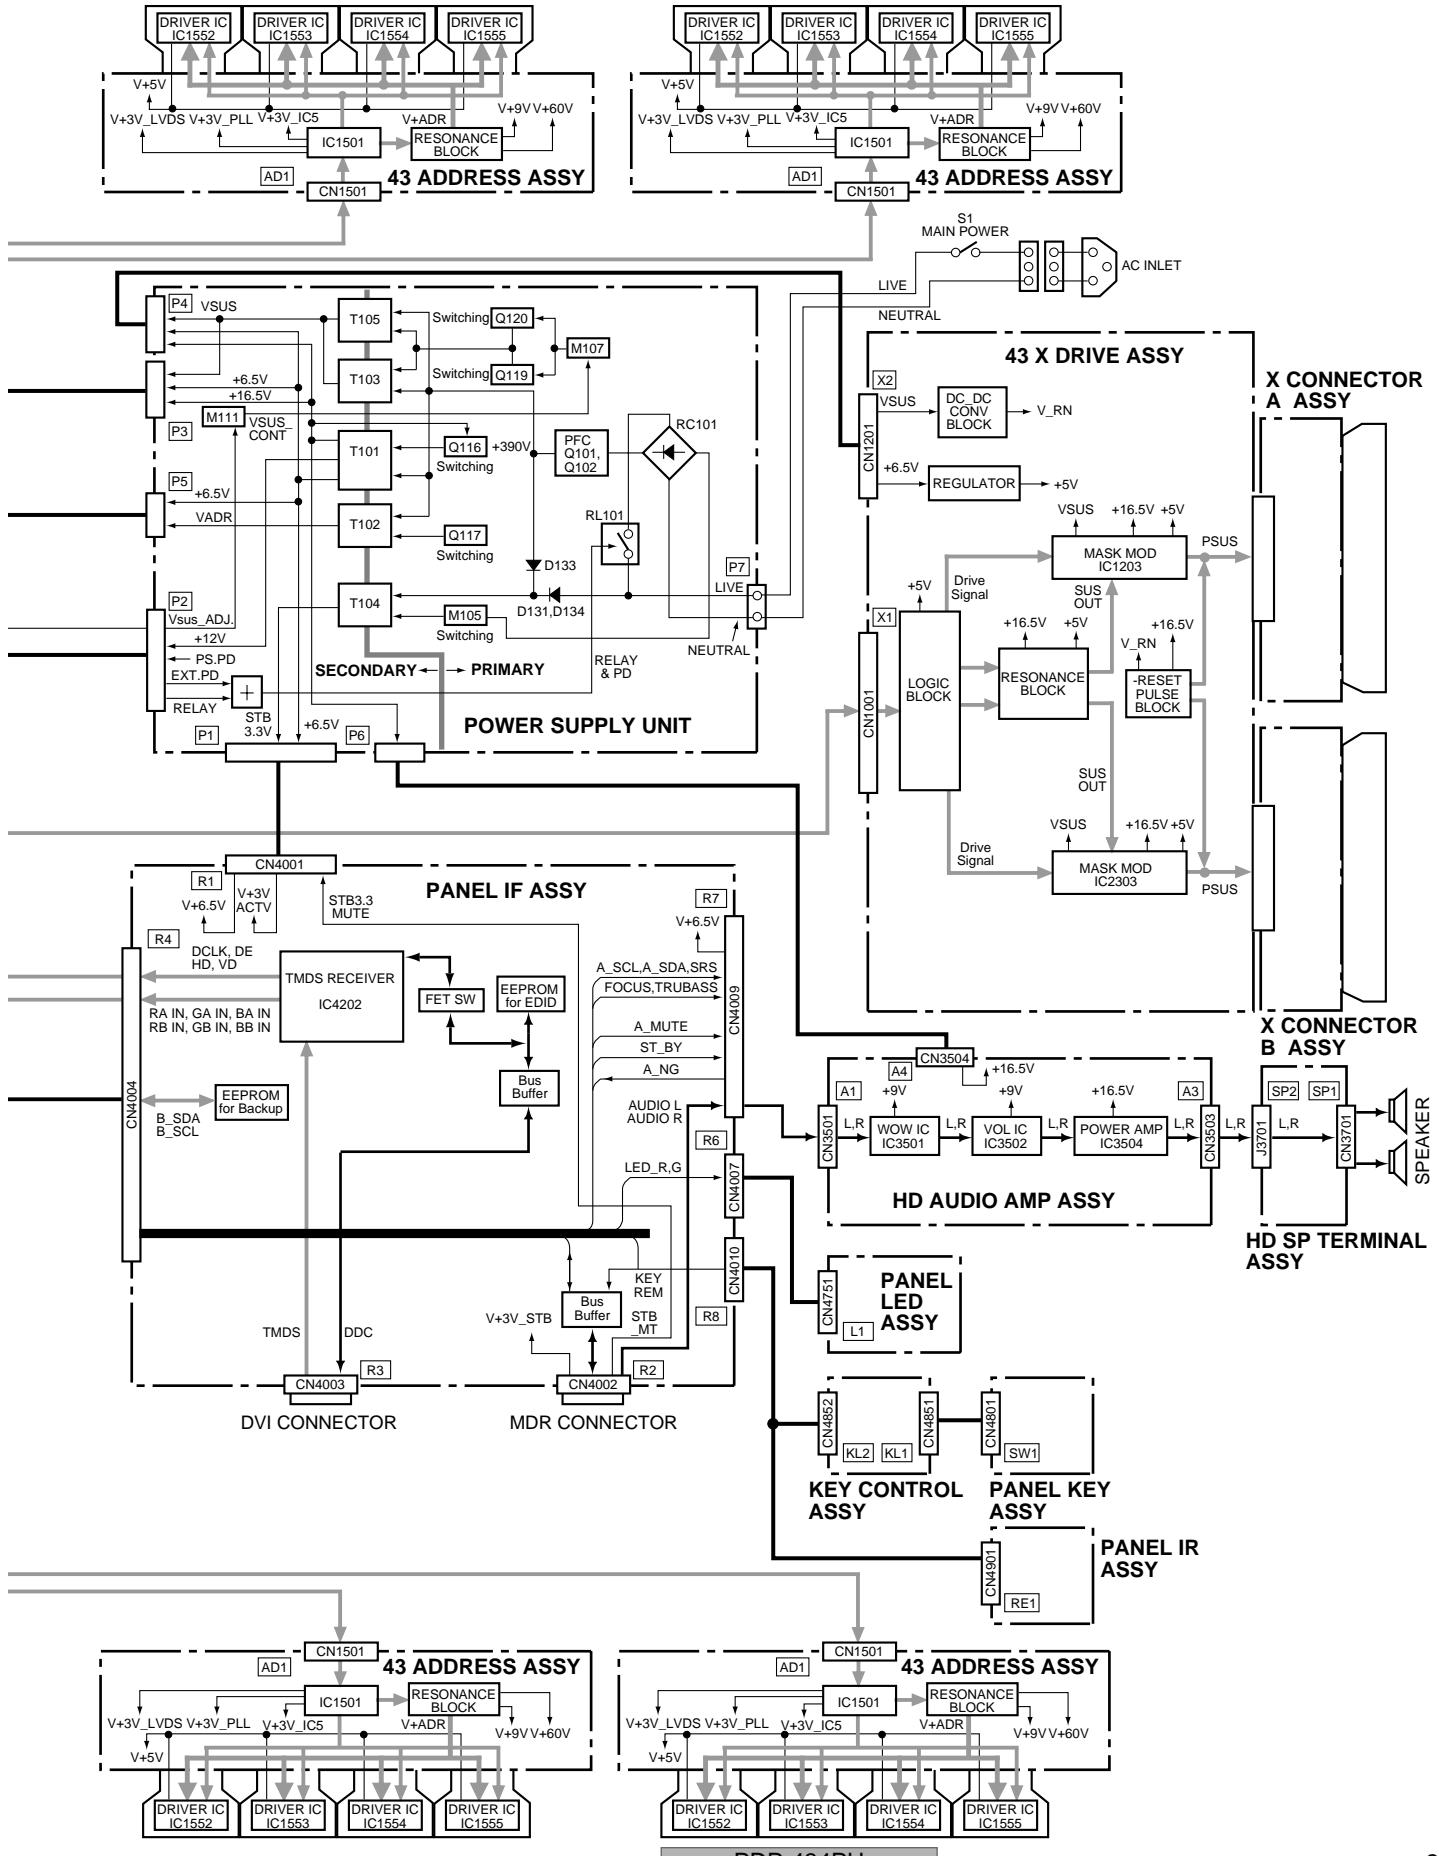


3.1.2 43 Y DRIVE ASSY

• Block Diagram

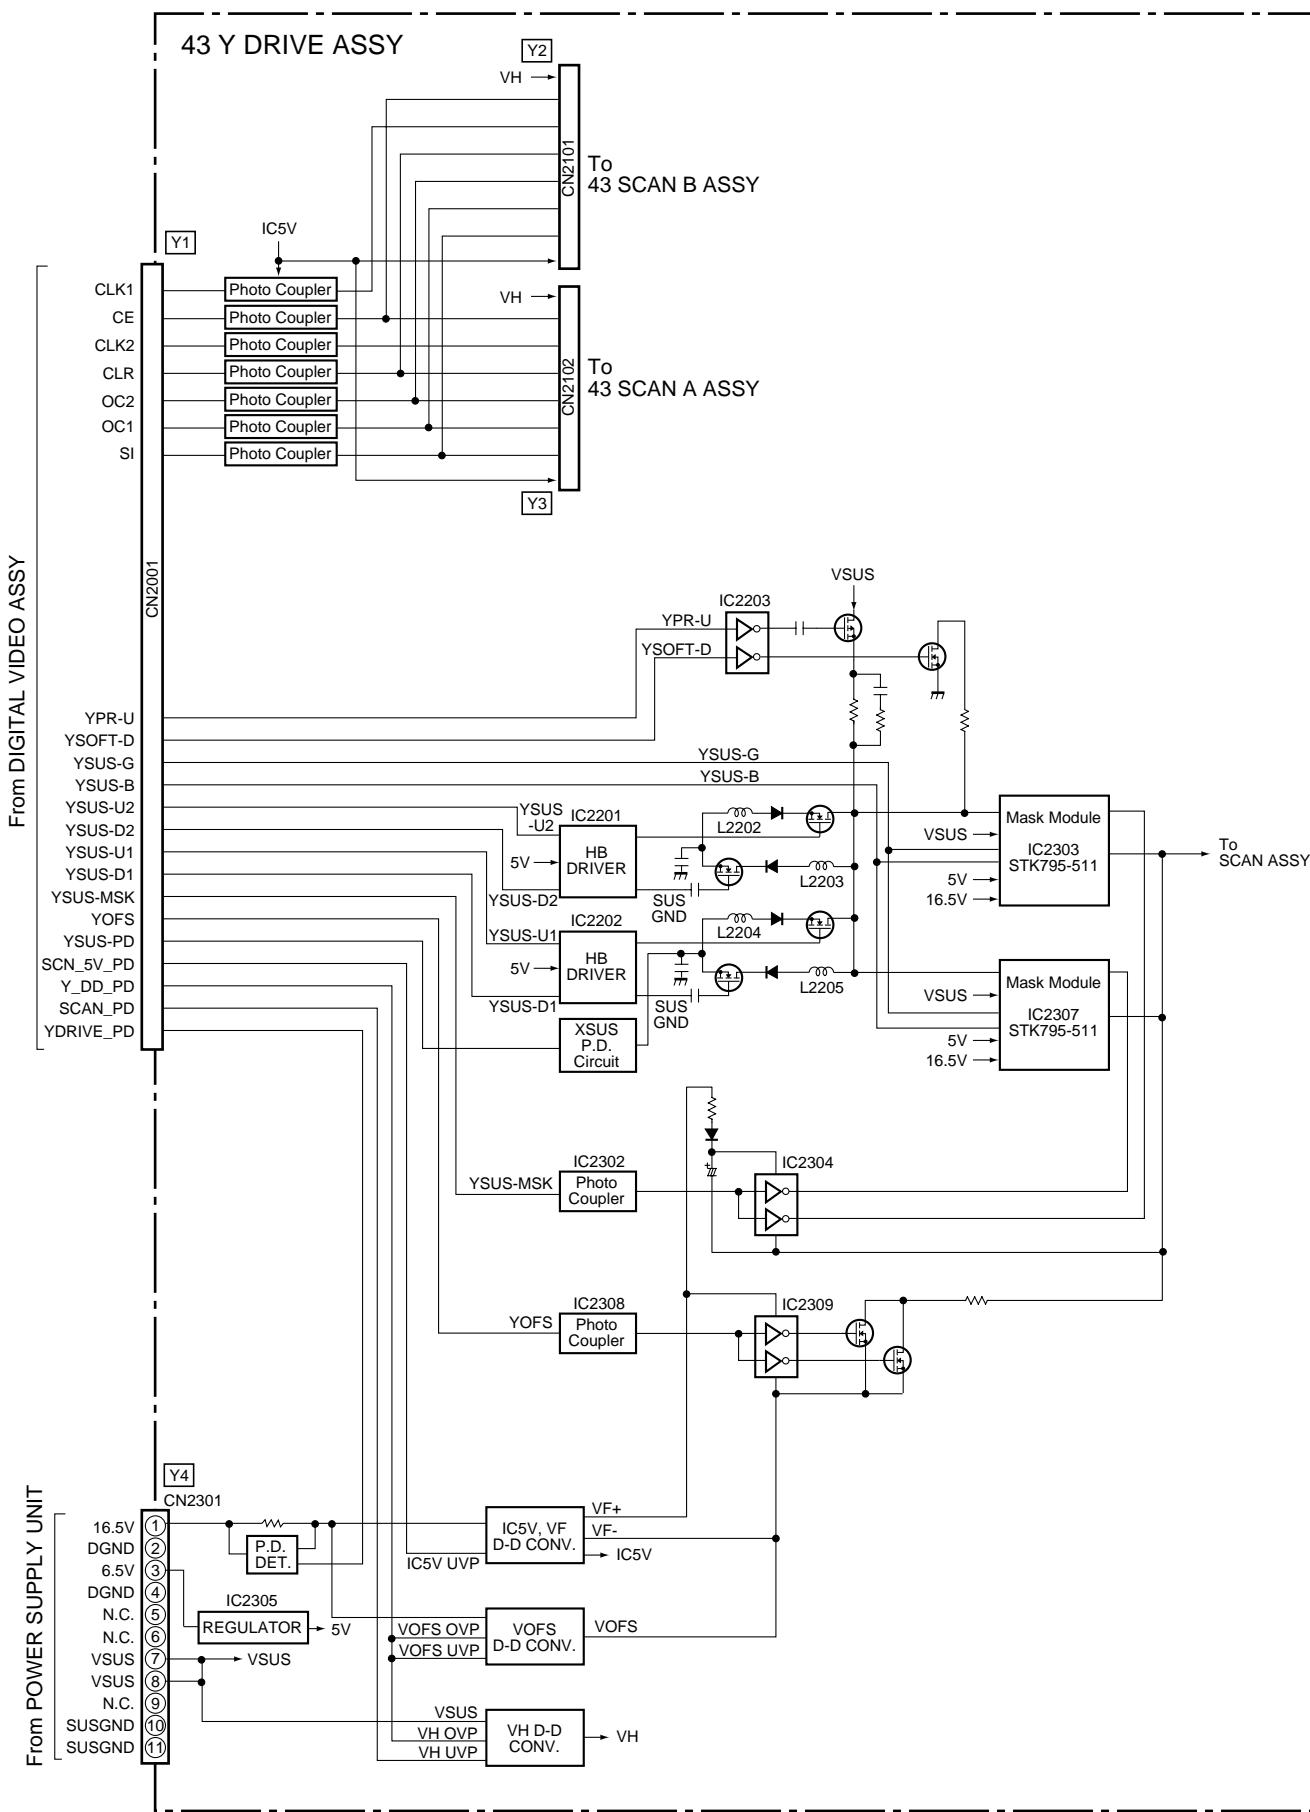


3.1.3 43 X DRIVE ASSY

- Block Diagram

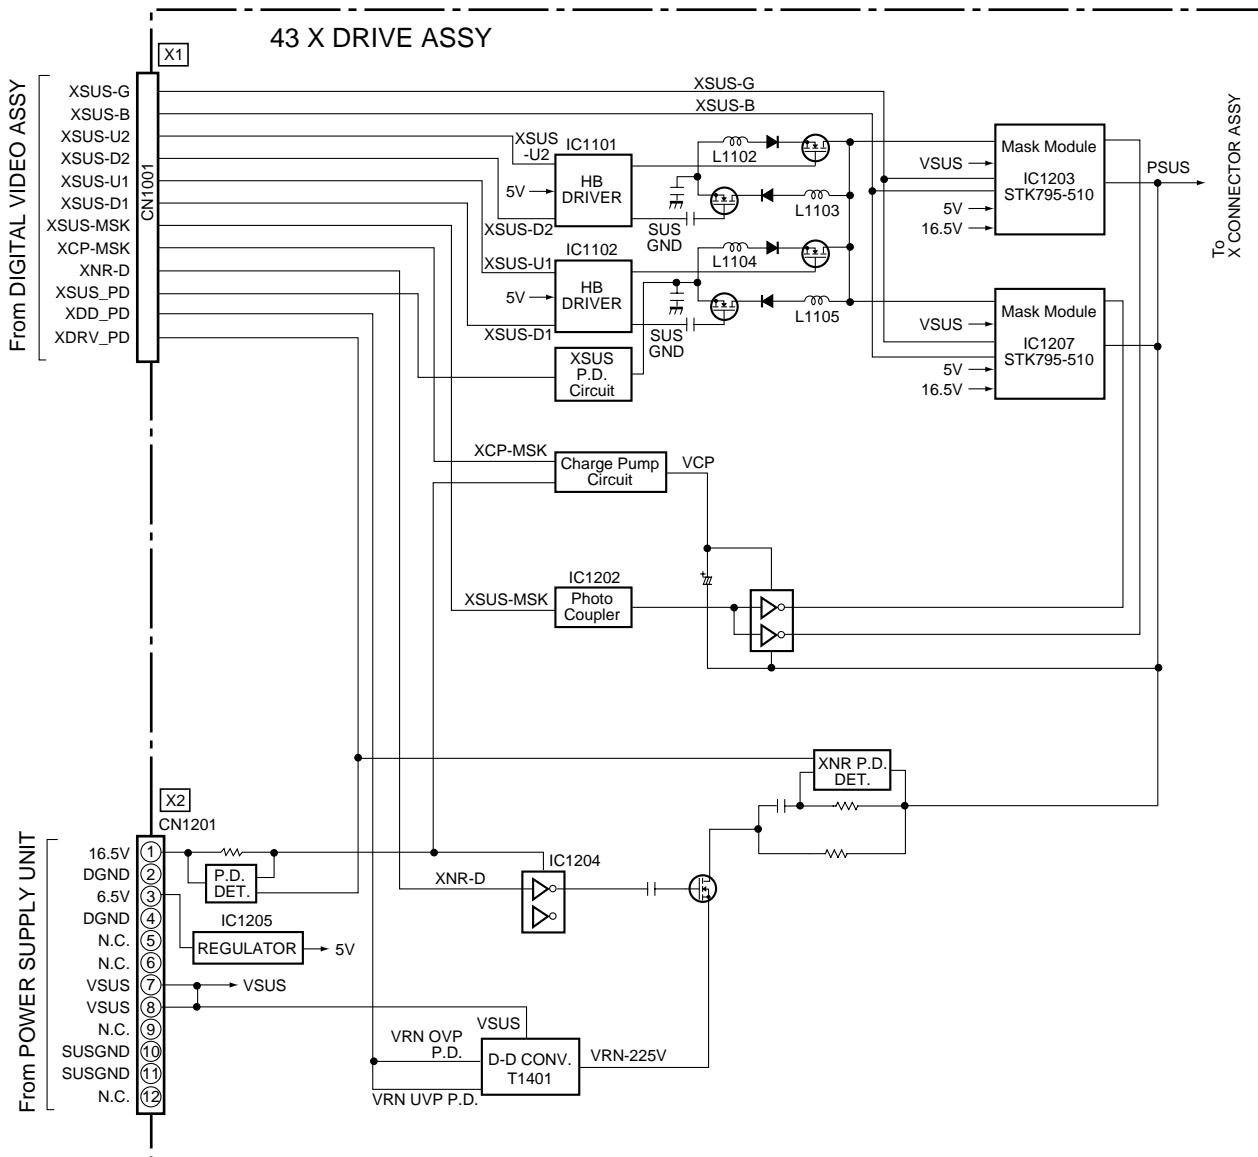

3.1.4 PANEL IF ASSY

• Block Diagram

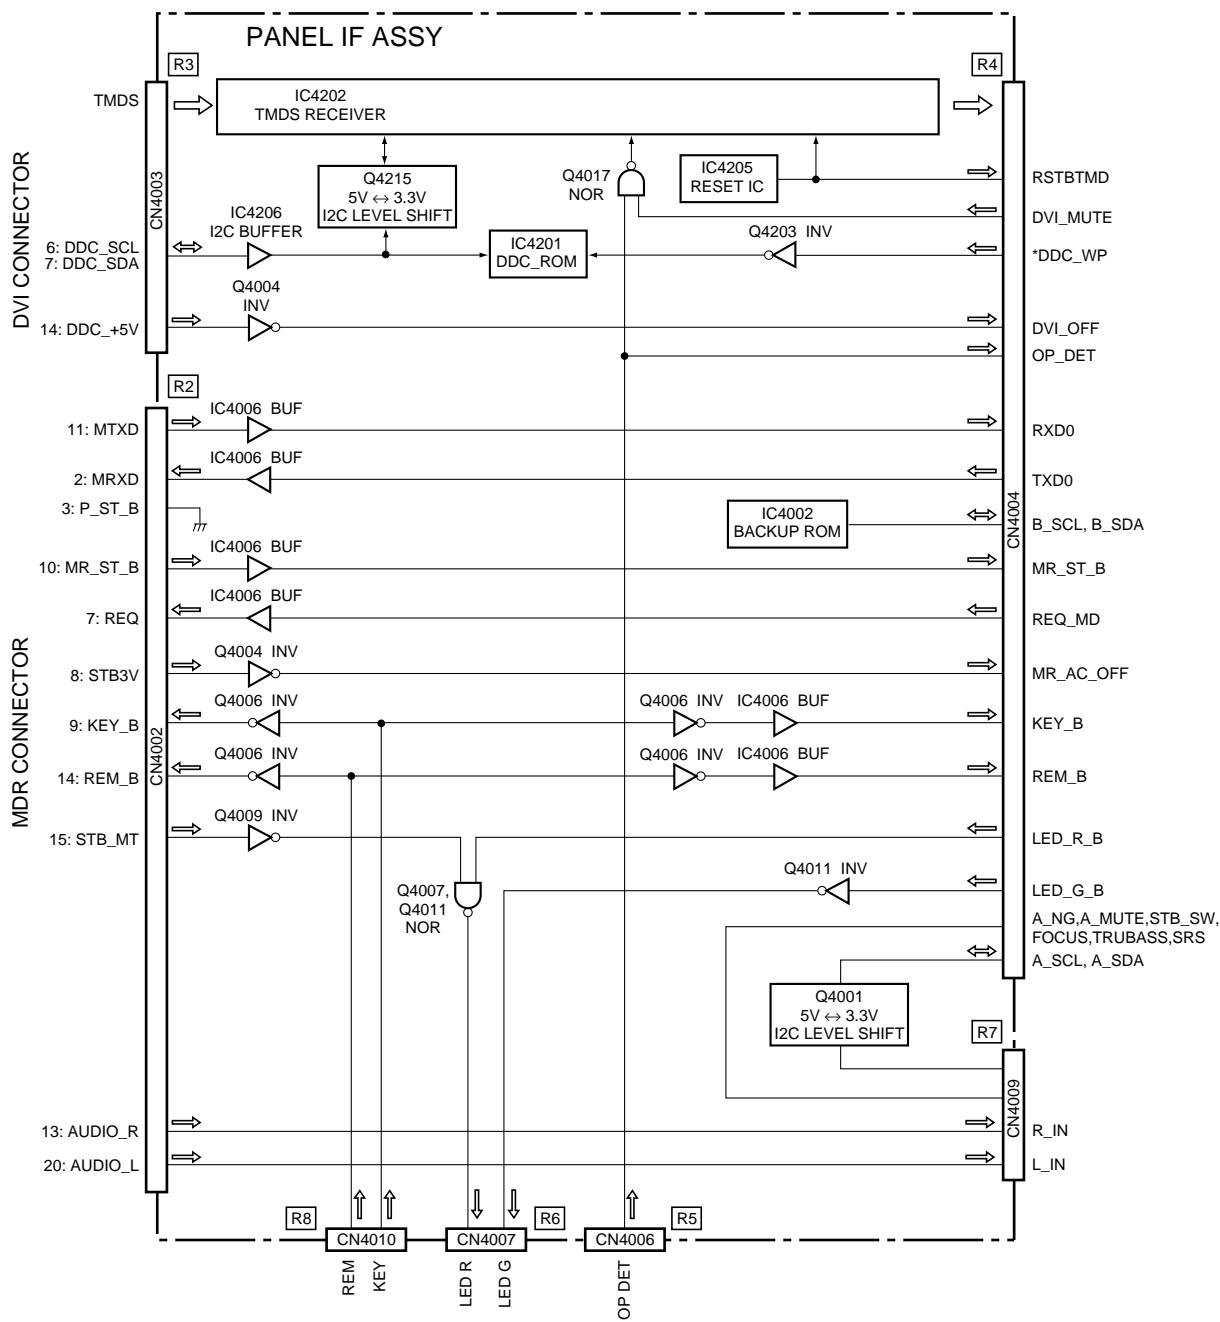

• Voltages

CN4001 (R1) <⇒ POWER SUPPLY UNIT >

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
1	6.5V	I	+6.5V power supply	+6.8VDC
2	6.5V	I	+6.5V power supply	+6.8VDC
3	Vcc_GND	–	GND	
4	Vcc_GND	–	GND	
5	STB3.3V	I	Power supply +3.3V input of module UCOM at panel side	+3.3VDC
6	STB_GND	–	GND	
7	STB3.3MUTE	O	Standby control (+3.3V mute)	+6.7VDC
8	AC_DET	I	Primary power supply (AC) state input at panel side	+3.0VDC

CN4002 (R2) <⇒ MEDIA RECEIVER >

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
1	MR_ST_B	I	Connection state detecting signal with MDR	0VDC
2	MRXD	O	UART communication transmission data with the main UCOM (external PC) at MDR side	0-3.3V amplitude square wave
3	P_ST_B	O	Connection state output for the MDR	0VDC
4	ACT3V	O	Power supply +3.3V output of module UCOM at panel side	+3.3VDC
5	AC_OFF	O	Primary power supply (AC) state output at panel side	0VDC
6	GND	–	GND	
7	REQ	O	Communication request to the main UCOM (external PC) at the MDR	0-3.3V amplitude square wave
8	STB3V	I	Standby power supply (+3.3V) input from the MDR	+3.3VDC
9	KEY_B	O	Function key code signal output at panel side	0-3.3V amplitude square wave (at key operation)
10	MR_ST_B'	I	Connection state detecting signal with the MDR	0VDC
11	MTXD	I	UART communication receive data with the main UCOM (external PC) at the MDR side	0-3.3V amplitude square wave
12	GND	–	GND	
13	AUDIO_R	I	R ch audio signal input	Audio R signal
14	REM_B	O	Remote control code signal output	0-3.3V amplitude square wave (at remocon code transmission)
15	STB_MT	I	Standby control input	0VDC
16	GND	–	GND	
17	NC	–	Not connected	–
18	FIELD	I	FIELD control signal	0VDC
19	GND	–	GND	
20	AUDIO_L	I	L ch audio signal input	Audio L signal

CN4003 (R3) <⇒ MEDIA RECEIVER >

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
1	RX2-	I	DVI signal	DVI differential signal (-)
2	RX2+	I	DVI signal	DVI differential signal (+)
3	GND	–	GND	
4	N.C	–	Not connected	–
5	N.C	–	Not connected	–
6	DDC_SCL	I	I2C signal for DDC	0-5V amplitude square wave
7	DDC_SDA	I	I2C signal for DDC	0-5V amplitude square wave
8	N.C	–	Not connected	–
9	RX1-	I	DVI signal	DVI differential signal (-)
10	RX1+	I	DVI signal	DVI differential signal (+)
11	GND	–	GND	
12	N.C	–	Not connected	–
13	N.C	–	Not connected	–
14	DDC_+5V	I	I2C power supply for DDC	+5VDC
15	GND	–	GND	
16	HPD	O	Hot plug detection	+5VDC
17	RX0-	I	DVI signal	DVI differential signal (-)
18	RX0+	I	DVI signal	DVI differential signal (+)
19	GND	–	GND	
20	N.C	–	Not connected	–
21	N.C	–	Not connected	–

• **Voltages**

CN4003 (R3) <⇒ MEDIA RECEIVER >

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
22	GND	-	GND	
23	RXC+	I	DVI signal	DVI differential signal (-)
24	RXC-	I	DVI signal	DVI differential signal (+)

CN4006 (R5) <⇒ TRAP SW >

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
1	OP_DET	I	Rear panel open detecting signal	0VDC
2	N.C	-	Not connected	-
3	GND	-	GND	

CN4007 (R6) <⇒ PANEL LED ASSY >

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
1	LED_G	O	LED control (green)	+2.1VDC
2	LED_R	O	LED control (red)	0VDC
3	AC_OFF	O	Primary power supply (AC) state output at the panel side	0VDC

CN4009 (R7) <⇒ HD AUDIO AMP ASSY >

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
1	A_NG	I	Abnormal detecting signal of the audio block	+3.3V DC
2	V+6.5	O	+6.5V power supply	+6.8V DC
3	GNDA	-	GND	
4	L_IN	O	L ch audio signal	Audio L signal
5	GNDA	-	GND	
6	R_IN	O	R ch audio signal	Audio R signal
7	ST_BY	O	Standby signal of the audio block	+3.3V DC
8	A_MUTE	O	Audio mute signal input	0V DC
9	SCL	O	I2C control signal for audio	0-3.3V amplitude square wave
10	SDA	O	I2C control signal for audio	0-3.3V amplitude square wave
11	FOCUS	O	Focus function control signal	+3.3V DC
12	SRS	O	SRS function control signal	+3.3V DC
13	TRUBASS	O	TRUBASS function control signal	+3.3V DC

CN4010 (R8) <⇒ PANEL IR ASSY, KEY CONTROL ASSY >

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
1	STB3V	O	+3.3V power supply	+3.3V DC
2	STBGND	-	GND	
3	REM	I	Remote control code signal input	0-3.3V amplitude square wave (at remocon code transmission)
4	STB+3V	O	+3.3V power supply	+3.3V DC
5	KEY	I	Function key code signal input at the panel side	0-3.3V amplitude square wave (at key operation)
6	STBGND	-	GND	

CN4801 (SW1) <⇒ KEY CONTROL ASSY >

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
1	STBGND	-	GND	0V DC
2	G1	O	Key scan signal	0V DC
3	G0	O	Key scan signal	0V DC
4	D5	I	Key scan signal	+3.3V DC
5	D6	I	Key scan signal	+3.3V DC
6	D7	I	Key scan signal	+3.3V DC

• Voltages

CN4004 (R4) <↔ DIGITAL VIDEO ASSY > (1/2)

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
1	GND	-	GND	
2	GND	-	GND	
3			Not connected	-
4			Not connected	-
5	BA0	O	8bit video signal output (BLUE even number)	0-3.3V amplitude square wave
6	BA1	O	8bit video signal output (BLUE even number)	0-3.3V amplitude square wave
7	BA2	O	8bit video signal output (BLUE even number)	0-3.3V amplitude square wave
8	BA3	O	8bit video signal output (BLUE even number)	0-3.3V amplitude square wave
9	BA4	O	8bit video signal output (BLUE even number)	0-3.3V amplitude square wave
10	BA5	O	8bit video signal output (BLUE even number)	0-3.3V amplitude square wave
11	BA6	O	8bit video signal output (BLUE even number)	0-3.3V amplitude square wave
12	BA7	O	8bit video signal output (BLUE even number)	0-3.3V amplitude square wave
13	GND	-	GND	
14	GND	-	GND	
15			Not connected	-
16			Not connected	-
17	GA0	O	8bit video signal output (GREEN even number)	0-3.3V amplitude square wave
18	GA1	O	8bit video signal output (GREEN even number)	0-3.3V amplitude square wave
19	GA2	O	8bit video signal output (GREEN even number)	0-3.3V amplitude square wave
20	GA3	O	8bit video signal output (GREEN even number)	0-3.3V amplitude square wave
21	GA4	O	8bit video signal output (GREEN even number)	0-3.3V amplitude square wave
22	GA5	O	8bit video signal output (GREEN even number)	0-3.3V amplitude square wave
23	GA6	O	8bit video signal output (GREEN even number)	0-3.3V amplitude square wave
24	GA7	O	8bit video signal output (GREEN even number)	0-3.3V amplitude square wave
25	GND	-	GND	
26	GND	-	GND	
27			Not connected	-
28			Not connected	-
29	RA0	O	8bit video signal output (RED even number)	0-3.3V amplitude square wave
30	RA1	O	8bit video signal output (RED even number)	0-3.3V amplitude square wave
31	RA2	O	8bit video signal output (RED even number)	0-3.3V amplitude square wave
32	RA3	O	8bit video signal output (RED even number)	0-3.3V amplitude square wave
33	RA4	O	8bit video signal output (RED even number)	0-3.3V amplitude square wave
34	RA5	O	8bit video signal output (RED even number)	0-3.3V amplitude square wave
35	RA6	O	8bit video signal output (RED even number)	0-3.3V amplitude square wave
36	RA7	O	8bit video signal output (RED even number)	0-3.3V amplitude square wave
37	GND\	-	GND	
38	DCLK	O	Synchronous signal output (clock)	0-3.3V amplitude square wave (42.5MHz)
39	GND	-	GND	
40	DEI	O	Synchronous signal output (data enable)	0-3.3V amplitude square wave (positive polarity)
41	HDI	O	Synchronous signal output (Horizontal sync.)	0-3.3V amplitude square wave (negative polarity)
42	VDI	O	Synchronous signal output (Vertical sync.)	0-3.3V amplitude square wave (negative polarity)
43	FIELD	O	FIELD control signal	0V DC
44	APL_DT		Not connected	-
45			Not connected	-
46			Not connected	-
47	BB0	O	8bit video signal output (BLUE odd number)	0-3.3V amplitude square wave
48	BB1	O	8bit video signal output (BLUE odd number)	0-3.3V amplitude square wave
49	BB2	O	8bit video signal output (BLUE odd number)	0-3.3V amplitude square wave
50	BB3	O	8bit video signal output (BLUE odd number)	0-3.3V amplitude square wave
51	BB4	O	8bit video signal output (BLUE odd number)	0-3.3V amplitude square wave
52	BB5	O	8bit video signal output (BLUE odd number)	0-3.3V amplitude square wave
53	BB6	O	8bit video signal output (BLUE odd number)	0-3.3V amplitude square wave
54	BB7	O	8bit video signal output (BLUE odd number)	0-3.3V amplitude square wave
55	GND	-	GND	
56	GND	-	GND	
57			Not connected	-
58			Not connected	-


• Voltages

CN4004 (R4) <↔ DIGITAL VIDEO ASSY > (2/2)

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input	
59	GB0	O	8bit video signal output (GREEN odd number)	0-3.3V amplitude square wave	
60	GB1	O	8bit video signal output (GREEN odd number)	0-3.3V amplitude square wave	
61	GB2	O	8bit video signal output (GREEN odd number)	0-3.3V amplitude square wave	
62	GB3	O	8bit video signal output (GREEN odd number)	0-3.3V amplitude square wave	
63	GB4	O	8bit video signal output (GREEN odd number)	0-3.3V amplitude square wave	
64	GB5	O	8bit video signal output (GREEN odd number)	0-3.3V amplitude square wave	
65	GB6	O	8bit video signal output (GREEN odd number)	0-3.3V amplitude square wave	
66	GB7	O	8bit video signal output (GREEN odd number)	0-3.3V amplitude square wave	
B	67	GND	- GND		
68	GND	-	GND		
69			Not connected	-	
70			Not connected	-	
C	71	RB0	O 8bit video signal output (RED odd number)	0-3.3V amplitude square wave	
72	RB1	O	8bit video signal output (RED odd number)	0-3.3V amplitude square wave	
73	RB2	O	8bit video signal output (RED odd number)	0-3.3V amplitude square wave	
74	RB3	O	8bit video signal output (RED odd number)	0-3.3V amplitude square wave	
75	RB4	O	8bit video signal output (RED odd number)	0-3.3V amplitude square wave	
76	RB5	O	8bit video signal output (RED odd number)	0-3.3V amplitude square wave	
77	RB6	O	8bit video signal output (RED odd number)	0-3.3V amplitude square wave	
78	RB7	O	8bit video signal output (RED odd number)	0-3.3V amplitude square wave	
D	79	GND	- GND		
80	MASK		Not connected	-	
81	MODE		Not connected	-	
82	MODEL		Not connected	-	
83	DITHER		Not connected	-	
84	V+3VACTV	O	Power supply +3.3V output of module UCOM at panel side	+3.3VDC	
85	B_SDA	I	E2PROM control signal for backup	0-3.3V amplitude square wave	
86	RXD0	O	UART communication receive data with the main UCOM (external PC) at MDR side	0-3.3V amplitude square wave	
87	REM_B	O	Remote control code signal output	0-3.3V amplitude square wave (at remocon code transmission)	
88	TXD0	I	UART communication transmission data with the main UCOM (external PC) at MDR side	0-3.3V amplitude square wave	
89	KEY_B	O	Function key code signal output at panel side	0-3.3V amplitude square wave (at key operation)	
90	REQ_MD	I	Communication request to the main UCOM (external PC) at MDR side	0-3.3V amplitude square wave	
91	LED_R_B	I	LED control (red)	+3.3VDC	
92	MR_AC_OFF	O	AC state output at MR side	0VDC	
93	LED_G_B	I	LED control (green)	0VDC	
94	POWER		Not connected	-	
E	95	DVI_MUTE	I	DVI mute signal input	0VDC
96	MR_ST_B	O	Connection state detecting signal with MDR	0VDC	
97	A_MUTE	I	Audio mute signal input	0VDC	
98	OP_DET	O	Rear case open detecting signal	0VDC	
99	A_NG	O	Abnormal detecting signal of audio block	+3.3VDC	
100	PNL_MUTE		Not connected	-	
F	101	A_SCL	I	I2C control signal for audio	0-3.3V amplitude square wave
102	STB_SW	I	Standby signal of audio block	+3.3VDC	
103	A_SDA	I	I2C control signal for audio	0-3.3V amplitude square wave	
104	DDC_WP	I	EDID E2PROM writing inhibit signal	0VDC	
105	TRUBASS	I	TRUBASS function control signal	+3.3VDC	
106	B_SCL	I	E2PROM control signal for backup	0-3.3V amplitude square wave	
107	FOCUS	I	FOCUS function control signal	+3.3VDC	
108	DVI_OFF	O	Connection detecting signal of DVI connector	0VDC	
109	SRS	I	SRS function control signal	+3.3VDC	
110	RSTBTMD	O	TMDS IC reset signal	+3.3VDC	
111	MAX_PLS1		Not connected	-	
112	L_SYNC	O	TMDS IC synchronous detecting signal	+3.3VDC	
113	MAX_PLS2		Not connected	-	
114	GND	-			

3.1.5 DIGITAL VIDEO ASSY

- Block Diagram

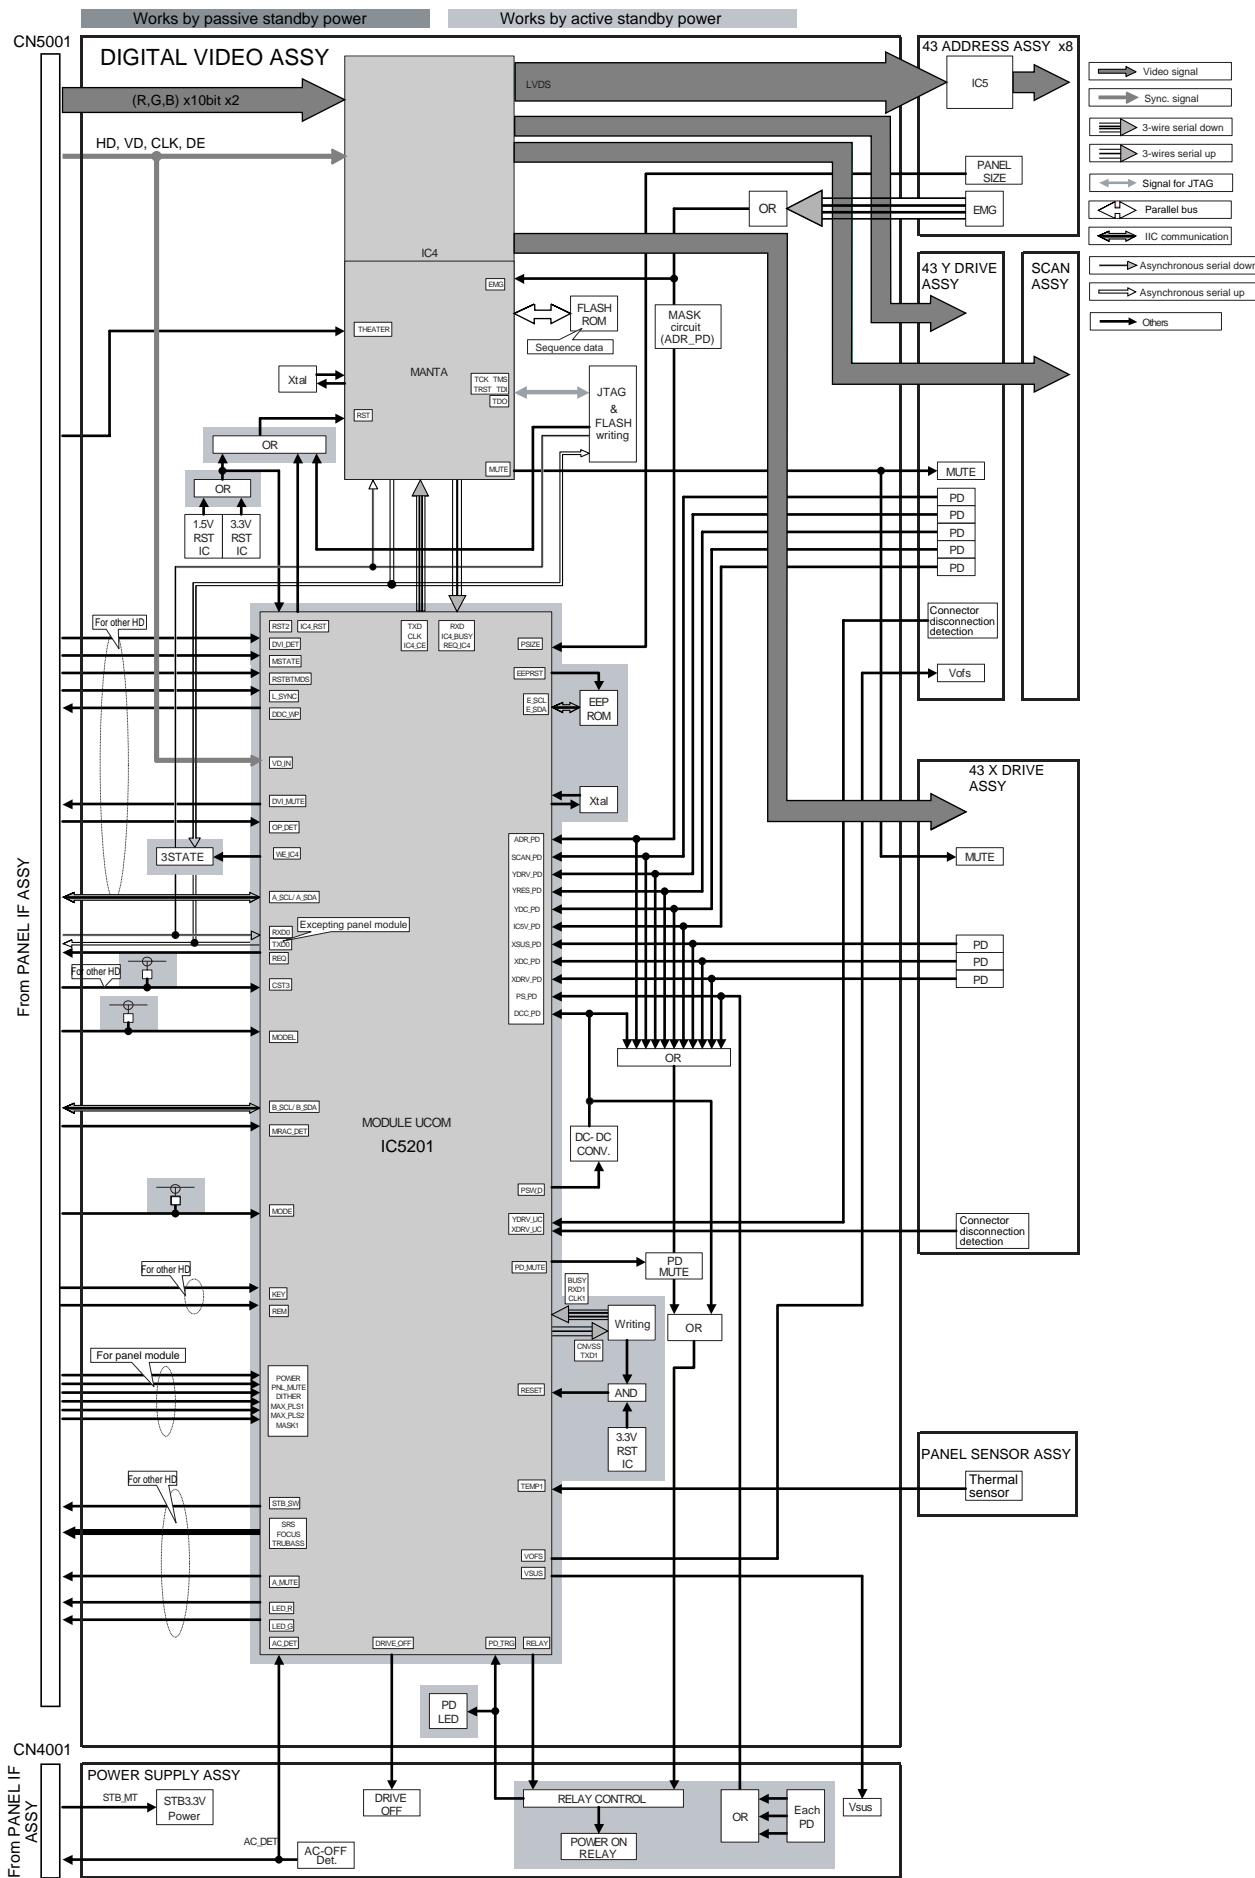

A • **Voltages**


CN5601 (D1)

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
1	+12V	I	+12V power input	+12VDC
2	+12V	I	+12V power input	+12VDC
3	GND_D	-	GND	
4	GND_D	-	GND	
5	PD	O	Power down signal	0VDC
6	VSUS_ADJ	O	VSUS adjustment signal	
7	PS_PD	I	Power-down detecting signal of POWER SUPPLY block	0VDC
8	RELAY	O	Relay control signal	+3.3VDC
9	DRF	O	Drive control signal	0VDC
10	AC_DET	I	Primary side power (AC) state output at panel side	+3.0VDC
11	PD_TRIGGER	I	Power down trigger	+3.3VDC

CN5602 (D2)

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
1	VADR	I	Address drive power (+61V) input	+61VDC
2	VADR	I	Address drive power (+61V) input	+61VDC
3	N.C.		Not connected	
4	GND_ADR	-	GND	
5	GND_ADR	-	GND	
6	+6.5V	I	+6.5V power input	+6.8VDC
7	GND_D	-	GND	

3.1.6 HD AUDIO AMP ASSY

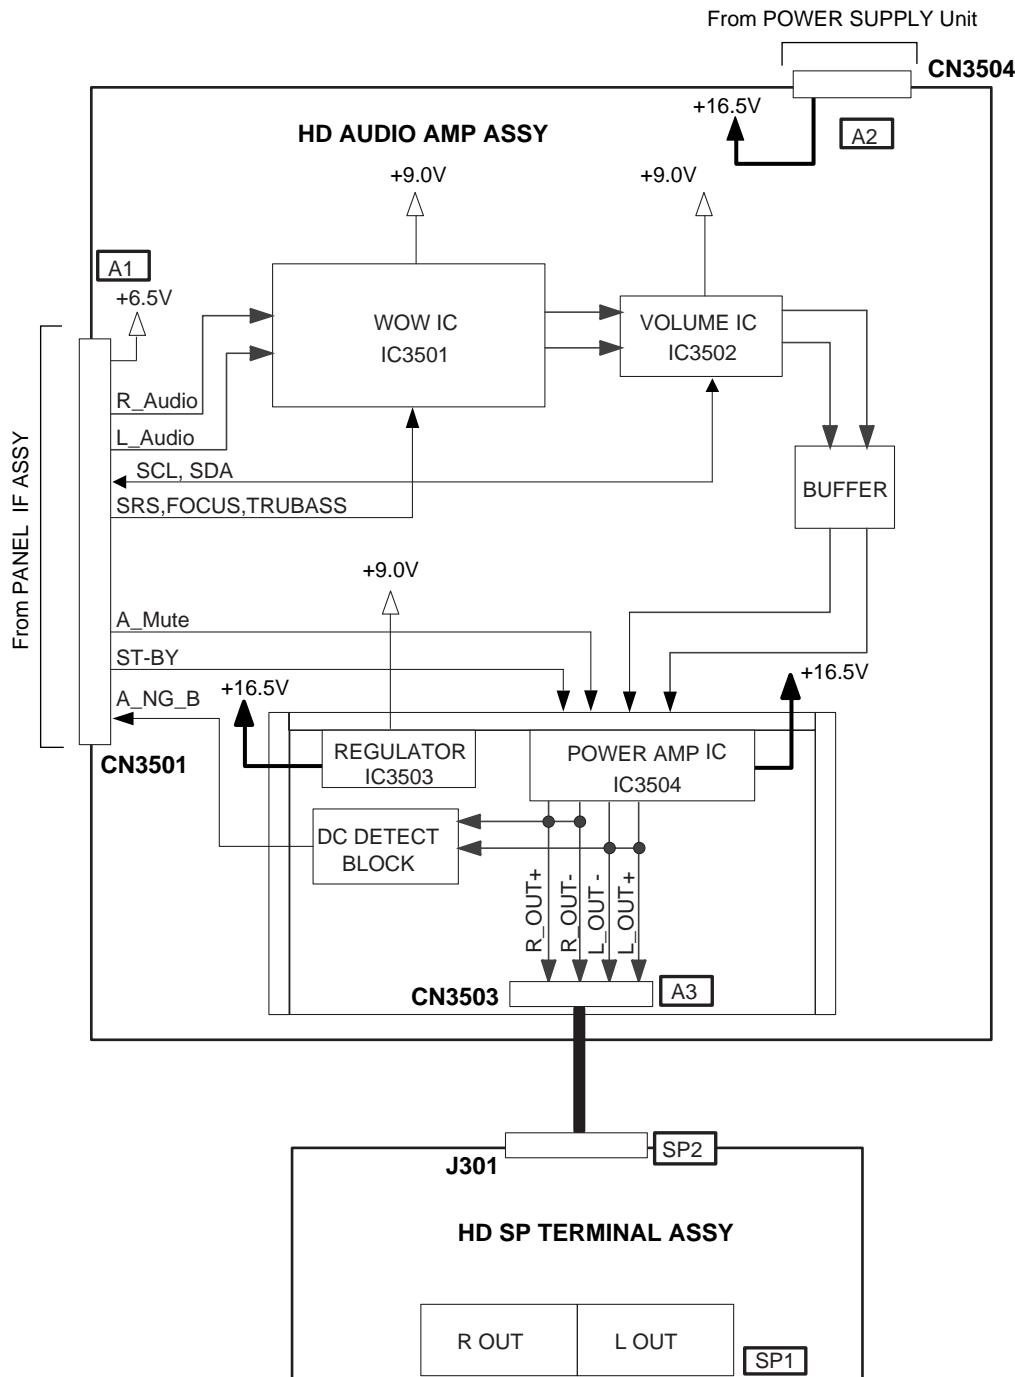

3.2 WAVEFORMS

A

DIGITAL VIDEO ASSY


① CH1: K5003 (VD)
CH2: K5002 (HD)
V: 2V/div. H: 2msec/div.



① CH1: K5003 (VD)
CH2: K5002 (HD)
V: 2V/div. H: 4μsec/div.



② CH1: K5003 (VD)
CH2: K5004 (DE)
V: 2V/div. H: 2msec/div.

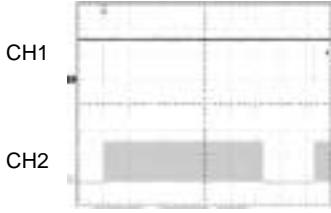


② CH1: K5003 (VD)
CH2: K5004 (DE)
V: 2V/div. H: 4μsec/div.




③ CH1: K5002 (HD)
CH2: K5004 (DE)
V: 2V/div. H: 2μsec/div.




③ CH1: K5002 (HD)
CH2: K5004 (DE)
V: 2V/div. H: 40nsec/div.

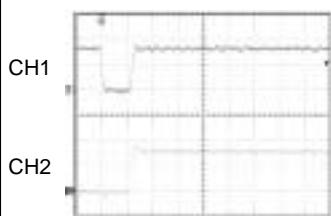

④ CH1: K5002 (HD)
CH2: CN5001-pin 77 (DCLK)
V: 2V/div. H: 40nsec/div.

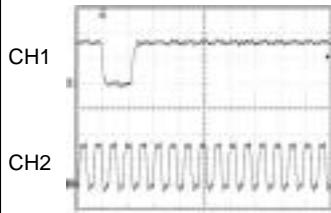


⑤ CH1: K5003 (VD)
CH2: CN5001-pin 88 (RA_IN2)
V: 2V/div. H: 2msec/div.

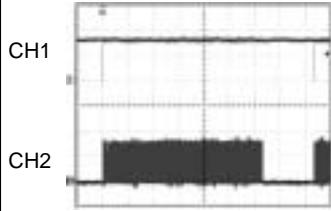


PANEL IF ASSY


① CH1: K4005 (VDI)
CH2: K4006 (HDI)
V: 2V/div. H: 5msec/div.

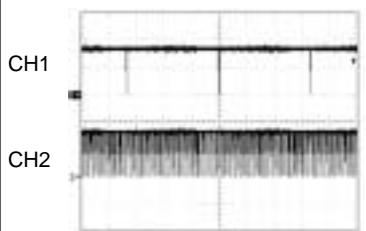


① CH1: K4005 (VDI)
CH2: K4006 (HDI)
V: 2V/div. H: 10μsec/div.

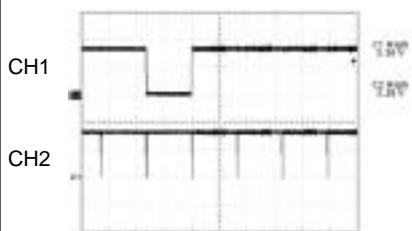


② CH1: K4005 (VDI)
CH2: CN4004-pin 29 (RAO)
V: 2V/div. H: 5msec/div.

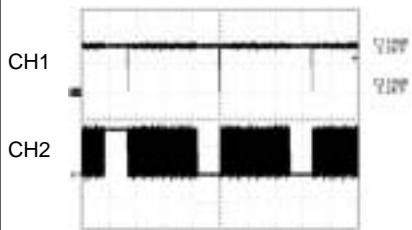


③ CH1: K4006 (HDI)
CH2: K4003 (DEI)
V: 2V/div. H: 5μsec/div.

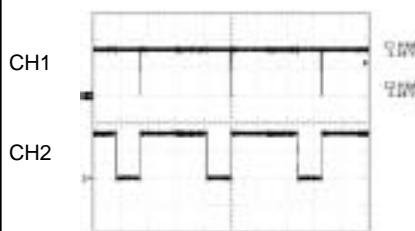

④ CH1: K4003 (DEI)
CH2: K4002 (DCLK)
V: 2V/div. H: 5μsec/div.

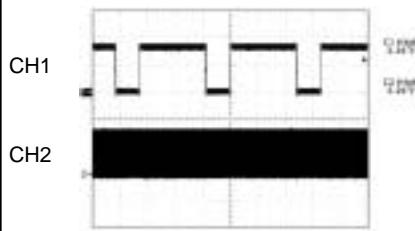

④ CH1: K4003 (DEI)
CH2: K4002 (DCLK)
V: 2V/div. H: 10nsec/div.

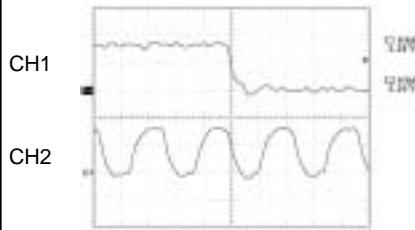


A

43 X DRIVE ASSY, 43 Y DRIVE ASSY and 43 SCAN A ASSY

- Drive Output Waveform (1 field,color-bar)
 - CH1: R1226 (XPSUS) - K1201 (SUSGND)
(43 X DRIVE ASSY)
 - CH2: R2348 (YPSUS) - K2301 (SUSGND)
(43 Y DRIVE ASSY)
 - CH3: K3001 (Scan OUT) - K2301 (SUSGND)
(43 SCAN A ASSY)


V: 100V/div. H: 2msec/div.

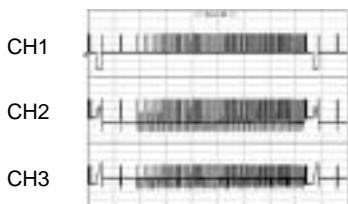

- Reset Pulse

- CH1: R1226 (XPSUS) - K1201 (SUSGND)
(43 X DRIVE ASSY)
- CH2: R2348 (YPSUS) - K2301 (SUSGND)
(43 Y DRIVE ASSY)
- CH3: K3001 (Scan OUT) - K2301 (SUSGND)
(43 SCAN A ASSY)

V: 100V/div. H: 100μsec/div.

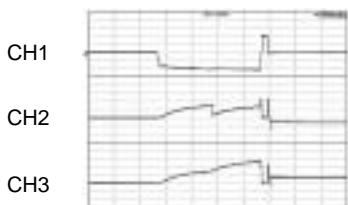

- Sustain Pulse (1 sub-sub-field)

- CH1: R1226 (XPSUS) - K1201 (SUSGND)
(43 X DRIVE ASSY)
- CH2: R2348 (YPSUS) - K2301 (SUSGND)
(43 Y DRIVE ASSY)
- CH3: K3001 (Scan OUT) - K2301 (SUSGND)
(43 SCAN A ASSY)


V: 50V/div. H: 5μsec/div.



- Sustain Waveform

- CH1: R2348 (YPSUS) - K2301 (SUSGND)
(43 Y DRIVE ASSY)

V: 50V/div. H: 500nsec/div.

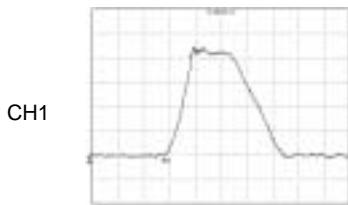

- Control Signal (Sustain Waveform Gen.)

- CH2: K2016 (YSUS-G) - K2010 (DGND)
- CH3: K2025 (YSUS-U1) - K2010 (DGND)
- CH4: K2022 (YSUS-U2) - K2010 (DGND)
- CH5: K2026 (YSUS-B) - K2010 (DGND)
- CH6: K2024 (YSUS-D2) - K2010 (DGND)
- CH7: K2027 (YSUS-D1) - K2010 (DGND)
(43 Y DRIVE ASSY)


V: 1V/div. H: 500nsec/div.



- Scan Control Signal (1 field, color-bar)

- CH2: K2006 (SI) - K2029 (DGND)
- CH3: K2009 (OC1) - K2029 (DGND)
- CH4: K2004 (OC2) - K2029 (DGND)
- CH5: K2007 (CLR) - K2029 (DGND)
- CH6: K2003 (CLK2) - K2029 (DGND)
- CH7: K2008 (LE) - K2029 (DGND)
(43 Y DRIVE ASSY)

V: 1V/div. H: 2msec/div.

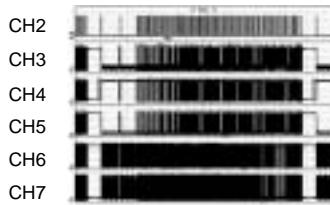

- X Drive Pulse Control Signal (color-bar)


- CH1: R1226 (XPSUS) - K2301 (SUSGND)

V: 100V/div. H: 2msec/div.

- CH2: K1016 (XCP-MSK) - K1020 (DGND)
- CH3: K1015 (XSUS-MSK) - K1020 (DGND)
- CH4: K1014 (XNR-D) - K1020 (DGND)

V: 1V/div. H: 2msec/div.

(43 X DRIVE ASSY)

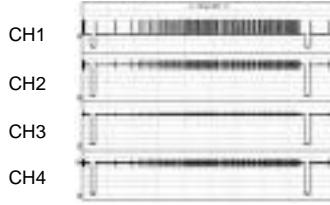

- Y Drive Pulse Control Signal (color-bar)


- CH1: R2348 (YPSUS) - K2301 (SUSGND)

V: 50V/div. H: 2msec/div.

- CH2: K2015 (YSUS-MSK) - K2010 (DGND)
- CH3: K2017 (YSOF-D) - K2010 (DGND)
- CH4: K2023 (YPR-U) - K2010 (DGND)


V: 1V/div. H: 2msec/div.

(43 Y DRIVE ASSY)

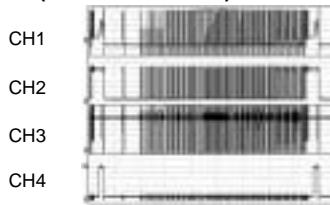


43 ADDRESS ASSY

• ADR RESONANCE BLOCK (VIDEO)

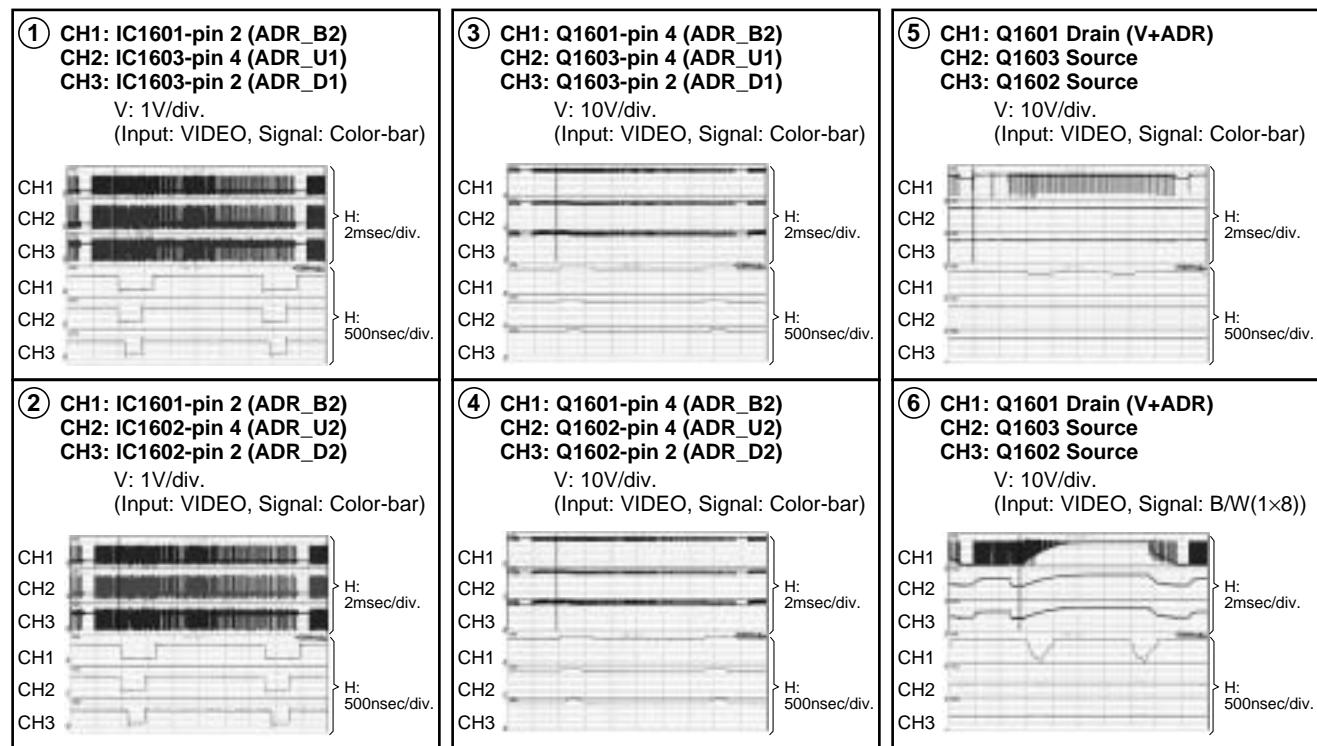

43 ADDRESS ASSY


• ADR RESONANCE BLOCK (PC)

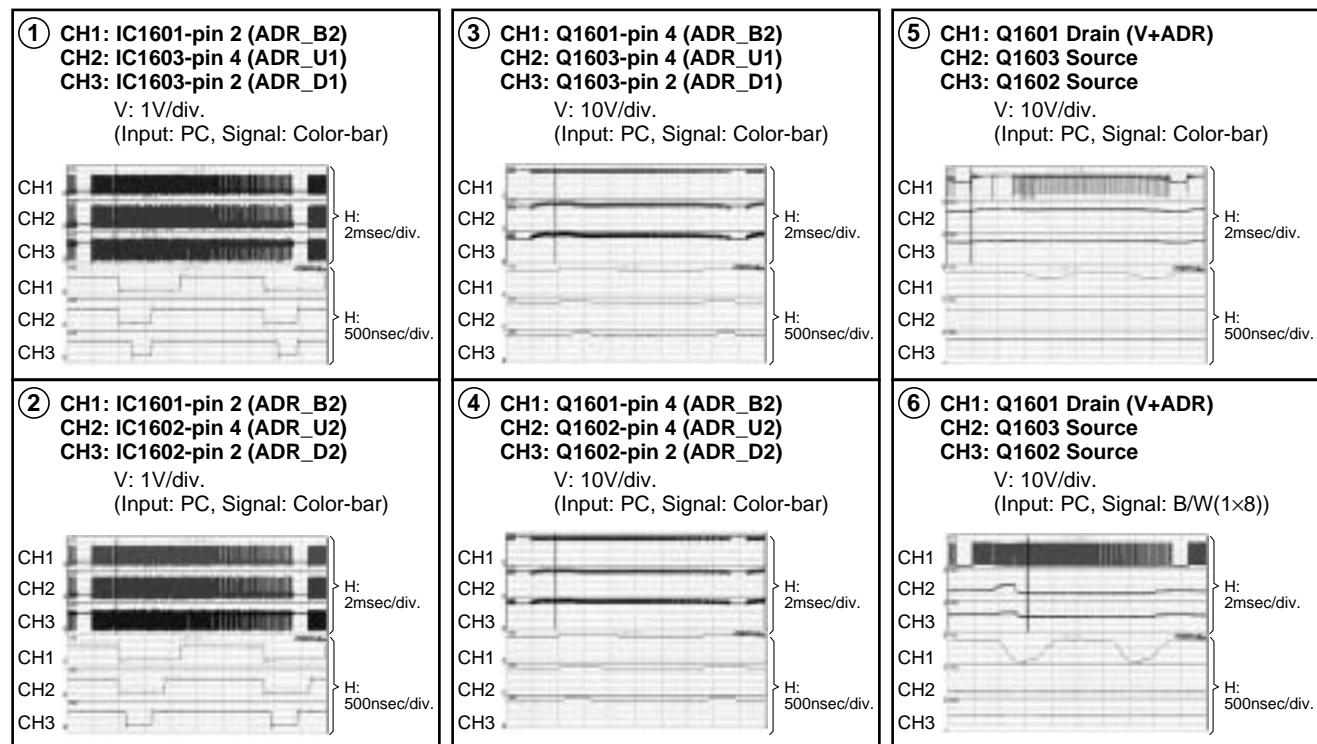

A

43 ADDRESS ASSY

- ADR LOGIC BLOCK

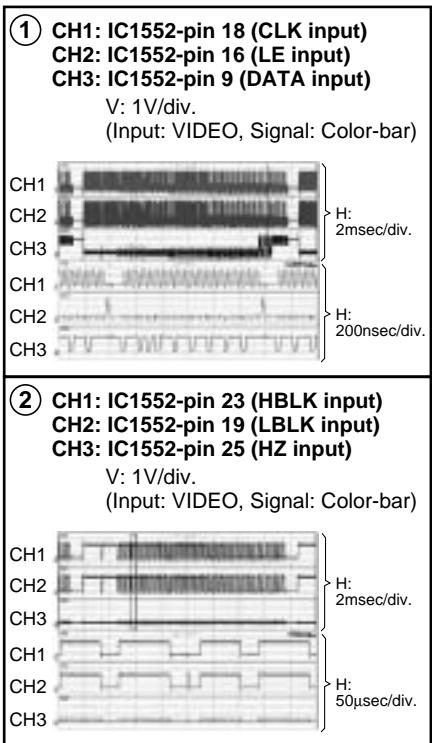

B

C

D

E

F

5. PCB PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω	\rightarrow	56×10^1	\rightarrow	561	RDI/4PU[5][6][1]J
47k Ω	\rightarrow	47×10^3	\rightarrow	473	RDI/4PU[4][7][3]J
0.5 Ω	\rightarrow	R50	RN2H[R][5][0]K
1 Ω	\rightarrow	IRO	RS1P[I][R][0]K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω	\rightarrow	562×10^1	\rightarrow	5621	RNI/4PC[5][6][2][1]F
----------------	---------------	-------------------	---------------	------	-------	----------------------

Mark No. Description

Part No.

LIST OF ASSEMBLIES

NSP	1..43 ADDRESS ASSY	AWV2020
NSP	2..43 ADDRESS ASSY	AWZ6793

NSP	1..43 SCAN FUKUGO ASSY	AWV2023
NSP	2..43 SCAN A ASSY	AWZ6796
NSP	2..43 SCAN B ASSY	AWZ6797
NSP	2..X CONNECTOR A ASSY	AWZ6798
NSP	2..X CONNECTOR B ASSY	AWZ6799

NSP	1..HD FUKUGO ASSY	AWV2017
	2..PANEL IF ASSY	AWZ6786
	2..PANEL LED ASSY	AWZ6787
	2..PANEL KEY ASSY	AWZ6788
	2..KEY CONTROL ASSY	AWZ6789
	2..PANEL IR ASSY	AWZ6790

NSP	1..DIGITAL VIDEO ASSY	AWV2070
	1..HD AUDIO ASSY	AWV2019
	2..HD SP TERMINAL ASSY	AWZ6792
	2..HD AUDIO AMP ASSY	AWZ6834

NSP	1..43 X DRIVE ASSY	AWV2021
	2..43 X DRIVE ASSY	AWZ6794
	2..PANEL SENSOR ASSY	AWZ6795
	1..43 Y DRIVE ASSY	AWV2022

Δ	1..POWER SUPPLY UNIT	AXY1068
----------	----------------------	---------

Mark No. Description

Part No.

43 ADDRESS ASSY

[ADR LOGIC BLOCK]

SEMICONDUCTORS

IC1501

PEE001B

COILS AND FILTERS

F1501-F1503

ATF1194

CAPACITORS

C1556,C1559,C1560,C1563
(330p/100V)
C1501,C1502 (47/6.3V)
C1503-C1507,C1555
C1558,C1561,C1564

ACG1105

ACH1357

CKSSYF104Z16
CKSSYF104Z16

RESISTORS

R1510,R1519,R1522
R1505-R1509
Other Resistors

RAB4C470J

RS1/16SS1000F
RS1/16S###J

OTHERS

CN1501 40P FFC CONNECTOR

AKM1215

[ADR RESONANCE BLOCK]

SEMICONDUCTORS

IC1601-IC1603
Q1604
Q1601
Q1602,Q1603
D1601

TND304S

2SA1163

HAT1081R

HAT3019R

1SS302

D1608,D1609,D1617,D1618
D1610,D1611,D1616,D1619,D1620
D1604,D1612
D1602,D1606,D1607,D1614,D1615
D1621,D1622

EC10UA20

EC11FS2

MA126

UDZS15B

UDZS24B

COILS AND FILTERS

L1601,L1602

ATH1135

CAPACITORS

C1609,C1615 (0.47/100V)
C1605,C1607,C1608,C1613,C1614
(0.01/100V)
C1601,C1602 (56/80V)
C1618 (47/6.3V)

ACE1171

ACG1101

ACH1347

ACH1357

C1603 (47/16V)
C1604,C1606,C1612

ACH1391

CKSSYF104Z16

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	RESISTORS R1631 (10,1/2W) Other Resistors	ACN1174 RS1/16S###J	C3254,C3260,C3265 C3208,C3209,C3219,C3220,C3227 C3229,C3238,C3240,C3252,C3253	CCSRCH331J50 CCSRCH390J50 CCSRCH390J50	
	43 SCAN A ASSY		C3263,C3264 C3202,C3213,C3224,C3235,C3246 C3257	CCSRCH390J50 CKSRYB105K6R3 CKSRYB105K6R3	
	SEMICONDUCTORS IC3001-IC3006 D3001	SN755864APZP KU10N16	RESISTORS R3202,R3210,R3216,R3224,R3229 R3235 Other Resistors	RAB4C221J RAB4C221J RS1/16S###J	
B	CAPACITORS C3001,C3002,C3012,C3013 (0.1/250V) C3023,C3024,C3034,C3035 (0.1/250V) C3045,C3046,C3056,C3057 (0.1/250V)	ACG1088 ACG1088 ACG1088	OTHERS CN3201 15P CONNECTOR K3203,K3208,K3214,K3216,K3218 TEST PIN K3220,K3221 TEST PIN	AKP1218 AKX9002 AKX9002	
	C3005,C3008,C3016,C3019,C3026 C3029,C3037,C3040,C3048,C3051 C3060,C3063 C3007,C3018,C3033,C3044,C3050 C3062	CCSRCH101J50 CCSRCH101J50 CCSRCH101J50 CCSRCH181J50 CCSRCH181J50	X CONNECTOR A ASSY		
C	C3006,C3011,C3017,C3022 C3031,C3032,C3042,C3043,C3049 C3055,C3061,C3066 C3009,C3010,C3020,C3021,C3028 C3030,C3039,C3041,C3053,C3054	CCSRCH331J50 CCSRCH331J50 CCSRCH331J50 CCSRCH390J50 CCSRCH390J50	X CONNECTOR B ASSY		
	C3064,C3065 C3003,C3014,C3025,C3036,C3047 C3058	CCSRCH390J50 CKSRYB105K6R3 CKSRYB105K6R3	PANEL IF ASSY [PANEL IF BLOCK] SEMICONDUCTORS		
D	RESISTORS R3003,R3011,R3017,R3025,R3030 R3036 Other Resistors	RAB4C221J RAB4C221J RS1/16S###J	IC4002 △ IC4003 IC4006 Q4007 Q4004,Q4008,Q4009,Q4012	24LC02B(I)SN PQ033EZ01ZP TC74VHC541FT DTA143EUA DTC143EUA	
	OTHERS CN3001 15P CONNECTOR K3001,K3004,K3009,K3015,K3017 TEST PIN K3019,K3021 TEST PIN	AKP1218 AKX9002 AKX9002	Q4014-Q4016 Q4005,Q4006,Q4010,Q4013,Q4017 Q4011 Q4001 D4006	DTC143EUA RN1901 RN2901 SM6K2 1SS355	
	43 SCAN B ASSY		D4001-D4004,D4007 △ D4005	RB751V-40 UDZS5.1B	
E	SEMICONDUCTORS IC3201-IC3206 D3201	SN755864APZP KU10N16	COILS AND FILTERS F4001,F4002 L4001	ATF1194 LCTAW221J3225	
	CAPACITORS C3201,C3211,C3212,C3222,C3223 (0.1/250V) C3233,C3234,C3244,C3245 (0.1/250V) C3255,C3256,C3266 (0.1/250V)	ACG1088 ACG1088 ACG1088	CAPACITORS C4005,C4006 C4019 C4009,C4020 C4011,C4018,C4021 C4003,C4015	CCSRCH100D50 CCSRCH101J50 CCSRCH471J50 CEAT101M10 CEAT101M16	
F	C3203,C3204,C3214,C3215,C3226 C3228,C3237,C3239,C3247,C3251 C3258,C3259 C3206,C3217,C3232,C3243,C3249 C3261	CCSRCH101J50 CCSRCH101J50 CCSRCH101J50 CCSRCH181J50 CCSRCH181J50	RESISTORS R4006 Other Resistors	RAB4C101J RS1/16S###J	
	C3205,C3210,C3216,C3221 C3230,C3231,C3241,C3242,C3248	CCSRCH331J50 CCSRCH331J50	OTHERS		

<u>Mark No.</u>	<u>Description</u>
CN4004	114P FFC CONNECTOR
CN4003	DVI SOCKET (24P)
CN4002	SOCKET (20P)
K4002-K4012	TEST PIN
CN4006	3P TOP POST

**[TMDS RX BLOCK]
SEMICONDUCTORS**

IC4201	24LC01B
IC4206	BA8274F
IC4205	PST3628UR
IC4202	SII169CTG100
Q4203	DTC143EUA
Q4215	SM6K2
D4203,D4204	1SS355
D4202	UDZS6.8B

COILS AND FILTERS

F4201-F4204	ATF1194
L4201	ATH1132

CAPACITORS

C4208,C4215,C4218,C4222,C4230	CCSRCH331J50
C4262	CCSRCH471J50
C4207,C4210,C4232,C4233,C4236	CCSRCH820J50
C4241,C4244,C4258	CCSRCH820J50
C4212,C4239,C4242,C4246	CEAT101M10
C4202,C4237,C4238	CEAT470M10
C4260	CKSRYB472K50
C4205,C4206,C4217,C4267	CKSRYF105Z10
C4203,C4204,C4209,C4211,C4213	CKSSYF104Z16
C4234,C4235,C4240,C4243,C4245	CKSSYF104Z16
C4247,C4252,C4256,C4259,C4261	CKSSYF104Z16
C4271	CKSSYF104Z16

RESISTORS

R4241	RAB4C220J
R4213-R4218,R4245,R4247	RAB4C470J
R4253-R4255,R4257	RAB4C470J
R4250	RS1/16S3900F
Other Resistors	RS1/16S###J

OTHERS

K4203,K4207 TEST PIN	AKX9002
----------------------	---------

**PANEL LED ASSY
SEMICONDUCTORS**

D4751	SML-310MT
D4752	SML-311UT

CAPACITORS

△C4751-C4753	CCSRCH101J50
--------------	--------------

OTHERS

CN4751 CONNECTOR 3P	B3B-ZR-3.4
---------------------	------------

**PANEL KEY ASSY
SWITCHES AND RELAYS**

S4801-S4806	VSG1024
-------------	---------

OTHERS

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
CN4801	6P FFC CONNECTOR	AKM1208

**KEY CONTROL ASSY
SEMICONDUCTORS**

IC4851	PD5719A
D4851-D4853,D4855,D4856	1SS302
CAPACITORS	
△C4856-C4858	CCSRCH101J50
C4854	CEAT470M50
C4853	CKSRYB103K50

RESISTORS

R4858	RAB4C182J
Other Resistors	RS1/16S###J

OTHERS

△X4851 CERALOCK	ASS1162
CN4851 6P FFC CONNECTOR	VKN1596

**PANEL IR ASSY
SEMICONDUCTORS**

Q4901	2SC4116
D4902	1SS302
D4901	1SS355
CAPACITORS	
C4901	CEVW470M6R3
C4903	CKSRYB102K50
C4902	CKSRYB103K50
C4904	CKSSYF104Z16

RESISTORS

Other Resistors	RS1/16S###J
-----------------	-------------

OTHERS

U4901 REMOTE RECEIVER UNIT	RPM7240-H4
----------------------------	------------

DIGITAL VIDEO ASSY

[DIGITAL IF BLOCK]

COILS AND FILTERS

F5001,F5002,F5004	ATF1194
-------------------	---------

RESISTORS

R5101-R5115,R5131	RAB4C470J
Other Resistors	RS1/16S###J

OTHERS

CN5001 114P FFC CONNECTOR	AKM1216
K5002-K5004,K5007 TEST PIN	AKX9002
CN5002 10P CONNECTOR	B10B-PH-SM3

[MODULE UCOM BLOCK]

SEMICONDUCTORS

IC5206	24LC04B(I)SN
IC5201	M30626FHPGP-P
IC5205	PST3628UR
IC5208	TC74VHC08FT
IC5213	TC74VHC123AFT

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
A	IC5214,IC5215	TC74VHC32FT	[IC4 BLOCK] SEMICONDUCTORS			
	IC5211,IC5212	TC74VHC541FT		IC5401	PD5856A	
	IC5209	TC7W126FU		D5401	SML-310LT	
	Q5201	2SJ461		D5402	SML-310MT	
	D5207-D5212	1SS301				
	D5217,D5218	1SS355	COILS AND FILTERS			
	D5201	SML-310LT		F5401,F5403,F5409,F5410	ATF1194	
SWITCHES AND RELAYS		ASH1047	CAPACITORS			
	S5201			C5401,C5413,C5417,C5424 (100/6.3V)	ACH1396	
B	CAPACITORS			C5434,C5435	CKSRYB102K50	
	C5213,C5225 (47/6.3V)	ACH1357		C5402-C5412,C5414-C5416	CKSSYF104Z16	
	C5206,C5223,C5231	CKSRYB102K50		C5418-C5423,C5425-C5431	CKSSYF104Z16	
	C5245-C5264	CKSRYB102K50	RESISTORS			
	C5232	CKSRYB104K16	R5406,R5421	RAB4C101J		
	C5230	CKSRYB105K6R3	R5408-R5413,R5415,R5416,R5419	RAB4C220J		
	C5205	CKSRYB472K50	R5422	RAB4C220J		
RESISTORS			R5405	RS1/16S5601F		
C5201-C5204,C5208,C5210-C5212		CKSSYF104Z16	Other Resistors	RS1/16S###J		
C5218,C5224,C5226,C5227		CKSSYF104Z16	OTHERS			
C5243,C5244		CKSSYF104Z16	K5401 TEST PIN	AKX9002		
C	RESISTORS		[ADDRESS CN BLOCK] RESISTORS			
	R5209,R5211,R5212,R5235	RAB4C101J		Other Resistors	RS1/16S###J	
	R5254,R5255,R5265,R5266	RAB4C101J	OTHERS			
	R5205	RAB4C103J	CN5521 50P CONNECTOR	AKM1201		
	R5270,R5271	RAB4C472J	△CN5501-CN5508 40P CONNECTOR	AKM1217		
	R5256,R5257	RAB4C474J	CN5511 30P FFC CONNECTOR	AKM1218		
	Other Resistors	RS1/16S###J	[PANEL FLASH BLOCK] SEMICONDUCTORS			
OTHERS			[DIGITAL DD CON BLOCK] SEMICONDUCTORS			
CN5201 PLUG 8-P		AKM1225		△IC5602	PQ05DZ11	
K5201 TEST PIN		AKX9002		△IC5603	PQ09DZ11	
△X5201 CERAMIC RESONATOR		ASS1178		△U5601	AXY1066	
CN5202 3P PH CONNECTOR		B3B-PH-SM3		Q5601,Q5603	HN1C01FU	
D	CAPACITORS			D5602,D5603,D5609,D5610	1SS355	
	IC5305 75PFTN	MBM29PL160BD-		D5601	HZU2.2B	
	IC5303	PST3612UR		D5604	UDZS5.1B	
	IC5301	PST3628UR	CAPACITORS			
	IC5302	TC74VHC08FT	C5601,C5603,C5607,C5614,C5616 (100/16V)	ACH1394		
	Q5301	RN1901	C5602,C5604,C5615,C5617	CKSRYB103K50		
	D5301-D5310	1SS302	C5605,C5606,C5610	CKSSYF104Z16		
E	RESISTORS		RESISTORS			
	C5320	CCSRCH470J50	R5601 (1,1/2W)	ACN1162		
	C5304,C5307	CKSRYB102K50	R5627 (3.3,1/2W)	ACN1168		
	C5311,C5314	CKSRYB104K16	Other Resistors	RS1/16S###J		
	C5303,C5306	CKSRYB472K50	OTHERS			
	C5301,C5302,C5305,C5309,C5313	CKSSYF104Z16	△CN5601 11P CONNECTOR	B11B-PH-SM3		
	C5316	CKSSYF104Z16	△CN5602 7P CONNECTOR	B7B-PH-SM3		
F	OTHERS		HD SP TERMINAL ASSY COILS AND FILTERS			
	CN5301 PLUG 15-P	AKM1232				
	K5301 TEST PIN	AKX9002				
	△X5302 CRYSTAL OSCILLATOR	ASS1174				
	△X5301 CRYSTAL OSCILLATOR	ASS1176				

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
L3701,L3702		ATF1206			
CAPACITORS					
△C3701-C3704		CCSRCH101J50		43 X DRIVE ASSY	A
C3713-C3716		CCSRCH221J50		[X LOGIC BLOCK]	
C3709,C3710		CKSRYB332K50		SEMICONDUCTORS	
C3711,C3712		CKSRYF473Z50		IC1002	TC74ACT540FT
RESISTORS				IC1001	TC74ACT541FT
R3701-R3704		RD1/2MMF100J		IC1003	TC74VHC08FT
OTHERS					
J3701 6P HOUSING WIRE		ADX2838			
CN3701 SPEAKER TERMINAL		AKE1060			
△3701 SPEAKER SHIELD A		ANK1710			
△3702 SPEAKER SHIELD B		ANK1711			
HD AUDIO AMP ASSY					
SEMICONDUCTORS					
IC3502		BD3869AS			
IC3504		LA4625			
IC3501		NJM2195L			
IC3503		NJM7809FA			
Q3501,Q3502,Q3507,Q3510,Q3511		2SA1162			
Q3503,Q3504,Q3508		2SC2712		[RESONANCE BLOCK]	
Q3512		DTC124EK		SEMICONDUCTORS	
D3501-D3504		1SS355		IC1103	BA10393F
CAPACITORS				IC1101,IC1102	TND506MD
C3525		CCSRCH221J50		Q1113	2SC2412K
C3501-C3504,C3520,C3528-C3532		CEAT100M50		Q1102,Q1103,Q1111,Q1112,Q1114	2SK3560
C3505,C3526,C3549,C3557,C3564		CEAT101M16		Q1105,Q1106,Q1108,Q1109	2SK3723
C3519		CEAT1R0M50			
C3536		CEAT220M50			
C3537,C3538		CEAT2R2M50		Q1101,Q1104,Q1107,Q1110	CPH5506
C3551,C3552		CEAT330M25		D1109,D1122	1SS302
C3566		CEHAT101M10		D1101,D1102,D1104,D1105	EC11FS4
C3561		CEHAT101M16		D1107,D1108,D1111,D1114-D1117	EC11FS4
C3562,C3565		CEHAT220M50		D1120,D1121,D1127,D1128	EC11FS4
C3559,C3560		CEHAT2R2M50			
C3509		CEHAT331M16		D1103,D1106,D1113,D1118	TCU20A30
C3507		CEHAT471M25		D1124,D1125	TCU20A30
C3571		CEHAT472M25		D1110,D1123	UDZS16B
C3563		CEHATR47M50			
C3512,C3522,C3572		CFTLA103J50		COILS AND FILTERS	
C3511,C3513-C3518,C3533,C3534		CFTLA104J50		L1104	ATH1119
C3545-C3548,C3573-C3576		CFTLA104J50		L1102	ATH1133
C3521		CFTLA333J50		L1103,L1105	ATH1134
C3524		CFTLA334J50		L1101	LFEA470J
C3523		CFTLA474J50			
C3506,C3508,C3510,C3527,C3535		CKSRYB103K50		CAPACITORS	
C3550,C3558		CKSRYB103K50		C1113,C1114,C1126,C1127	ACE1168
C3543,C3544		CQMA222J50		(3.3/250V)	
RESISTORS				C1111,C1124 (100p/630V)	ACG1104
R3599-R3602		RD1/2MMF2R2J		C1109,C1119 (0.1/630V)	ACG1108
Other Resistors		RS1/16S###J		C1101,C1105,C1116,C1117	CCSRCH331J50
OTHERS				C1128,C1130-C1132	E
3511 AUDIO HEATSINK		ANH1612		C1102,C1118	CKSRYB104K16
CN3504 3P CONNECTOR		B3P-VH		C1104,C1108,C1115,C1122	CKSRYB105K6R3
3512-3515 SCREW		VBB30P100FNI			CKSYB105K25
KN3501,KN3502 WRAPPING TERMINAL VNF1084				RESISTORS	
				R1116,R1122	RS1/10S1003F
				R1133,R1143-R1145	RS1/10S100J
				R1103,R1106,R1118,R1119,R1153	RS1/10S2R2J
				R1136	RS1/16S1202F
				R1139	RS1/16S3301F
				R1130	RS1/16S5601F
				R1134	RS1/16S8201F
				R1113,R1128	RS1MMF101J
				VR1101-VR1104	CCP1390

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	Other Resistors	RS1/16S###J		SEMICONDUCTORS	
	[SUS BLOCK] SEMICONDUCTORS		IC1404	AN1431M	
	IC1202	HCPL-M611	IC1402	MIP161	
	IC1205	NJM2872F05	IC1401,IC1403	TLP181(P-GR)	
	IC1203,IC1207	STK795-510	Q1401	2SA1037K	
	IC1208	TLP181(P-GR)	Q1402	2SC2412K	
	IC1204,IC1206	TND301S			
B	Q1207	2SC2412K	D1407,D1408	EC11FS2	
	Q1203	2SD1898	D1404	EC8FS6	
	Q1302	2SJ522	D1401,D1403	UDZS5.6B	
	Q1301	2SK2503			
	Q1205	2SK2908-01S		COILS AND FILTERS	
	Q1206,Q1208	DTC124EK	L1401	ATH1110	
	Q1201	HN1B04FU	T1401	ATK1153	
	D1212	1SS302			
	D1211,D1213,D1216	1SS355		CAPACITORS	
	D1201,D1207	EC10QS04	C1401,C1402 (22/315V)	ACH1361	
	D1204,D1301	EC11FS4	C1404	CEHAT101M16	
	D1214	EC8FS6	C1405	CEHAT101M25	
	D1208	UDZS5.6B	C1409	CEHAT331M16	
C			C1403,C1407,C1408,C1411	CKSRYB104K16	
	COILS AND FILTERS		C1406	CKSRYF104Z50	
	L1204,L1205	ATH1112			
	L1202	LFEA100J		RESISTORS	
	L1203,L1206	LFEA470J	R1405,R1406,R1408-R1410,R1414	RS1/10S3602F	
			R1420	RS1/16S1101F	
			R1403	RS1/16S2702F	
			R1401,R1404	RS1/16S4701F	
			R1417	RS1/16S7500F	
	CAPACITORS				
	C1214-C1217,C1227-C1230	ACE1163		OTHERS	
	C1233 (0.12/250V)	ACE1169	1002 CARD SPACER	AECH1957	
	C1244 (0.1/250V)	ACE1170	1001 DRIVE SIRICON SHEET A	AEH1062	
	C1209 (0.1/630V)	ACG1092	1001 PLATE X	ANG2622	
	C1219,C1231	ACH1359	1001 DRIVE HEATSINK A	ANH1613	
D	C1224	CEHAT101M16	1001 SCREW	BMZ30P080FZK	
	C1301	CEHAT221M25			
	C1203,C1207,C1210,C1220,C1223	CEHAT470M25	1002 SCREW	PMB30P060FNI	
	C1238,C1239	CEHAT470M25			
	C1235	CKSRYB102K50			
	C1213,C1225,C1240,C1241,C1243	CKSRYB104K16		PANEL SENSOR ASSY	
	C1202,C1205,C1206,C1212,C1302	CKSRYF104Z50		SEMICONDUCTORS	
				IC1072	MM1522XU
				IC1071	MM3012XN
E	RESISTORS				
	R1230	ACN1166	CAPACITORS		
	R1208 (10,1/2W)	ACN1174	C1075 (47/6.3V)	ACH1357	
	R1304 (560,1/10W)	ACN1195	C1074	CKSRYB103K50	
	R1305 (1k,1/2W)	ACN1198	C1071,C1076	CKSRYB104K16	
	R1301,R1302,R1314	RS1/10S122J	C1072,C1073	CKSRYF105Z10	
	R1226,R1251	RS1MMF361J		RESISTORS	
	R1235,R1236	RS2MMF121J	R1076,R1078	RS1/16S1001F	
	Other Resistors	RS1/16S###J	Other Resistors	RS1/16S###J	
F	OTHERS				
	KN1201-KN1205,KN1208 (GROUND PLATE)	ANK-142		43 Y DRIVE ASSY	
	KN1210-KN1212,KN1214 (GROUND PLATE)	ANK-142		OTHERS	
	CN1201 12P CONNECTOR	B12B-EH	2002 CARD SPACER	AEC1957	
			2001 DRIVE SIRICON SHEET A	AEH1062	
			2001 PLATE Y	ANG2557	
			2001 DRIVE HEATSINK A	ANH1613	
			2001 SCREW	BMZ30P080FZK	
	[D-D CON BLOCK]				

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
2002 SCREW		PMB30P060FNI	R2233		RS1/16S5601F
			R2242		RS1/16S8201F
			R2215,R2230		RS1MMF101J
			VR2201-VR2204 (1k)		CCP1390
			Other Resistors		RS1/16S###J
[Y LOGIC BLOCK]			[Y SUS BLOCK]		
SEMICONDUCTORS			SEMICONDUCTORS		
IC2002		TC74ACT540FT	IC2302,IC2308		HCPL-M611
IC2001,IC2003		TC74ACT541FT	IC2305		NJM2872F05
IC2005		TC74VHC08FT	IC2303,IC2307		STK795-511
IC2004		TC74VHC541FT	IC2301,IC2304,IC2309		TND301S
Q2001		DTC124EK	Q2310		2SC2412K
CAPACITORS			Q2303,Q2307		2SD1898
C2001		CEHAT470M16	Q2301		2SJ522
C2010,C2011		CKSRYB104K16	Q2302,Q2308,Q2312		2SK3325-Z
C2002-C2006		CKSRYF104Z50	Q2309		HN1B04FU
			D2302		1SS302
RESISTORS			D2305		EC11FS4
R2018,R2019		RAB4C102J	D2301		UDZS16B
R2002,R2004,R2013-R2015		RAB4C470J	D2306,D2318		UDZS5.6B
R2005,R2006,R2012,R2016,R2017		RAB4C472J			
Other Resistors		RS1/16S###J			
OTHERS					
CN2001 50P CONNECTOR		AKM1201			
[Y RESONANCE BLOCK]			COILS AND FILTERS		
SEMICONDUCTORS			L2306,L2307		ATH1112
IC2211		BA10393F	L2304		LFEA100J
IC2201,IC2202		TND506MD	L2308		LFEA101J
Q2213		2SC2412K	L2301,L2302,L2305		LFEA470J
Q2202,Q2203,Q2211,Q2212,Q2214		2SK3560			
Q2205,Q2206,Q2208,Q2209		2SK3723			
Q2201,Q2204,Q2207,Q2210		CPH5506	CAPACITORS		
D2209,D2223		1SS302	C2309-C2312,C2326,C2327		ACE1163
D2202-D2205,D2207,D2208		EC11FS4	(1.5/300V)		ACE1163
D2213,D2214,D2216-D2219,D2222		EC11FS4	C2329,C2330 (1.5/300V)		ACE1165
D2226,D2227		EC11FS4	C2314 (0.047/250V)		ACG1092
			C2302 (0.1/630V)		
D2201,D2206,D2211,D2215,D2220		TCU20A30	C2316,C2331 (300/280V)		ACH1359
D2225		TCU20A30	C2303 (22/315V)		ACH1361
D2210,D2224		UDZS16B	C2336 (220/100V)		ACH1393
			C2306,C2334		CEHAT221M25
			C2308,C2324,C2339,C2340		CEHAT470M16
COILS AND FILTERS			C2304,C2320,C2338		CEHAT470M25
L2204		ATH1119	C2305,C2322,C2323,C2325,C2333		CKSRYB104K16
L2202		ATH1133	C2341		CKSRYB104K16
L2203,L2205		ATH1134	C2301,C2307,C2328		CKSRYF104Z50
L2201		LFEA470J			
CAPACITORS					
C2212,C2213,C2226,C2227		ACE1168	RESISTORS		
(3.3/250V)			R2332 (2.2,1/2W)		ACN1166
C2211,C2224 (100p/630V)		ACG1104	R2309		RS1MMF132J
C2210,C2223 (0.1/630V)		ACG1108	R2310,R2311		RS1MMF472J
C2202,C2205,C2216,C2217		CCSRCH331J50	R2312-R2314,R2322,R2323		RS3LMF100J
			R2348,R2352,R2358,R2359		RS3LMF1R8J
C2230,C2232,C2233,C2235		CKSRYB104K16	Other Resistors		RS1/16S###J
C2203,C2218		CKSRYB105K6R3			
C2201,C2208,C2215,C2219		CKSYB105K25			
RESISTORS					
R2240,R2241		RS1/10S1003F	OTHERS		
R2244-R2247		RS1/10S100J	KN2301-KN2305,KN2310		ANK-142
R2204,R2205,R2220,R2221,R2253		RS1/10S2R2J	(GROUND PLATE)		ANK-142
R2234		RS1/16S1202F	KN2312,KN2314,KN2316		
R2235		RS1/16S3301F	(GROUND PLATE)		
			CN2301 11P CONNECTOR		B11B-EH
[Y SCAN BLOCK]					

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
	SEMICONDUCTORS			C2405,C2407,C2417	CEHAT101M25
A	IC2101,IC2103-IC2106 IC2108,IC2109 IC2102,IC2107	HCPL-M611 HCPL-M611 TC74ACT540FT	C2414 C2410 C2411 C2420 C2409,C2419	C2414 C2410 C2411 C2420 C2409,C2419	CEHAT221M16 CEHAT221M25 CEHAT331M25 CEHAT470M2A CKSRYB103K50
	COILS AND FILTERS				
	L2101-L2103	LFEA100J			
	CAPACITORS			C2402,C2412,C2413,C2423,C2425 C2431,C2432,C2434-C2436 C2441-C2443 C2415,C2421,C2428 C2404,C2408,C2416,C2418,C2426	CKSRYB104K16 CKSRYB104K16 CKSRYB104K16 CKSRYB105K6R3 CKSRYF104Z50
B	RESISTORS			C2429	CKSRYF104Z50
	R2121,R2128 Other Resistors	RAB4C472J RS1/16S###J			
	OTHERS				
	CN2101,CN2102 15P CONNECTOR	AKM1200			
	[Y D-D CON BLOCK]				
	SEMICONDUCTORS				
C	IC2410-IC2412 IC2406 IC2401 IC2402-IC2405,IC2407-IC2409 Q2402,Q2407	AN1431M BA10358F MIP0223SC TLP181(P-GR) 2SA1037K		R2429 (180k,1/2W) R2435,R2439 R2402-R2404 R2442 R2468	ACN1225 RS1/10S2202F RS1/10S3902F RS1/16S1201F RS1/16S1202F
	Q2410 Q2417 Q2411-Q2414,Q2416 Q2405 Q2403	2SA1163 2SA1535 2SC2412K 2SC2713 2SD1664		R2424 R2420,R2427,R2438 R2467 R2457-R2460 R2506	RS1/16S2001F RS1/16S2201F RS1/16S3301F RS1/16S4701F RS3LMF151J
	VR2401,VR2402 (1k)				
	Other Resistors				CCP1390 RS1/16S###J
	OTHERS				
	2401 HEATSINK 2401 SCREW				
D	Q2401,Q2404 Q2415 D2430 D2410,D2419,D2436 D2409,D2418	2SD1898 HN1C01FU 1SS301 1SS302 1SS355			ANH1614 BBZ30P080FZK
	D2404-D2407 D2403,D2414 D2402 D2427 D2401	EC11FS2 EC11FS4 EC8FS6 RD91PA U1ZB330			
E	D2412, D2413, D2422 D2425,D2426 D2415 D2432 D2423,D2431	UDZS15B UDZS27B UDZS33B UDZS4.3B UDZS5.6B			
	COILS AND FILTERS				
	T2402 T2403 T2401 L2402 L2401	ATK1156 ATK1157 ATK1158 LFEA100J LFEA101J			
	L2403	LFEA470J			
F	CAPACITORS				
	C2406 (100/160V) C2401 (22/315V) C2427 C2403	ACH1360 ACH1361 CEHAT100M50 CEHAT101M16			

6. ADJUSTMENT



6.1 ADJUSTMENT REQUIRED WHEN THE SET IS REPAIRED OR REPLACED

■ 43 X DRIVE Assy

- When replaced
VRN Voltage adjustment.

■ 43 Y DRIVE Assy

- When replaced

No adjustment is required, because necessary adjustment has already been made.


6.2 COMMAND

6.2.1 RS232C COMMAND


- The panel control items for the PDP-434PU system can be controlled with the RS-232C commands by connecting a PC through the GGF1475 special communication device when the Media Receiver is not connected with the PDP.

Note: The special communication device for the PDP-503P cannot be used with this unit, because the control lines within the MDR cable are different.

■ Connection

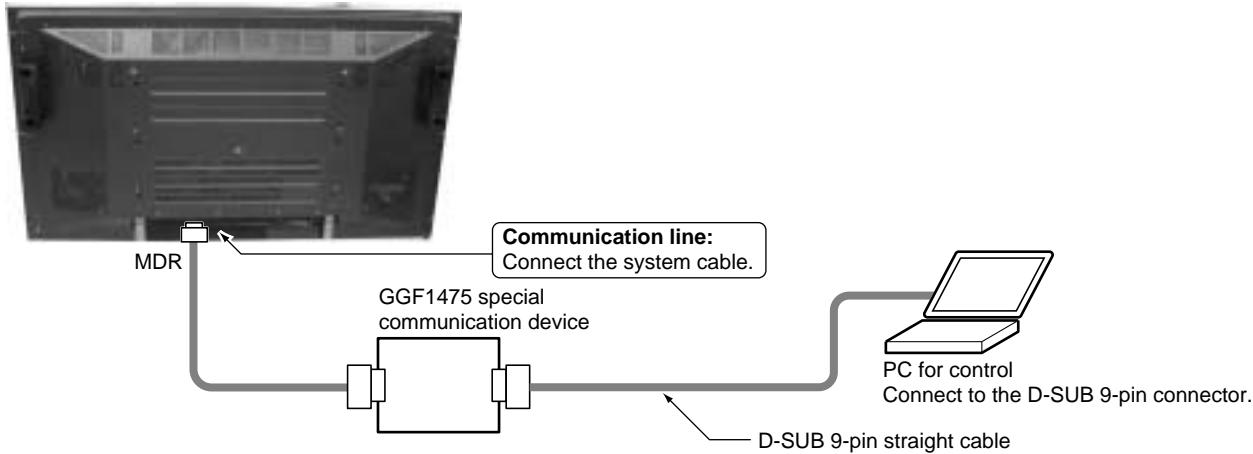

A • Schematic diagram of Jig

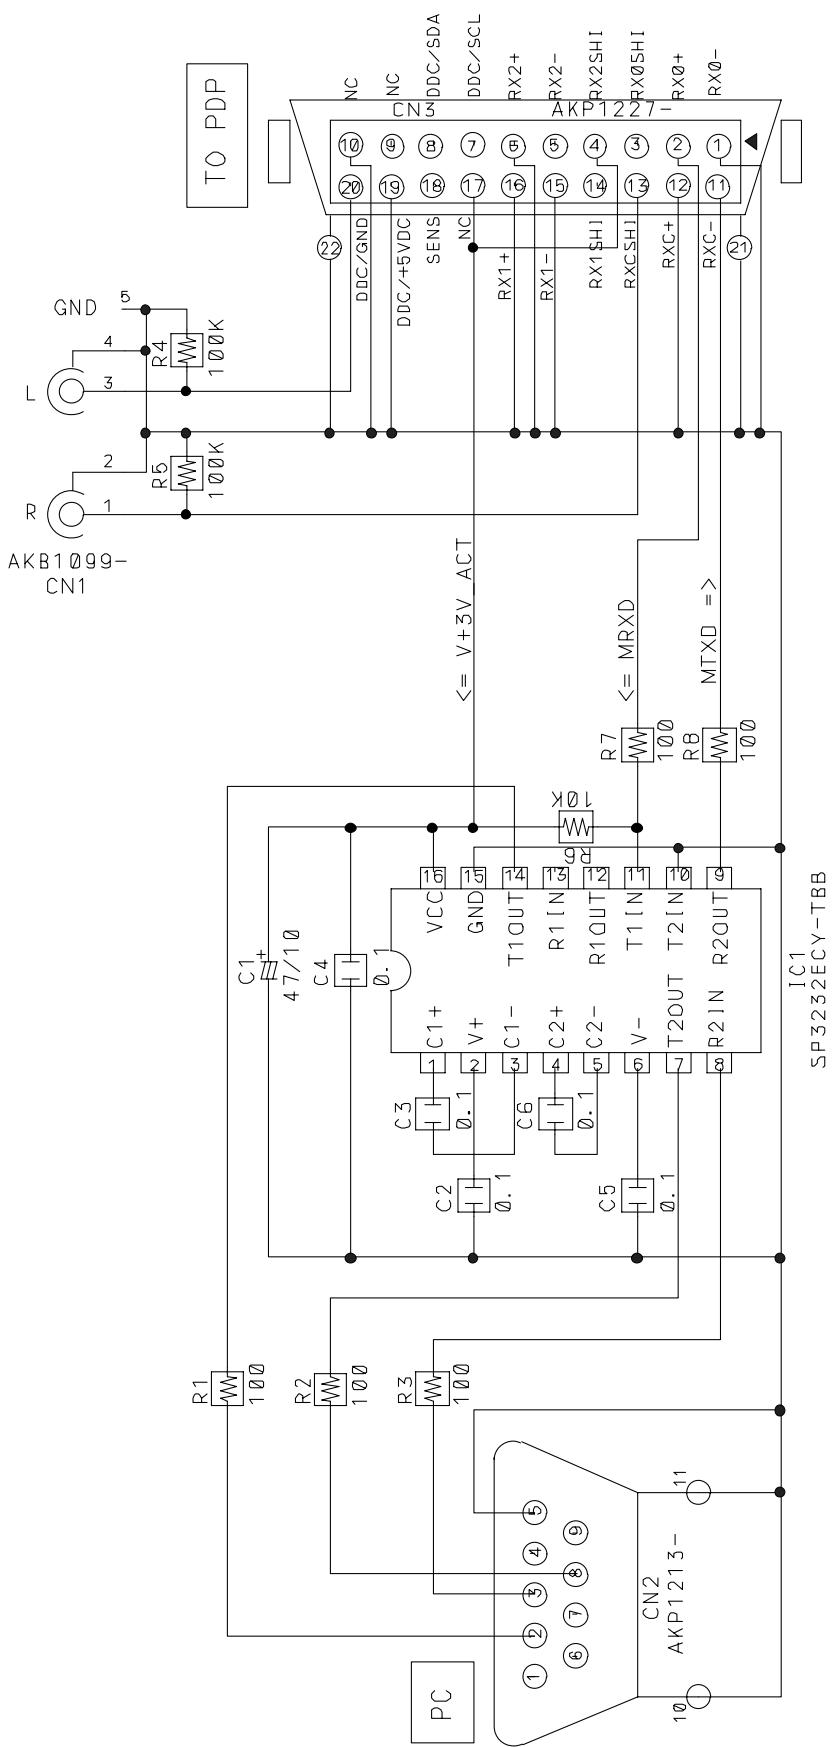

• RS-232C Commands for the module microcomputer

Command Name			Function	Validity of direct numeric input		
				Validity	Lower limit	Upper limit
1	ABL	ABL ADJUSTMENT	Adjusting the upper limit of the power	O	0000	255
2	AMN	AUDIO MUTE NO	Turning off the audio muting			
3	AMY	AUDIO MUTE YES	Turning on the audio muting			
4	BAL	BALANCE ADJUSTMENT	Adjusting the audio balance	O	98	158
5	BAS	BASS ADJUSTMENT	Adjusting the audio bass	O	121	135
6	BCP	BACKUP COPY	Copying the backup data in the EEPROM			
7	CTM	CLEAR TRAP MEMORY	Clearing the TRAP log that records detection of opening of the rear cover			
8	DRF	DRIVE OFF	Driving off			
9	DRN	DRIVE ON	Driving on			
10	F50	FREQUENCY VIDEO 50Hz	Setting the frequency in Mask mode to 50 Hz (VIDEO)			
11	F60	FREQUENCY VIDEO 60Hz	Setting the frequency in Mask mode to 60 Hz (VIDEO)			
12	F61	FREQUENCY PC 60Hz	Setting the frequency in Mask mode to 60 Hz (PC)			
13	F70	FREQUENCY PC 70Hz	Setting the frequency in Mask mode to 70 Hz (PC)			
14	F72	FREQUENCY VIDEO 72Hz	Setting the frequency in Mask mode to 72 Hz (VIDEO)			
15	F75	FREQUENCY VIDEO 75Hz	Setting the frequency in Mask mode to 75 Hz (VIDEO)			
16	FAJ	FINISH ADJUSTMENT	Z-number F003 to 0003			
17	FCN	FOCUS NO	Turning the FOCUS function off			
18	FCY	FOCUS YES	Turning the FOCUS function on			
19	GAJ	GET ADJUSTMENT	Obtaining various adjustment values			
20	GPD	GET POWER-DOWN	Obtaining the power-down-point log			
21	GPW	GET PANEL WHITE BALANCE	Obtaining the panel white-balance adjustment values			
22	GS1	GET STATUS 1	Obtaining information on the unit, such as the software version			
23	GS2	GET STATUS 2	Obtaining information on the status of the unit, such as the temperature			
24	GSD	GET SHUT DOWN	Obtaining information on shutdown			
25	LNN	LOUDNESS NO	Turning the Loudness function off			
26	LNy	LOUDNESS YES	Turning the Loudness function on			
27	M00	MASK MODE 0	Turning the Mask function off			
28	M01	MASK MODE 1	White raster (change in luminance level)			
29	M02	MASK MODE 2	White raster--zigzag, exact reverse--scan--gray--white raster			
30	M03	MASK MODE 3	White raster--zigzag, exact reverse--scan--gray--white raster			
31	M10	MASK MODE 10	H ramp (slant 1)			
32	M11	MASK MODE 11	H ramp (slant 4)			
33	M12	MASK MODE 12	H ramp (slant 1 shifting)			
34	M13	MASK MODE 13	H ramp (slant 4 shifting)			
35	M14	MASK MODE 14	V ramp (slant 1)			
36	M15	MASK MODE 15	Slanting ramp			
37	M20	MASK MODE 20	Window (for WB adjustment, Hi = 870, Lo = 102)			
38	M21	MASK MODE 21	Window (for WB adjustment, Hi = 1023, Lo = 102)			
39	M22	MASK MODE 22	Window (for measuring the peak luminance during WB adjustment, Hi = 1023)			
40	M23	MASK MODE 23	Window (for measuring the peak luminance, Hi = 1023, 4%)			
41	M24	MASK MODE 24	Window (for measuring the peak luminance, Hi = 1023, 1.25%)			
42	M25	MASK MODE 25	Window (vertical line with 1/7-width for measuring the stress)			
43	M26	MASK MODE 26	Window (magenta, green, and stripe for check)			
44	M27	MASK MODE 27	Window (green,magenta, and stripe for checker)			
45	M28	MASK MODE 28	Window (black & white [1 x 8], checker, for EMG check)			
46	M29	MASK MODE 29	Window (for WB adjustment, magenta = 512, yellow = 512)			
47	M2E	MASK MODE 2E	Wiper for erasing afterimage			
48	M2F	MASK MODE 2F	Mask for warning of cable disconnection			
49	M30	MASK MODE 30	ColorBar			
50	M31	MASK MODE 31	Slanted lines (for checking cable disconnection)			
51	M51	MASK MODE 51	Raster-white			
52	M52	MASK MODE 52	Raster-red			
53	M53	MASK MODE 53	Raster-green			
54	M54	MASK MODE 54	Raster-blue			
55	M55	MASK MODE 55	Raster-black			
56	M56	MASK MODE 56	Raster-cyan 1023			
57	M57	MASK MODE 57	Raster-magenta 1023			
58	M58	MASK MODE 58	Raster-yellow 1023			
59	M59	MASK MODE 59	Raster-cyan 274			
60	M60	MASK MODE 60	Raster-flesh color_50			
61	M61	MASK MODE 61	Raster-light purple_50			
62	M62	MASK MODE 62	Raster-sky blue_50			
63	M63	MASK MODE 63	Raster-red 779			
64	M64	MASK MODE 64	Raster-cyan 218			
65	M65	MASK MODE 65	Raster-cyan 448			

A	Command Name			Function	Validity of direct numeric input		
					Validity	Lower limit	Upper limit
66	M66	MASK MODE 66	Raster-flesh color_43				
67	M67	MASK MODE 67	Raster-red 640				
68	M68	MASK MODE 68	Raster-magenta 98				
69	M69	MASK MODE 69	Raster-sky blue 1_43				
70	M70	MASK MODE 70	Raster-sky blue 2_43				
71	M71	MASK MODE 71	Raster-light purple_43				
72	M72	MASK MODE 72	Raster-blue 60				
73	M73	MASK MODE 73	Raster-gray 512 (reservation)				
74	M74	MASK MODE 74	Raster-gray 512 (reservation)				
B	84	MTN	MUTE NO	Canceling panel muting			
	85	MTY	MUTE YES	Panel muting			
	86	NMN	NEGATIVE MODE NO	Canceling negative-positive inversion display			
	87	NMY	NEGATIVE MODE YES	Negative-positive inversion display			
	88	PBH	PANEL BLUE HIGH	Panel white-balance adjustment: Blue highlight	<input type="radio"/>	000	511
	89	PBL	PANEL BLUE LOW	Panel white-balance adjustment: Blue low light	<input type="radio"/>	000	999
	90	PCN	PC RGB NO	Setting input-signal type to video			
	91	PCY	PC RGB YES	Setting input-signal type to PC			
	92	PGH	PANEL GREEN HIGH	Panel white-balance adjustment: Green highlight	<input type="radio"/>	000	511
	93	PGL	PANEL GREEN LOW	Panel white-balance adjustment: Green low light	<input type="radio"/>	000	999
	94	PLA	BRIGHT ENHANCE A	Center luminance-compensation function on (no correspondence with APL)			
	95	PLB	BRIGHT ENHANCE B	Center luminance-compensation function on (in correspondence with APL)			
	96	PLN	BRIGHT ENHANCE NO	Center luminance-compensation function off			
	97	POF	POWER OFF	Power off			
C	98	PON	POWER ON	Power on			
	99	PRH	PANEL RED HIGH	Panel white balance adjustment-red highlight	<input type="radio"/>	000	511
	100	PRL	PANEL RED LOW	Panel white-balance adjustment: Red low light	<input type="radio"/>	000	999
	101	SCN	SYSTEM CABLE NO	Prohibiting monitoring of cable-disconnection detection			
	102	SCY	SYSTEM CABLE YES	Permitting monitoring of cable-disconnection detection			
	103	SRN	SRS NO	SRS function off			
	104	SRY	SRS YES	SRS function on			
	105	TBN	TRUBASS NO	TruBass function off			
	106	TBY	TRUBASS YES	TruBass function on			
	107	TRE	TREBLE ADJUSTMENT	Audio treble adjustment	<input type="radio"/>	121	135
	108	TSN	TRAP SW NO	Prohibiting detection of opening of the rear case			
	109	TSY	TRAP SW YES	Permitting detection of opening of the rear case			
D	110	UAJ	UN-ADJUSTMENT	Z-number 0003 to F003			
	111	VOF	Vofs ADJUSTMENT	Vofs voltage reference-value adjustment	<input type="radio"/>	000	255
	112	VOL	VOLUME	Audio volume adjustment	<input type="radio"/>	000	060
	113	VSU	Vsus ADJUSTMENT	Vsus voltage reference-value adjustment	<input type="radio"/>	000	255
	114	XD1	XSUS-D-1	XSUS-D-1 adjustment	<input type="radio"/>	000	255
	115	XD2	XSUS-D-2	XSUS-D-2 adjustment	<input type="radio"/>	000	255
	116	XU1	XSUS-U-1	XSUS-U-1 adjustment	<input type="radio"/>	000	255
	117	XU2	XSUS-U-2	XSUS-U-2 adjustment	<input type="radio"/>	000	255
	118	YD1	YSUS-D1-1	YSUS-D1-1 adjustment	<input type="radio"/>	000	255
	119	YD2	YSUS-D1-2	YSUS-D1-2 adjustment	<input type="radio"/>	000	255
	120	YD3	YSUS-D2-1	YSUS-D2-1 adjustment	<input type="radio"/>	000	255
	121	YD4	YSUS-D2-2	YSUS-D2-2 adjustment	<input type="radio"/>	000	255
	122	YU1	YSUS-U-1	YSUS-U-1 adjustment	<input type="radio"/>	000	255
	123	YU2	YSUS-U-2	YSUS-U-2 adjustment	<input type="radio"/>	000	255

■ Command description

Command	Function
GAJ	Obtaining various adjustment values
GPD	Obtaining power-down-point log
GPW	Obtaining panel white-balance adjustment values
GS1	Obtaining information on the unit, such as the software version
GS2	Obtaining information on the status of the unit
GSD	Obtaining information on shutdown

GAJ: Obtaining data on ABL setting values, electronic-control adjustment values, and drive-system adjustment values

Order	Data	Size	Remarks
1	ABL table currently used	3 bytes	AB1 - AB3
2	Upper limit of power	3 bytes	000 - 255
3	Vsus adjustment value	3 bytes	000 - 255
4	Vofs adjustment value	3 bytes	000 - 255
5	X-SUS-U1 adjustment value (XU1)	3 bytes	000 - 255
6	X-SUS-U2 adjustment value (XU2)	3 bytes	000 - 255
7	X-SUS-D2 adjustment value (XD2)	3 bytes	000 - 255
8	X-SUS-D1 adjustment value (XD1)	3 bytes	000 - 255
9	Y-SUS-U1 adjustment value (YU1)	3 bytes	000 - 255
10	Y-SUS-U2 adjustment value (YU2)	3 bytes	000 - 255
11	Y-SUS-D1-2 adjustment value (YD2)	3 bytes	000 - 255
12	Y-SUS-D1-1 adjustment value (YD1)	3 bytes	000 - 255
13	Y-SUS-D2-2 adjustment value (YD4)	3 bytes	000 - 255
14	Y-SUS-D2-1 adjustment value (YD3)	3 bytes	000 - 255

Note: Ignore the 2-byte checksum at the end.

GPD: Obtaining power-down-point log on the panel

Order	Data	Size	Remarks
1	Latest "1st PD" data	1 byte	0-C or F
2	Latest "2nd PD" data	1 byte	0-C or F
3	Data of hour meter for the latest PD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
4	Data on temperature for the latest PD (TEMP1)	3 bytes	000 - 255
5	Second latest "1st PD" data	1 byte	0-C or F
6	Second latest "2nd PD" data	1 byte	0-C or F
7	Data of hour meter for the second latest PD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
8	Data on temperature for the second latest PD (TEMP1)	3 bytes	000 - 255
9	Third latest "1st PD" data	1 byte	0-C or F
10	Third latest "2nd PD" data	1 byte	0-C or F
11	Data of hour meter for the third latest PD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
12	Data on temperature for the third latest PD (TEMP1)	3 bytes	000 - 255
13	Fourth latest "1st PD" data	1 byte	0-C or F
14	Fourth latest "2nd PD" data	1 byte	0-C or F
15	Data of hour meter for the fourth latest PD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
16	Data on temperature for the fourth latest PD (TEMP1)	3 bytes	000 - 255
17	Fifth latest "1st PD" data	1 byte	0-C or F
18	Fifth latest "2nd PD" data	1 byte	0-C or F
19	Data of hour meter for the fifth latest PD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
20	Data on temperature for the fifth latest PD (TEMP1)	3 bytes	000 - 255
21	Sixth latest "1st PD" data	1 byte	0-C or F
22	Sixth latest "2nd PD" data	1 byte	0-C or F
23	Data of hour meter for the sixth latest PD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
24	Data on temperature for the sixth latest PD (TEMP1)	3 bytes	000 - 255
25	Seventh latest "1st PD" data	1 byte	0-C or F
26	Seventh latest "2nd PD" data	1 byte	0-C or F
27	Data of hour meter for the seventh latest PD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
28	Data on temperature for the seventh latest PD (TEMP1)	3 bytes	000 - 255
29	Eighth latest "1st PD" data	1 byte	0-C or F
30	Eighth latest "2nd PD" data	1 byte	0-C or F
31	Data of hour meter for the eighth latest PD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
31	Data on temperature for the eighth latest PD (TEMP1)	3 bytes	000 - 255

Notes: • Ignore the 2-byte checksum at the end. • For details, see "Description on power-down."

A

B

C

D

E

F

• Description on power-down

Data	Power-down Point
0	No power-down
1	Not used (for MR-POWER)
2	Panel-POWER SUPPLY
3	SCAN
4	SCN-5V
5	Y-DRIVE
6	Y-DCDC
7	Y-SUS
8	ADR
9	X-DRIVE
A	X-DCDC
B	X-SUS
C	DIG-DCDC
D	Reservation
E	Reservation
F	Power-down point unidentified

GPW: Obtaining panel white-balance adjustment values

Order	Data	Size	Remarks
1	W/B table currently used	3 bytes	PT1 - PT3
2	Main contrast	4 bytes	0000 - 0511
3	Red contrast of W/B adjustment value	4 bytes	0000 - 0511
4	Green contrast of W/B adjustment value	4 bytes	0000 - 0511
5	Blue contrast of W/B adjustment value	4 bytes	0000 - 0511
6	Main brightness	4 bytes	0000 - 1023
7	Red brightness of W/B adjustment value	4 bytes	0000 - 1023
8	Green brightness of W/B adjustment value	4 bytes	0000 - 1023
9	Blue brightness of W/B adjustment value	4 bytes	0000 - 1023

Note: Ignore the 2-byte checksum at the end.

GS1: Obtaining information on the unit, such as the software version (1)

Order	Data	Size
1	Display data	3 bytes
2	Version of the module microcomputer	4 bytes
3	IC4-MANTA version	4 bytes
4	Sequence version (43VIDEO)	4 bytes
5	Sequence version (43PC)	4 bytes
6	Sequence version (50VIDEO)	4 bytes
7	Sequence version (50PC)	4 bytes
8	Version of the IF microcomputer	4 bytes
9	Version of the main microcomputer	4 bytes
10	IC3-MANTA version	4 bytes
11	Version of the OSD	4 bytes

Note: Ignore the 2-byte checksum at the end.

(Reference) GS2: Obtaining information on the status of the unit

Order	Data	Size	Remarks
1	Notifying that the unit is shifting to Standby mode	1 byte	1: OK for shifting to Standby
2	Whether or not the main unit has been adjusted	1 byte	0: Adjusted, 1: Not adjusted
3	With/without backup for adjustment values	1 byte	0: With backup, 1: Without backup
4	Data on power-down	2 bytes	1st byte: 1stPD, 2nd byte: 2ndPD
5	Data on temperature (TEMP1)	3 bytes	0: Normal, 1: SD process completed, 2: In the process of SD warning
6	Abnormality in RST2 (power decrease of DC-DC converter)	1 byte	0: Normal, 1: SD process completed, 2: In the process of SD warning
7	IC4 communication failure	1 byte	0: Normal, 1: SD process completed, 2: In the process of SD warning
8	EEPROM communication failure	1 byte	0: Normal, 1: SD process completed, 2: In the process of SD warning
9	Audio failure	1 byte	0: Normal, 1: SD process completed, 2: In the process of SD warning
10	Volume IC communication failure	1 byte	0: Normal, 1: SD process completed, 2: In the process of SD warning
11	Backup ROM communication failure	1 byte	0: Normal, 1: SD process completed, 2: In the process of SD warning
12	Data on temperature (TEMP1) not obtained	1 byte	0: Normal, 1: SD process completed, 2: In the process of SD warning
13	Operational status of panel protection mechanism	1 byte	0: Protection mechanism not activated, 1: Protection mechanism activated
14	Reservation	9 bytes	*****
15	Hour meter	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute

Notes: • Ignore the 2-byte checksum at the end.

• The data expected to be used for service may be "5. Data on temperature" and "15. Hour meter".

GS6: Virsion (2)

Order	Data	Size
1	Display data	3 bytes
2 (*1)	Version of DTV	4 bytes
3 (*1)	Version of CC	4 bytes
4 (*2)	PC - CARD	8 bytes
5 (*2)	TEXT	60 bytes

(*1) PU ONLY : Order 4,5 **

(*2) PE ONLY : Order 2,3 **

GSD: Obtaining information on shutdown

Order	Data	Size	Remarks
1	Latest SD data	1 byte	0 - 5
2	Latest SD subcategory data	1 byte	0 - 2
3	Data of hour meter for the latest SD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
4	Data on temperature for the latest SD (TEMP1)	3 bytes	000 - 255
5	Second latest SD data	1 byte	0 - 5
6	Second latest SD subcategory data	1 byte	0 - 2
7	Data of hour meter for the second latest SD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
8	Data on temperature for the second latest SD (TEMP1)	3 bytes	000 - 255
9	Third latest SD data	1 byte	0 - 5
10	Third latest SD subcategory data	1 byte	0 - 2
11	Data of hour meter for the third latest SD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
12	Data on temperature for the third latest SD (TEMP1)	3 bytes	000 - 255
13	Fourth latest SD data	1 byte	0 - 5
14	Fourth latest SD subcategory data	1 byte	0 - 2
15	Data of hour meter for the fourth latest SD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
16	Data on temperature for the fourth latest SD (TEMP1)	3 bytes	000 - 255
17	Fifth latest SD data	1 byte	0 - 5
18	Fifth latest SD subcategory data	1 byte	0 - 2
19	Data of hour meter for the fifth latest SD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
20	Data on temperature for the fifth latest SD (TEMP1)	3 bytes	000 - 255
21	Sixth latest SD data	1 byte	0 - 5
22	Sixth latest SD subcategory data	1 byte	0 - 2
23	Data of hour meter for the sixth latest SD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
24	Data on temperature for the sixth latest SD (TEMP1)	3 bytes	000 - 255
25	Seventh latest SD data	1 byte	0 - 5
26	Seventh latest SD subcategory data	1 byte	0 - 2
27	Data of hour meter for the seventh latest SD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
28	Data on temperature for the seventh latest SD (TEMP1)	3 bytes	000 - 255
29	Eighth latest SD data	1 byte	0 - 5
30	Eighth latest SD subcategory data	1 byte	0 - 2
31	Data of hour meter for the eighth latest SD	7 bytes	1st-5th byte: Hour, 6th-7th byte: Minute
32	Data on temperature for the eighth latest SD (TEMP1)	3 bytes	000 - 255

Notes: • Ignore the 2-byte checksum at the end.
• For details, see "Description on shutdown".

• Description of shutdown

Data	Factors of shutdown
0	No abnormality
1	IC4
2	Module microcomputer IIC
3	Abnormality in RST2 (power decrease of DC-DC converter)
4	Panel having high temperature
5	Audio failure (speakers short-circuited)
6	Reservation
7	Reservation
8	Reservation
9	Reservation
A	Reservation
B	Reservation
C	Reservation
D	Reservation
E	Reservation
F	Reservation

• Module microcomputer IIC: Data on SD subcategory


Data	Factors of shutdown
0	No subcategory
1	EEPROM (DIGITAL VIDEO Assy : IC5206)
2	EEPROM (PANEL IF Assy : IC4002)
3	Volume IC
4	Reservation
5	Reservation
6	Reservation
7	Reservation
8	Reservation
9	Reservation
A	Reservation
B	Reservation
C	Reservation
D	Reservation
E	Reservation
F	Reservation

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 PCB LOCATION

B

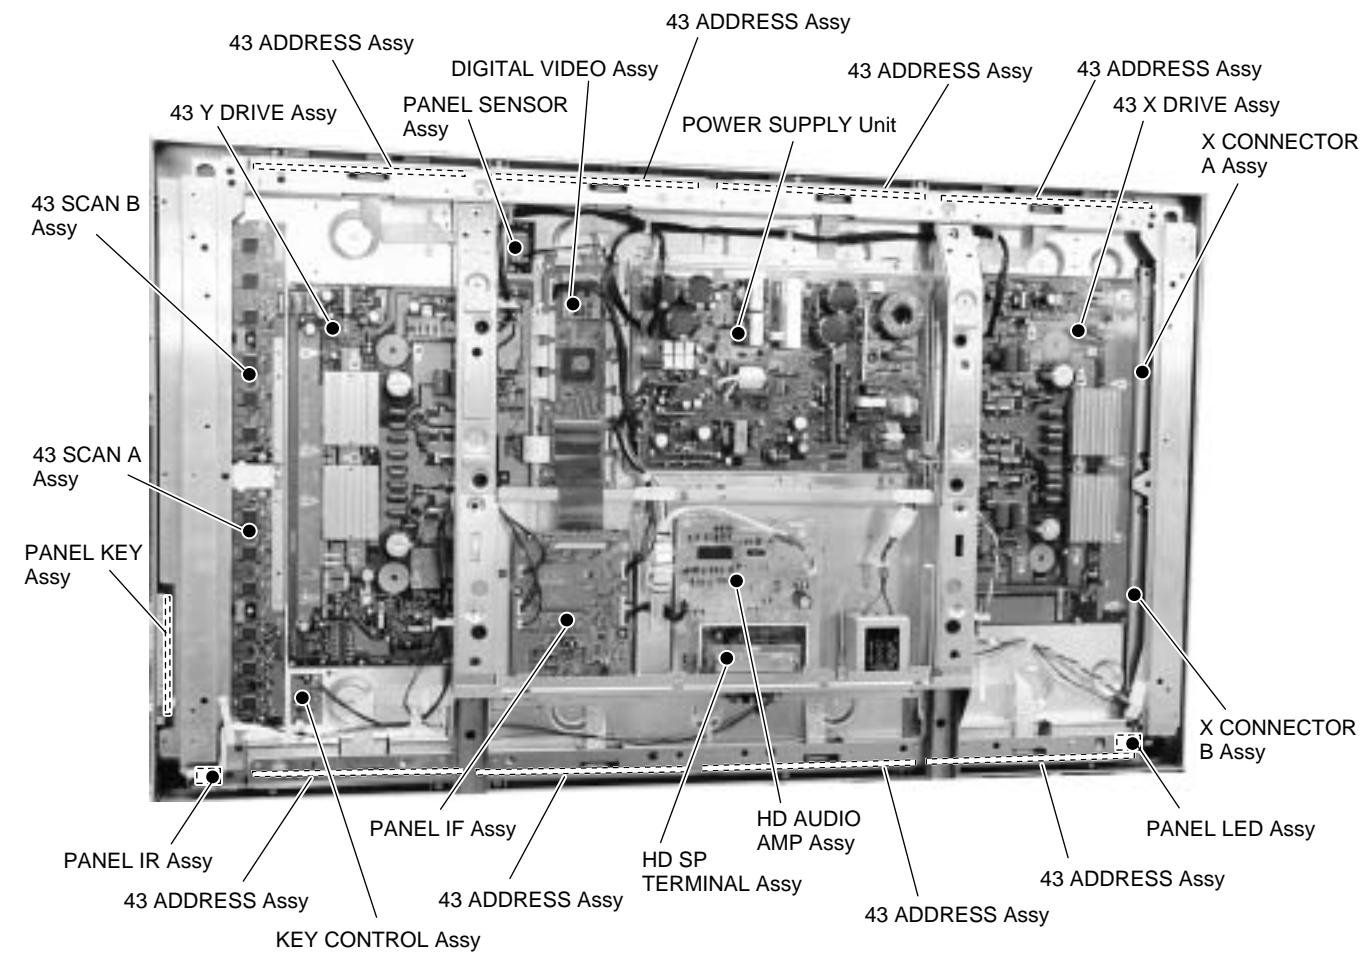

● Rear view

7.1.2 DIAGNOSIS OF SHUTDOWN/POWER-DOWN INDICATED BY LEDs

- Operation statuses indicated by LEDs

	MR-LED	PANEL-LED	
Standby	RED GREEN		
Power on	RED GREEN		
MR-AC power off	RED GREEN	1.0S 1.0S	
P-AC power off	RED GREEN	1.0S 1.0S 1.0S 1.0S	
MR power-down	RED GREEN	0.5S 3.0S	
MR shutdown	RED GREEN	0.5S 0.5S 0.5S 3.0S	
MR modification	RED GREEN		
P-power-down	RED GREEN	0.5S 0.5S 0.5S 3.0S	
P-shutdown	RED GREEN	0.5S 0.5S 0.5S 3.0S	
P-modification	RED GREEN		
Disconnection of the system cable	RED GREEN	1.0S 1.0S 1.0S 1.0S	
Power management when the Media Receiver is not connected with the PDP	RED GREEN	1.0S 1.0S	

Note: "P" stands for panel.

[Solid grey box] : Lit in red

[Light grey box] : Lit in green

[White box] : Not lit

• Identification of locations having abnormality by the number of times the LEDs flash

■ On Shutdown and power-down

Shutdown

- Operation: When the microcomputer detects any abnormality, it forcibly turns off the unit.
- LED indication: The green LED flashes.

Power-down

- Operation: When the unit is in emergency status, a protection circuit is activated, and the power is turned off.
- LED indication: The red LED flashes.


Category	MR-LED		PANEL-LED		Content	Unit's operation	Warning indication when the MR is connected
	STB	ON	STB	ON			
SD	Lit			1 time	Communication failure of the panel-drive IC	Immediate shutdown	
	Lit			2 times	Communication failure of the module IIC	Immediate shutdown	
	Lit			3 times	Power decrease of the digital DC-DC converter	Immediate shutdown	
	Lit			4 times	Panel having high temperature	Shutdown 30 seconds after warning	Powering off. Internal temperature too high Check temperature around PDP. Check temperature around media receiver. [SD04]
	Lit			5 times	Audio failure	Shutdown 3 seconds after warning	Powering off. Internal protection circuits activated, Is there a short in speaker cable ? [SD05]
	6 times	Lit			Communication failure of the module microcomputer	Immediate shutdown	
	7 times	Lit			Main 3-wire serial communication in failure	Immediate shutdown	
	8 times	Lit			Communication failure of the main IIC	Immediate shutdown	
	9 times	Lit			Communication failure of the main microcomputer	Immediate shutdown	
	10 times	Lit			Fan in failure	Immediate shutdown	
D	11 times	Lit			MR or unit having higher temperature	Shutdown 30 seconds after warning	Powering off. Internal temperature too high Check temperature around PDP. Check temperature around media receiver. [SD11]
	12 times	Lit			Communication failure of the digital tuner	Immediate shutdown	
	13 times	Lit			MR-ASIC power (DC-DC) in failure	Immediate shutdown	
	14 times	Lit			Communication failure of IF-EEPROM	Immediate shutdown	
	15 times	Lit					
PD	1 time		Lit		MR power supply	Immediate power-down	
	Lit	2 times			Panel-POWER SUPPLY	Immediate power-down	
	Lit	3 times			SCAN	Immediate power-down	
	Lit	4 times			SCAN-5V	Immediate power-down	
	Lit	5 times			Y-DRIVE	Immediate power-down	
	Lit	6 times			Y-DCDC	Immediate power-down	
	Lit	7 times			Y-SUS	Immediate power-down	
	Lit	8 times			ADDRESS	Immediate power-down	
	Lit	9 times			X-DRIVE	Immediate power-down	
	Lit	10 times			X-DCDC	Immediate power-down	
	Lit	11 times			X-SUS	Immediate power-down	
	Lit	12 times			DIGITAL-DCDC	Immediate power-down	
	Lit	13 times			UNKNOWN *	Immediate power-down	
	Lit	14 times					
	Lit	15 times					

* If the unit cannot identify which protection circuit was activated, even if a power-down had been detected, the red LED may flash 15 times.

• Block diagram of the shutdown signal system

Note:


The figures ① - ⑤ indicate the number of times the LED flashes when shutdown occurs in the corresponding route.

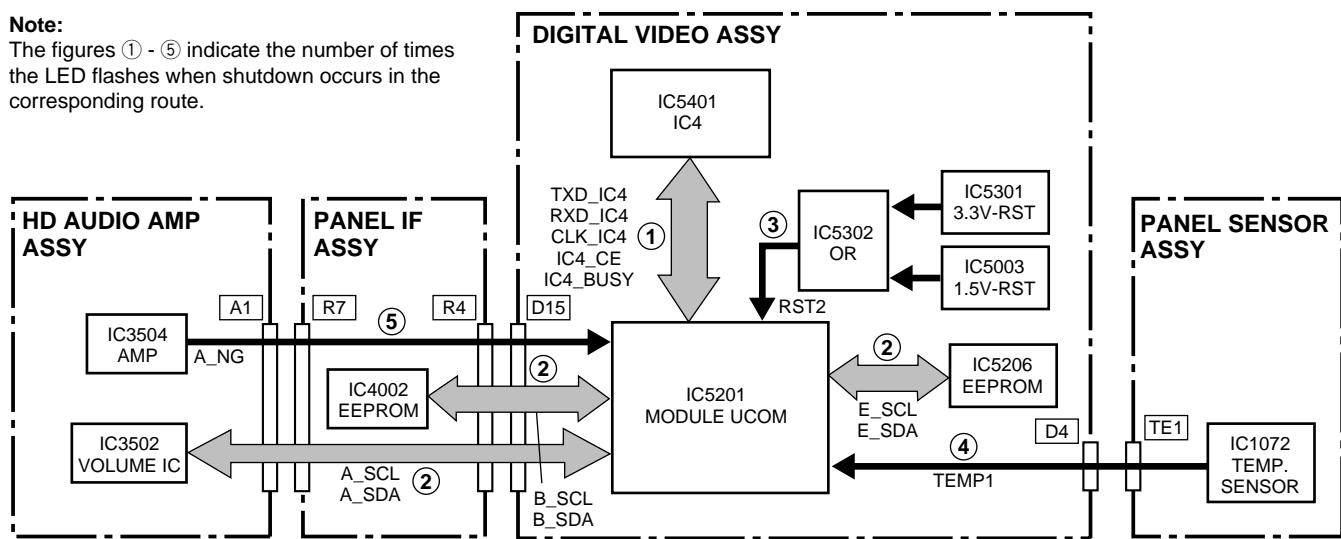

• Diagnosis of shutdown

LED	SD Circuit in Operation	Defective Assy	Reason for Shutdown	Point to be Checked	Possible Defective Part	Remarks
1 time	Communication failure of the panel-drive IC	DIGITAL VIDEO	Communication failure of IC4	IC4 BLOCK, PANEL FLASH BLOCK	IC5401, IC5305	
			Writing failure of IC4			After turning the unit on again, check if the data on the version can be read with the GS1 command.
2 times	Communication failure of the module IIC (Check the shutdown subcategory on the Factory menu.)	DIGITAL VIDEO	Communication failure of the EEPROM (4K)	MODULE UCOM BLOCK	IC5206	
		PANEL IF	Communication failure of the EEPROM (2K)	PANEL IF BLOCK	IC4002	
			Disconnection of cable	CN4009 - CN3501		Check if the cable is disconnected or not securely connected.
		HD AUDIO	Defective volume IC	HD AUDIO AMP Assy	IC3502	
			Defective 114-pin FPC	CN4004 - CN5001	ADY1081	Check if the 114-pin FPC is broken or not securely connected.
3 times	Power decrease of DIGITAL-DC-DC	DIGITAL VIDEO	Defective DC-DC converter	DIGITAL DD CON BLOCK	U5601	Check if 3.3 V, 2.5 V, and 1.5 V are activated.
			Defective RST IC	PANEL FLASH BLOCK	IC5301, IC5302, IC5303	
		POWER SUPPLY	No startup of 12 V			
4 times	Panel having higher temperature	DIGITAL VIDEO	Cable disconnected	CN5202 - CN1071		
			Panel having higher temperature	Surrounding temperature		Shutdown occurs when the sensor temperature becomes 77°C or more (PDP-434P) or 83°C or more (PDP-504P).
5 times	Audio failure		Speaker short-circuited	Speaker terminals		Check if the speaker cables are in contact with the chassis, etc.
		HD AUDIO	Defective AMP IC	HD AUDIO AMP ASSY	IC3504	
		HD AUDIO	Disconnection of cable	CN4009 - CN3501		Check if the cable is disconnected or not securely connected.

- Block diagram of the power-down signal system

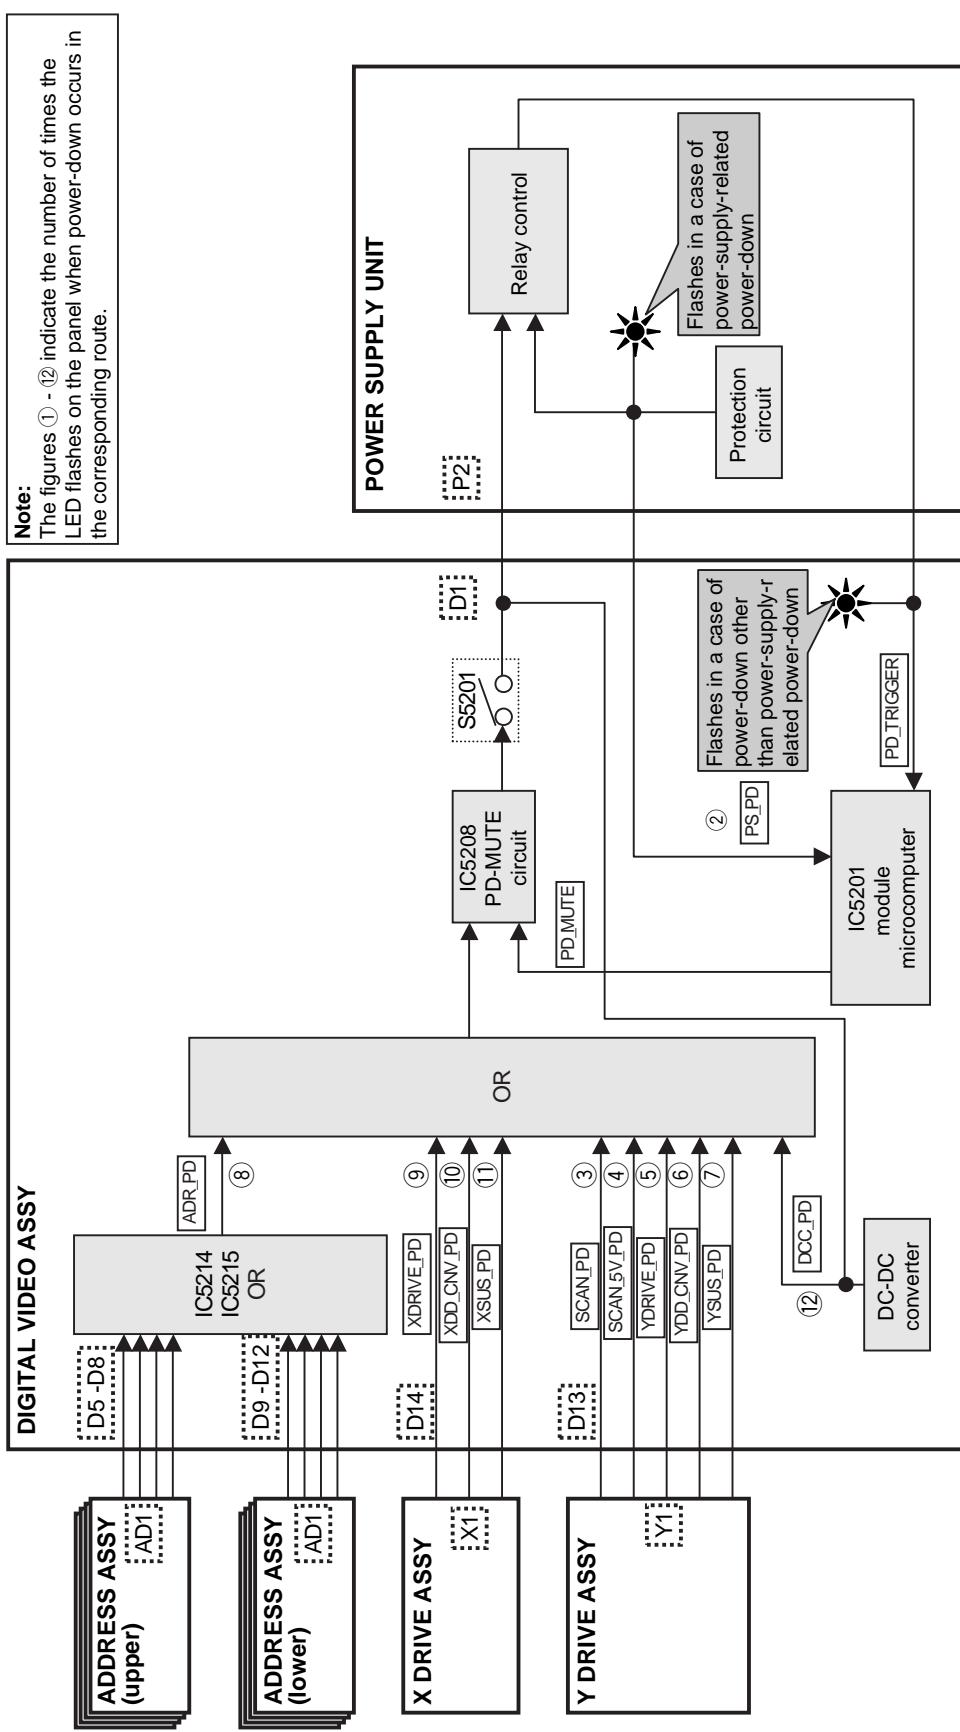

• Power-down diagnosis (defective points)

PD Circuit in Operation	Defective Assy	Reason for Power-down	Point to be Checked	Possible Defective Part	Remarks
1 MR POWER					
2 POWER	POWER SUPPLY Unit				
5	43 X DRIVE Assy 43 Y DRIVE Assy	VVSU UV/P VVSU UV/P	X SUS BLOCK Y SUS BLOCK	IC1203 - IC1207 (mask module) IC2303 - IC2307 (mask module)	If the elapsed time from relay-on until the LED in the power supply unit lights is about 2-4 seconds, the defective assembly may be the 43 X or Y DRIVE.
3 SCAN	43 SCAN A, B Assy or Y 43 DRIVE Assy	VH UV/P VH UV/P	SCAN IC VH DC/DC	SCAN IC IC2401, IC2402, IC2410, L2401	
4 SCN-5V	43 SCAN A, B Assy or 43 Y DRIVE Assy	Disconnection of cable detected IC5V UV/P	CN2001, CN2301 CN2101, CN2102		
5 Y-DRIVE	43 Y DRIVE Assy	+16.5V OCP	IC5V DC/DC Y SUS BLOCK	IC2403, IC2411 IC2303 - IC2307 (mask module), IC2301, IC2304, R2309	
6 Y-DCDC	43 Y DRIVE Assy	VOFS UV/P VOFS OVP VH OVP	VOFS DC/DC VOFS DC/DC VH DC/DC	IC2404, IC2412, Q2404, Q2407 IC2404, IC2412 IC2402, IC2410	
7 Y-SUS	43 Y DRIVE Assy DIGITAL VIDEO Assy	Power-down caused by detection of middle-point voltage Power-down caused by detection of middle-point voltage	Y RESONANCE BLOCK DIGITAL VIDEO Assy	Q2202, Q2203, Q2214, Q2205, Q2206, Q2208, Q2209, Q2211, Q2212, IC2201, IC2202, Control signal series resistors IC5401, Control signal series resistors	
8 ADRS	43 ADDRESS Assy	Disconnection of cable detected Power-down caused by detection of a power surge	CN1501 ADR RESONANCE BLOCK	R1631, Q1601, D1602 R1602, C1609, D1606, D1607	
9 X-DRIVE	43 X DRIVE Assy	Power-down caused by detection of middle-point voltage +16.5V OCP	ADR RESONANCE BLOCK CN1001, CN1201 X SUS BLOCK	CN1001, CN1201 IC1203, IC1207 (mask module), IC1204, IC1206, R1230 Q1205, R1226, R1251	
10 X-DCDC	43 X DRIVE Assy	VRN OVP VRN UV/P	VRN DC/DC VRN DC/DC	IC1403, IC1404 IC1402, IC1403, IC1404 X SUS BLOCK	
11 X-SUS	43 X DRIVE Assy DIGITAL VIDEO Assy	Power-down caused by detection of middle-point voltage	X RESONANCE BLOCK	Q1102, Q1103, Q1114, Q1105, Q1106, Q1108, Q1109, Q1111, Q1112, IC1101, IC1102, Control signal series resistors	OVP : Over Voltage Protection UV : Under Voltage Protection OCP : Over Current Protection
12 DIG-DCDC	DIGITAL VIDEO Assy	DCDC +3.3V, +1.5V OVP	DIGITAL VIDEO Assy DC DC CONVERTER BLOCK	IC5401, Control signal series resistors U5601 (DC DC CONVERTER Module)	

7.1.3 DIAGNOSIS WITH THE AID OF FACTORY MODE

• Diagnosis with the aid of Factory mode

A When the Media Receiver is connected, the power-down and shutdown logs can be referred to with OSD. Only the items useful when servicing the PDP-434PU/PDP-504PU are described here.

■ How to enter Factory mode using the remote control unit

Please refer to the technical documentation (Service knowhow).

■ Power-down log (INFORMATION-PANEL PD)

The last 8 power-down records are held, with the latest power-down displayed at the top. In the FIRST column, the location where the PD circuit was activated first (location indicated by flashing of the LED during power-down) is indicated, and in the SECOND column, the location where the PD circuit was activated second is indicated.

B **Note:** There may not be a SECOND PD.

	1	5	10	15	20	25	30	35	40
1	INFORMATION				IN1-013-NTV-ST1				
5	PANEL PD								
	FIRST				SECOND				
10	1	X-DRV	-----		00523H51M				
15	2	Y-SUS	Y-DCDC		00275H42M				
20	3	SCAN	-----		00090H50M				
25	4	Y-DCDC	-----		00043H03M				
30	5	SCN-5V	-----		00002H31M				
35	6	ADRS	-----		00000H07M				
40	7				H M				
45	8				H M				
50									
55									
60									
65									
70									
75									
80									
85									
90									
95									
100									

■ Shutdown log (INFORMATION-PANEL SD)

C The last 8 shutdown records are held, with the latest shutdown displayed at the top. If a shutdown occurred because of "MD-IIC" (communication failure of the module microcomputer IIC), the subcategory is indicated to inform you of with which device the microcomputer was in the process of communicating when a failure occurred.

	1	5	10	15	20	25	30	35	40
1	INFORMATION				IN1-013-NTV-ST1				
5	PANEL PD								
	MAIN				SUB				
10	1	AUDIO	-----		00103H51M				
15	2	MD-IIC	VOLIC		00075H42M				
20	3	TEMP1	-----		00050H50M				
25	4	TEMP1	-----		00050H45M				
30	5				H M				
35	6				H M				
40	7				H M				
45	8				H M				
50									
55									
60									
65									
70									
75									
80									
85									
90									
95									
100									

[Data on MD-IIC subcategories]

OSD	Defective communication part
EROM4K	IC5206: Module microcomputer
EROM2K	IC4002: EEPROM for backup
VOLIC	IC3502-Volume IC

■ Data on temperature (INFORMATION-TEMPERATURE)

The data on the current temperatures are displayed.

The temperature at the PANEL SENSOR ASSY of the PDP-434PU/PDP-504PU is indicated as the TEMP 1 value (000-255), which should be converted using the following formula:

Current temperature ($^{\circ}$ C) $\approx 0.65 \times$ TEMP 1 value - 52

Note: Shutdown caused by high TEMP 1 value

PDP-434P: TEMP 1 value > 200 ($\approx 77^{\circ}$ C)

PDP-504P: TEMP 1 value > 209 ($\approx 83^{\circ}$ C)

	1	5	10	15	20	25	30	35	40
1	INFORMATION								
5	IN1-013-NTV-ST1								
10	TEMPERATURE								
15	TEMP 1 : 128								
16	TEMP 2 : 149								
10	FAN : 125								
15									
16									

Note: To update the data on temperature, use the Left and Right keys on the remote control unit.

[PANEL IF Assy-related diagnosis]

Symptom	Error indication	What is happening? (defective soldering, data-transmission error, etc.)	Which pin must be checked? (What is to be checked?)	PD or SD? (How many times does the LED flash?)	In which condition does the symptom tend to appear?
No power		Incomplete connection of the FPC (114-pin) between the PANEL IF and DIGITAL assemblies. Incomplete connection between the POWER SUPPLY and PANEL IF assemblies.			
Power interrupted	Alternate flashing of the red and green LEDs	The connection of the system cable may have been slightly loose.			
	Both the red and green LEDs lit	Incomplete connection of the system cable			
No display, abnormal display (abnormal LED)	Green LED flashes twice	Incomplete connection between the TRAP switch and the PANEL IF Assy. Rear case opened	Check if Pin 1 of the CN4006 is low.	SD after the green LED flashes twice	
	Green LED flashes four times.	Incomplete connection between the AUDIO and PANEL IF assemblies			
	Defective lighting	Panel having high temperature. Incomplete connection between the PANEL SENSOR and DIGITAL assemblies.			
No key operation effective		Incomplete connection between the LED and PANEL IF Assy			
Operation of the remote control unit is not effective		Incomplete connection between the PANEL KEY and KEY CONTROL assemblies	Check if a pulse is output from Pin 2 of the CN4852 when the KEY button is pressed.	Vibration added	
Sound interrupted		Incomplete connection between the KEY CONTROL and PANEL IF assemblies	Check if a pulse is output from Pin 5 of the CN4010 when the KEY button is pressed.		
		Incomplete connection between the PANEL IR and PANEL IF assemblies	Check if a pulse is output from Pin 3 of the CN4010 when the KEY button is pressed.		
		Incomplete connection between the AUDIO and PANEL IF assemblies			

[DIGITAL VIDEO Assy-related diagnosis]

Symptom	What is happening? (defective soldering, data-transmission error, etc.)	Possible defective part	Which pin must be checked? (What is to be checked?)
Abnormality in a one-eighth area of the screen		IC5401 (40-pin connector) of the ADDRESS Assy	Check if an abnormal area in the screen changes when the 40-pin FPC is replaced.
Abnormal screen	Data of every other dot are abnormal.	Incomplete connection of the 114-pin FPC	

7.1.4 CANCELING DETECTION BY THE TRAP SWITCH

• Canceling detection by the TRAP switch

Outline: For video data transmission from the Media Receiver to the plasma display, digital signals are used. Therefore, this unit adopts the HDCP (High-bandwidth Digital Content Protection) system for copyright protection. This unit is also provided with a detection switch (TRAP switch) that will prohibit the unit from being turned on again if the rear case of the unit is opened, in order to prevent the panel technology from being leaked out.

Function: To deactivate the detection of the TRAP switch

Purposes: 1. During production of this unit, adjusting with the rear cover opened is possible.
2. During servicing or repairing, diagnoses of the assemblies are possible while the power is on.

Methods: For setting, use RS232C commands:

TSN: Ignore the monitoring of the switch

CTM: Clear the detection log of the switch

TSY: Reactivate monitoring of the switch

Notes:

- The TRAP switch is located on the chassis (see Fig. below).
- Once rear case opening is detected, send the TSN and CTM commands.
- Because the TSN command is not stored in memory, monitoring of the switch can be reactivated by turning the unit off then back on.
- The same setting is possible using the Factory menu.
- Because the output of the DVI receiver is controlled by the physical setting of the TRAP switch, if the TRAP switch is set to OPEN, the DVI signal cannot be output even if the TSN command is sent.
- When the Media Receiver is connected, detection by the TRAP switch can be canceled by entering Factory mode.

• How to enter Factory mode using the remote control unit

Please refer to the technical documentation (Service knowhow).

• How to clear the detection log of the TRAP switch

In the INITIALIZE layer, hold the OSD key on the remote control unit pressed for at least 3 seconds.

• After a power-down, to cancel detection of the TRAP switch using only the remote control unit, follow the procedures below.

First, fix the TRAP switch to its depressed position. Set the drive ON/OFF switch in the DIGITAL VIDEO Assy to OFF. Then enter the Factory mode. Press the MUTE key four times, then hold the OSD key pressed for at least 3 seconds. Set the AC switch on the panel to OFF. The log is also cleared. Then set the drive ON/OFF switch to ON.

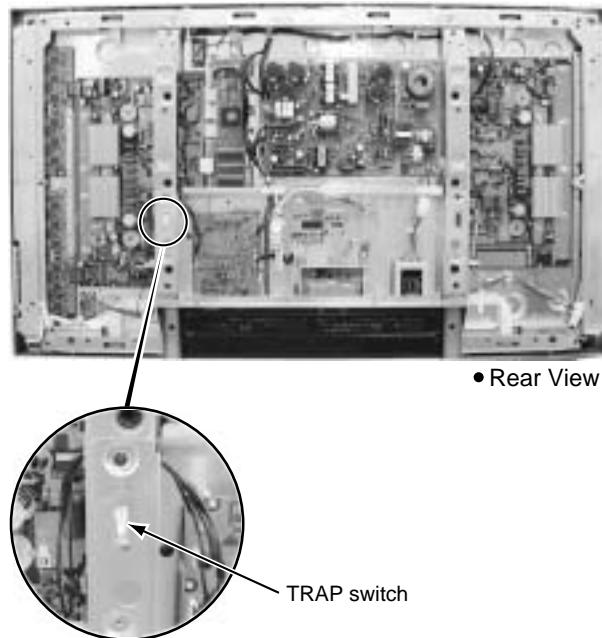



Fig. TRAP switch

7.1.5 OPERATION WHEN THE MEDIA RECEIVER IS NOT CONNECTED

A

As the connection conditions of the system cables (MDR cable, DVI cable) are usually detected, if no connection, such as cable disconnection, is detected, a warning indication (alternate flashing of the red and green areas) is displayed on the mask screen, and the red and green LEDs flash alternately. Then after about 30 seconds, the power is automatically turned off.

Note: Only when the power is turned on again, a warning indication on the mask screen restarts. During standby, only the red and green LEDs flash alternately.

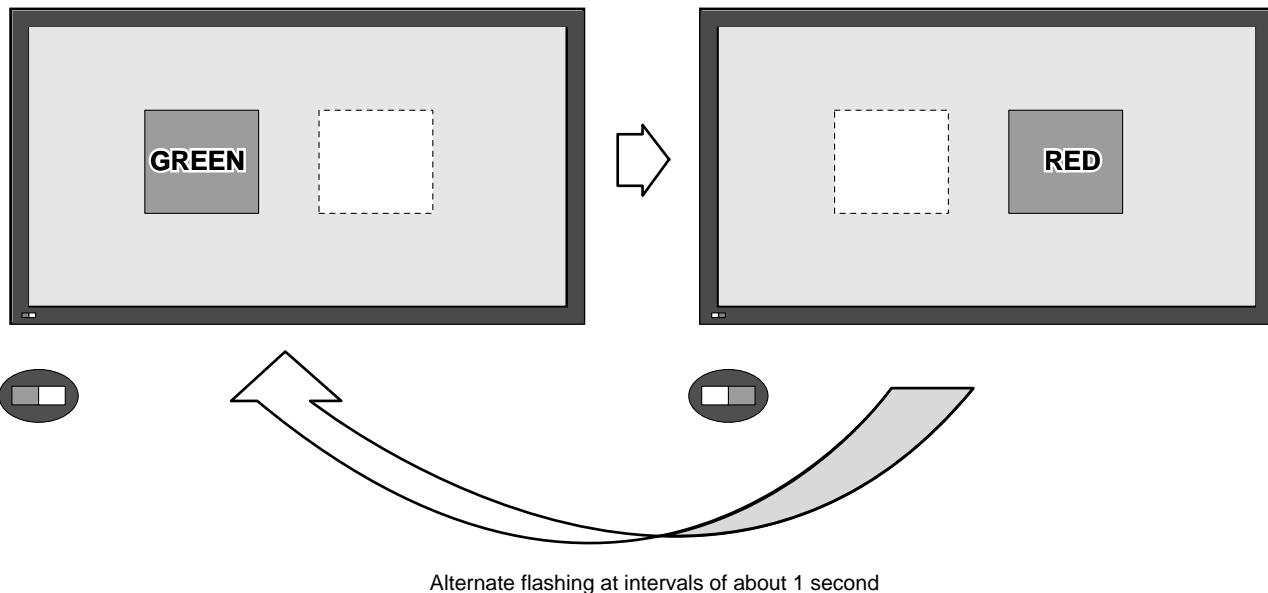

To operate the panel without the Media Receiver, there are the following two ways:

1. Operation-without-the-Media-Receiver mode

Input the "SCN" RS232C command. The status of the LEDs changes to that in normal operation mode.

Note: Turning the AC switch to OFF then ON also maintains this mode. However, once the unit is connected with the Media Receiver using the MDR cable, this mode is automatically canceled.

2. DVI mode

Turn the unit on while PC and DVI SG signals are being input with only the DVI connector connected. After a warning is displayed for about 5 seconds, the unit is ready to display the screen of the input signal. (Green LED lit)

Notes: • Although the output from XGA (43 inch) and WXGA (50 inch) can be input to the unit, this is not a mode open to general users.

(With some signals, errors such as power-down may occur.)

• If a DE signal from the SG is not input during DVI mode, the green LED flashes (at intervals of 2 sec) for about 8 seconds, then the unit shifts to Power Management mode (the green LED lights).

E 7.1.6 TEMPERATURE-COMPENSATION FUNCTION OF THE DRIVE-SYSTEM VOLTAGE

Function: To control the DRIVE-system voltage according to the temperature (Temperature compensation functions such that the voltage is lowered on the lower-temperature side and the voltage becomes higher on the higher-temperature side.)

Purpose: For improving the yield by compensating for the temperature characteristics of the panel

Note: Temperature compensation is performed only for the VSUS voltage, and not for the VOFS voltage. This compensation is controlled by the software.

F

7.1.7 POWER ON/OFF FUNCTION FOR THE LARGE-SIGNAL SYSTEM

Function: Only the power for the small-signal system (16.5 V, 12 V, and 6.5 V) is on, and the power for the large-signal system (VSUS, VADR) is off.

Usage:

1. Use when only an operational check for the small-signal system is required, such as when making repairs.
2. Use when rewriting of a program for each microcomputer is required.

Methods:

1. Set the slide switch (S5201) on the DIGITAL VIDEO Assy to its upper position (see Fig. below).
2. Send the "DRF" RS232C command to turn the large-signal system off.
3. Send the "DRN" RS232C command to turn the large-signal system on.

Notes:

- As the unit enters Power-Down and Muting On mode when Methods 1 and 2 are performed, and power-downs other than those caused by the power (PS_PD) and DC-DC-converter (DIGITAL_DC-DC) circuits are not activated.
- If the slide switch is set from OFF to ON while the power is on, a power-down will occur. Be sure to turn the power off before switching the slide switch.

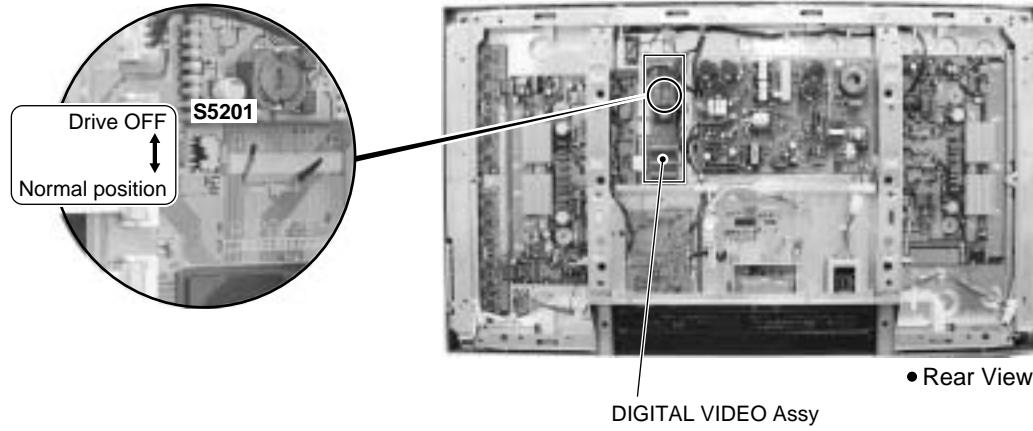


Fig. Drive OFF switch

7.1.8 BACKING UP THE ADJUSTMENT VALUES FOR THE MAIN UNIT

A ■ Outline


The data on the adjustment values for the main unit are stored in an EEPROM (IC5206, 4 kbits) on the DIGITAL VIDEO Assy. Part of the data (area A in the figure below) are automatically copied to an EEPROM (IC4002, 2 kbits) mounted on the PANEL IF Assy for backup. When the DIGITAL VIDEO Assy is replaced, the backup data on the adjustment values for the main unit stored in the PANEL IF Assy can be copied to the new DIGITAL VIDEO Assy, thus enabling you to omit newly performing adjustments on the main unit. The logs for the product (power-down log, etc.) can also be copied.

B ■ Data to be backed up in the digital EEPROM (area A)

- Margin adjustment values (Vsus, Vofset)
- Power upper-limit adjustment value (ABL)
- PANEL white-balance adjustment values
(PANEL-R HIGH, PANEL-G HIGH, PANEL-B HIGH, PANEL-R LOW, PANEL-G LOW, PANEL-B LOW)
- Drive waveform adjustment values
(X-SUS-U1, X-SUS-U2, X-SUS-D1, X-SUS-D2, Y-SUS-U1, Y-SUS-U2, Y-SUS-D1, Y-SUS-D2, Y-SUS-D3, Y-SUS-D4)
- Hour meter
- Pulse meter
- Number of times the power has been turned on
- PD/SD logs

C ■ Basic flow of automatic backup

Using a keyword, the data in areas A and B are judged as to whether they have been adjusted or not, then copying is performed.

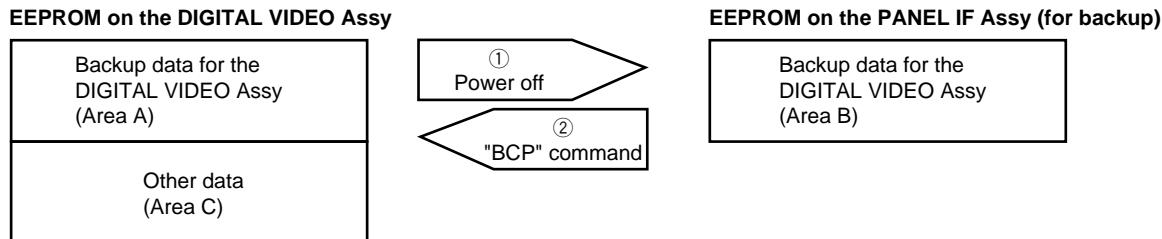


- ① The keyword on the DIGITAL VIDEO Assy is checked when the power is turned off, and if it is "adjusted", automatic backup is performed.
- ② If the keyword on the PANEL IF Assy (Area B) is "adjusted," copying can be performed with the "BCP" RS232C command.

D ■ Actual automatic backup operations

1. When the DIGITAL VIDEO Assy is replaced with an Assy for service

Changing of keywords is not required. Replace the DIGITAL VIDEO Assy with an Assy for service, and send the "BCP" RS232C command. Thus, the backup data in the EEPROM on the PANEL IF Assy are copied to the EEPROM on the DIGITAL VIDEO Assy for service.

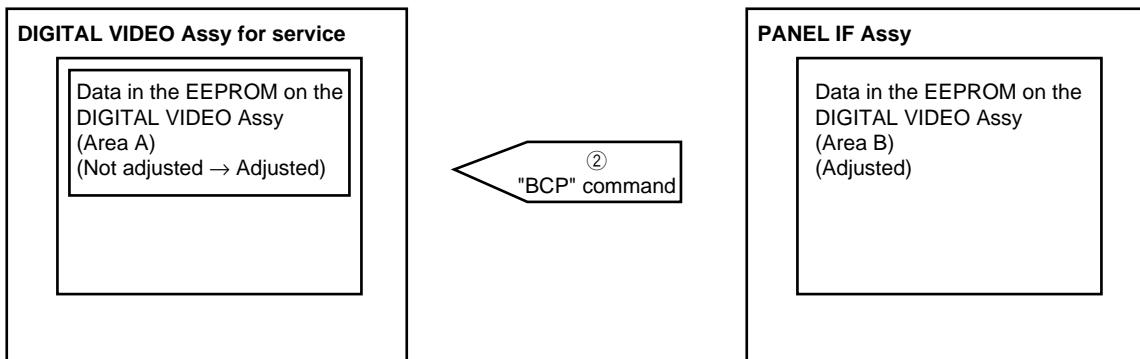

2. When a repaired DIGITAL VIDEO Assy is mounted on another unit (reuse of the repaired DIGITAL VIDEO Assy)

The keyword of the DIGITAL VIDEO Assy to be reused must be changed to "not adjusted" using the "UAJ" RS232C command.

Note 1: If a repaired DIGITAL VIDEO Assy is mounted in another unit (Unit 2) without this change of keyword, and the power to the unit 2 is turned off, the data in force before the repair of the DIGITAL VIDEO Assy will be copied to Area B of the PANEL IF Assy of Unit 2, overwriting the data necessary for Unit 2. Once overwritten, the original data will not be restored.

3. When a repaired DIGITAL VIDEO Assy is mounted on the original unit (reuse of the repaired DIGITAL VIDEO Assy)
Changing of keywords is not required. After the repaired DIGITAL VIDEO Assy is mounted in the original unit, the unit can operate with its latest adjustment values.

4. When both the DIGITAL VIDEO Assy and PANEL IF Assy are simultaneously replaced with other assemblies
The automatic backup function of this unit will not work properly.

Note 2: Readjustment of the main unit is required.

Note 3: After readjustment of the main unit, send the "FAJ" RS232C command to change the keyword of the DIGITAL VIDEO Assy to "adjusted." Thus, when the unit is turned off, automatic backup of adjustment data is performed properly.

Note 4: If readjustment of the main unit is totally impossible, it can be omitted by installing the EEPROM (IC5206, 4 kbits) originally mounted on the DIGITAL VIDEO Assy for service.

■ Miscellaneous

If the white balance (W/B) value is largely shifted because of aging, etc., W/B adjustment is required. (As this may be a rare case, the adjustment procedures are described below, just for your reference.)

[W/B-adjustment procedures]

The W/B adjustment can be performed with the RS232C commands with the Media Receiver not connected to this unit. The GGF1475 special communication tool and a Minolta CA-100 color difference meter are required.

- ① Enter Operation-without-the-Media-Receiver mode with the "SCN" RS232C command.
- ② Set the keyword for the DIGITAL VIDEO Assy to "not adjusted" with the "UAJ" RS232C command.
- ③ Obtain the current adjustment values in the two adjustment tables (see "6.2.1 RS232C commands").
 - Shifting to Table 1: Send the "M51" and "F60" commands. Obtaining the adjustment values: Send the "GPW" command.
 - Shifting to Table 2: Send the "M51" and "F75" commands. Obtaining the adjustment values: Send the "GPW" command.

- ④ Make settings for various functions.

Send the "PPN," "SDN," "SPN," and "WAY" commands.

Note: After adjustment, when the POWER switch is set to OFF, these settings will be reset to the initial values.

- ⑤ For each table, set the brightness.

- Adjustment in Table 1: After sending the "F60" command, perform adjustment.
- Adjustment in Table 2: After sending the "F75" command, perform adjustment.

For each table, change the RGB parameters so that the values measured using a Minolta color difference meter (CA-100) become as indicated below. In this case, any one of PRH, PGH, or PBH must be set to 256.

	Left side of Mask H	Right side of Mask H
x	—	284
y	—	292

"PRH***" : 000 - 511
"PGH***" : 000 - 511
"PBH***" : 000 - 511

- ⑥ Check after adjustment

- Shifting to Table 1: Send the "F60" command. Obtaining the adjustment values: Send the "GPW" command.
- Shifting to Table 2: Send the "F75" command. Obtaining the adjustment values: Send the "GPW" command.

Check that the adjustment data have been changed.

- ⑦ Change the keyword for the DIGITAL VIDEO Assy to "adjusted" by sending the "FAJ" RS232C command.

Note: Use a Minolta CA-100 color difference meter or the equivalent for measurement. Otherwise, the specifications of the product cannot be assured.

7.1.9 TROUBLESHOOTING


[Diagnosis of abnormalities other than shutdown and power-down]

Symptom	Defective Assy	Possible Cause	Check Point	Possible Defective Part	Remarks
No power (both red and green LEDs unlit)	Cable disconnection	CN4001			Check if the connection between the POWER SUPPLY and PANEL IF assemblies is properly made.
No power (green LED not lit)	Defective 114-pin FPC	CN4004 - CN5001	ADY1081		Check if the FPC is broken or not securely inserted.
No power (both red and green LEDs lit)	Detection by the TRAP switch	CN4006			Check if the TRAP switch is properly set. (See "7.1.4 Canceling detection of the TRAP switch")
The power is (sometimes) interrupted.	Defective TRAP switch				Check if the unit works properly when detection of the TRAP switch is canceled. (See "7.1.4 Canceling detection of the TRAP switch")
The power is interrupted, and the red and green warning indications appear on the screen.	Defective system cables	CN4002, CN4003			Check if the system cables are securely connected. (See "7.1.5 Operation when the Media Receiver is not connected.")
Key input not effective	System cables not connected				Check connection of the system cables. (See "7.1.5 Operation when the Media Receiver is not connected.")
KEY CONTROL	Cable disconnection	CN4801 - CN4851	ADD1225		Check if the FPCs are properly connected. Check if imparting vibration to the unit affects key inputs. Check if a pulse is output when the key corresponding to Pin 2 of the CN4852 is pressed.
	Cable disconnection	CN4852 - CN4010			Check if the cables are disconnected or not securely connected. Check if a pulse is output when the key corresponding to Pin 5 of the CN4010 is pressed.
Remote control unit not effective	Defective KEY SCAN IC	KEY CONTROL Assy	IC4851		Check if a pulse is output when the key corresponding to Pin 2 of the CN4852 is pressed.
	Cable disconnection	CN4901 - CN4010			Check if the cables are not connected or securely connected.
					Check if the FPCs are properly connected.
PANEL IR	Defective infrared receiver	PANEL IR	U4901		Check if a pulse is output when the key corresponding to Pin 3 of the CN4010 is pressed.
DIGITAL VIDEO	Defective IC4	IC4 BLOCK	IC5401		Check if an abnormal area in the screen changes when the FPC connected to the address corresponding to the abnormal area is replaced with the one corresponding to the next address.
Abnormality in a one-eighth area of the screen	ADDRESS				Check that an abnormal area in the screen does not change when the FPC connected to the address corresponding to the abnormal area is replaced with the one corresponding to the next address.
Abnormal screen (Data of every other dot are abnormal)	Defective 114-pin FPC	CN4004 - CN5001	ADY1081		Check if the FPC is broken or not securely inserted.

7.1.10 DISASSEMBLY

1 Rear case (43P), Front case Assy (43P)


- ① Remove the grip by removing the four screws.
- ② Remove the ten screws (B tight).
- ③ Remove the twenty six screws (M screws).
- ④ Remove the rear case (43P).

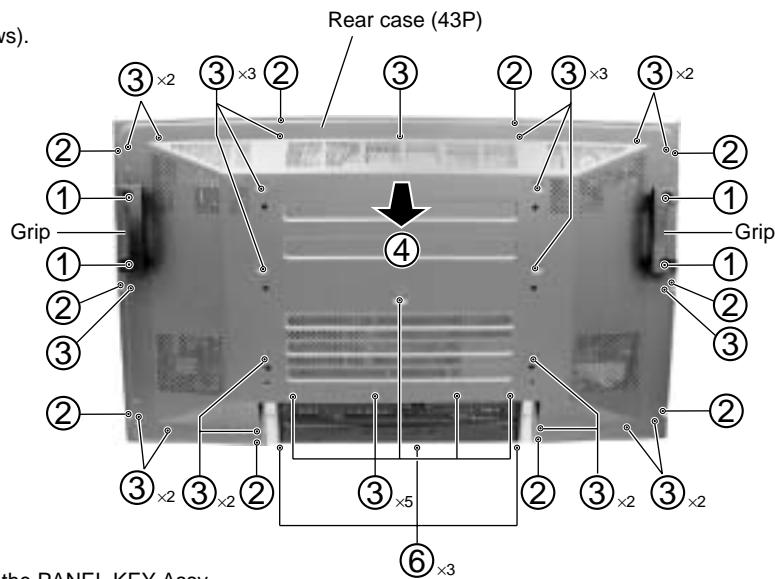

- ⑤ Remove the flexible cable (J211) from the PANEL KEY Assy.
- ⑥ Remove the three screws (B tight).
- ⑦ Remove the front case (43P).









Note:

As the screws used for the front case are B tight (ABZ30P100FZK) and other screws used are M screws (AMZ30P060FZK), care must be taken not to use the screws in the wrong places.

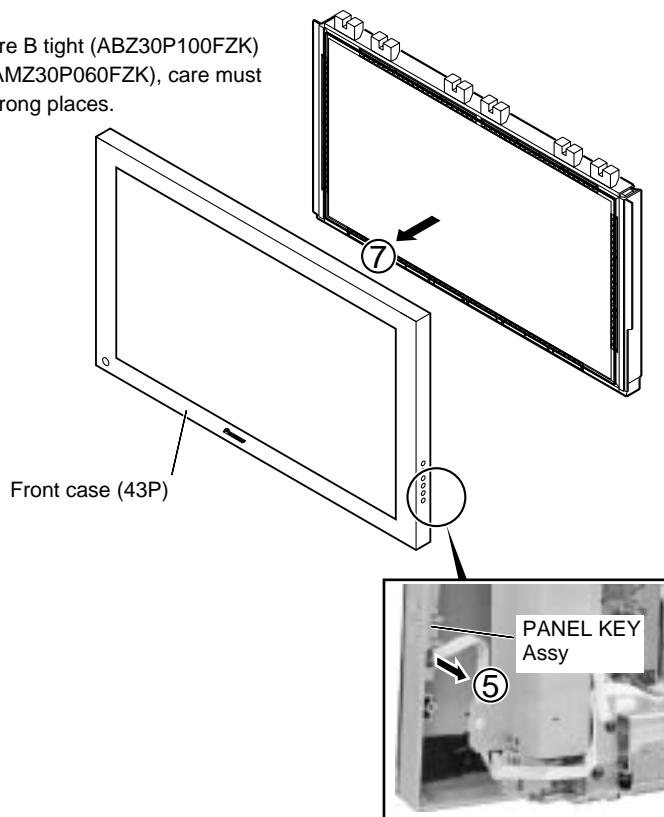A
B
C
D
E
F

A

- Notes when reassembling the rear case (43P)

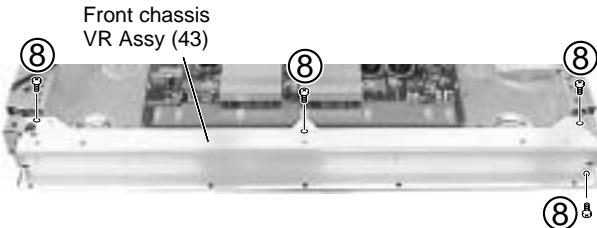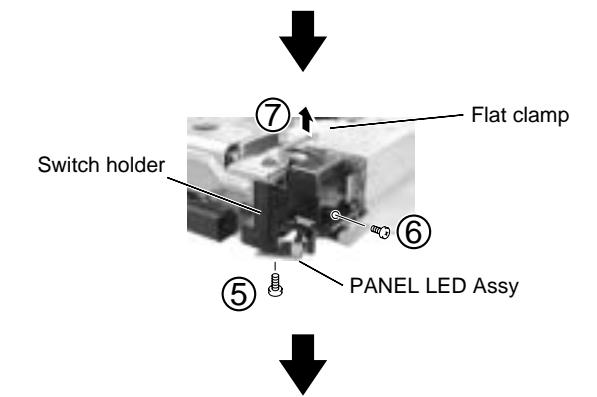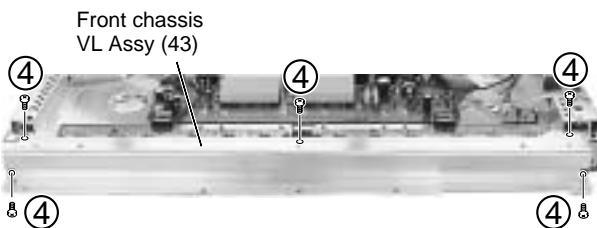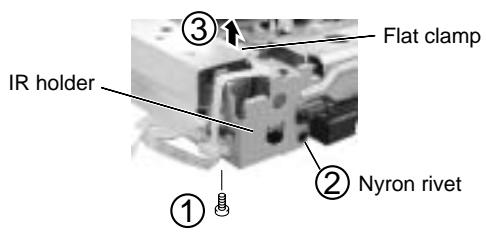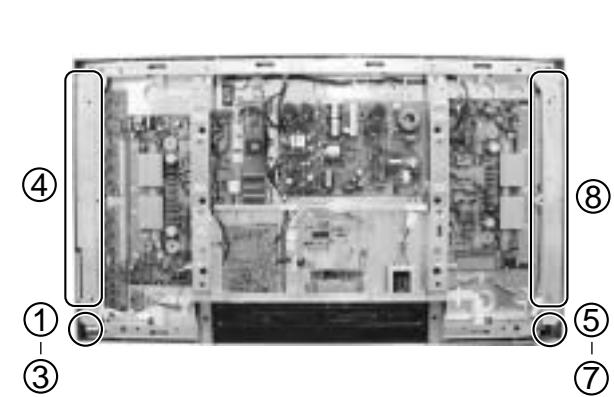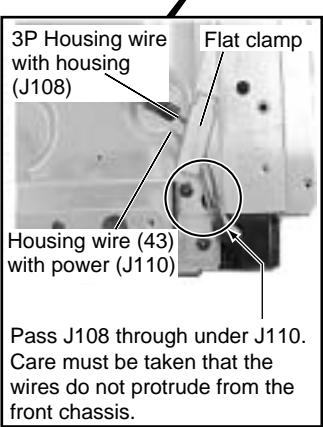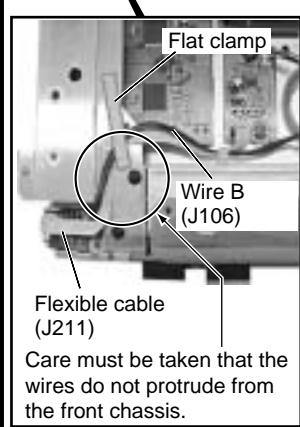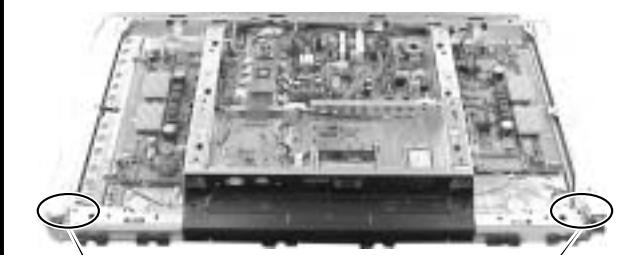


D 2 Front chassis VL Assy (43), Front chassis VR Assy (43)


- ① Remove the front case, then remove the screw that secures the IR holder.
- ② Remove the nylon rivet, then remove the IR holder.
- ③ Remove the flat clamp, then remove the wires.
- ④ Remove the front chassis VL Assy (43), by removing the 5 screws (M screws).
- ⑤ Remove the PANEL LED Assy, by removing the screw (B tight). If the screw is not removed, the connectors on the PANEL LED Assy may be damaged.
- ⑥ Remove the switch holder, by removing the screw (M screw).
- ⑦ Remove the thin clamp, then remove the wires.
- ⑧ Remove the front chassis VR Assy (43), by removing the 4 screws (M screws).

3 43 SCAN A, B, X CONNECTOR A and B Assemblies

- ① Remove the 8 screws (M screws).
- ② Remove the 2 pin connectors.
- ③ Remove the 43 SCAN A and B Assemblies.

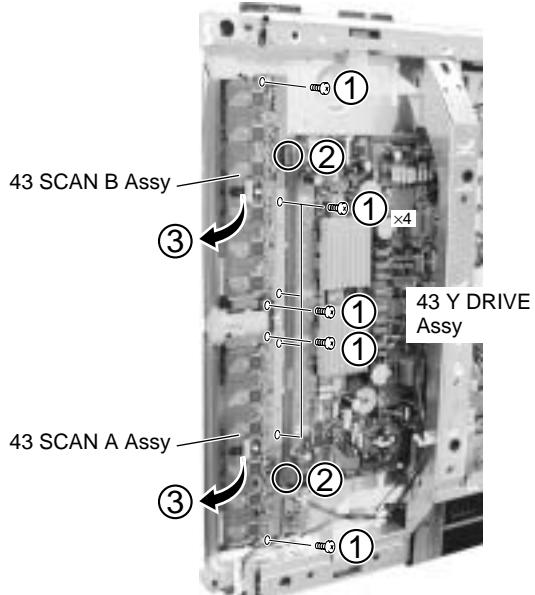


④ Remove the 6 screws (M screws).
 ⑤ Remove the X CONNECTOR A and B Assemblies.

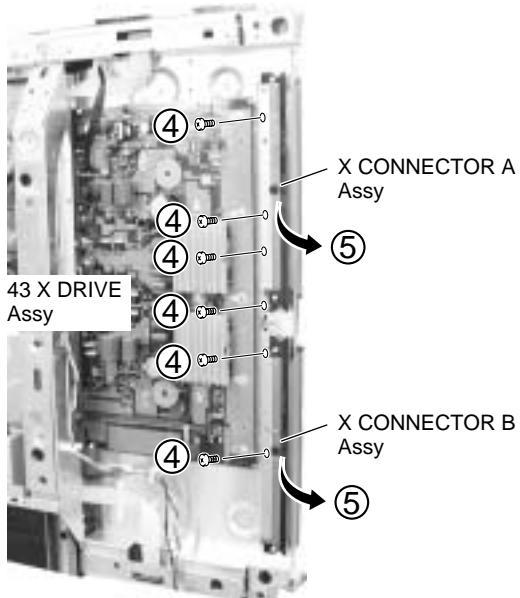


4 Multi base section

- ① Remove the 4 screws (M screws).
- ② Remove the some connectors.
- ③ Remove the multi base section.

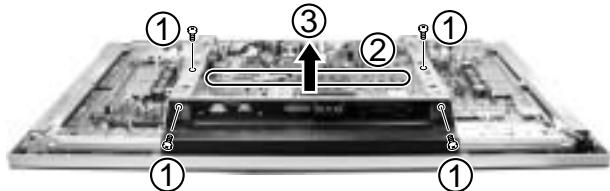

• PCB Location for multi base section

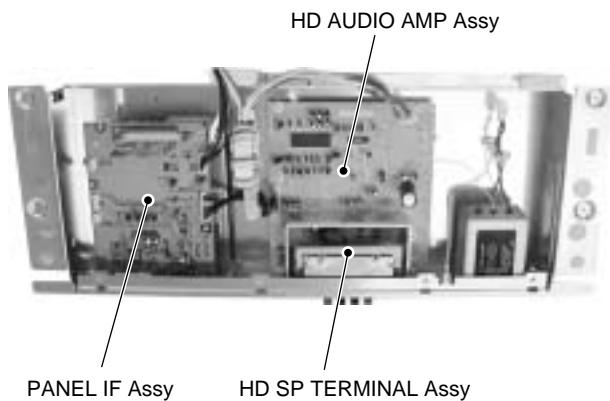

7.2 IC INFORMATION

- The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.


- **List of IC**

BA10393F, BA10358F, BA8274F, NJM2195L, MBM29PL160BD, SII169CTG100, STK795-510, STK795-511, LA4625, M30626FHPGP,
PD5856A

■ BA10393F (43 X DRIVE ASSY: IC1103) (43 Y DRIVE ASSY: IC2211)

- Comparator IC


- **Pin Arrangement (Top view) / Block Diagram**

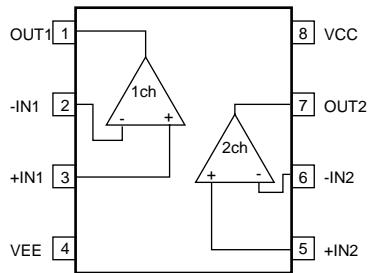

■ BA10358F (43 Y DRIVE ASSY: IC2406)

- OP-AMP IC


- **Pin Arrangement (Top view) / Block Diagram**

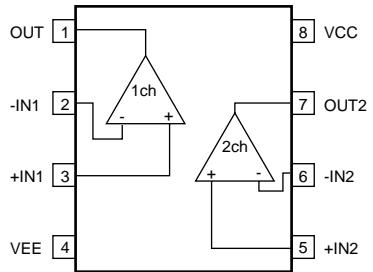

■ BA8274F (PANEL IF ASSY: IC4206)

- I²C Bus Interface IC

● Block Diagram

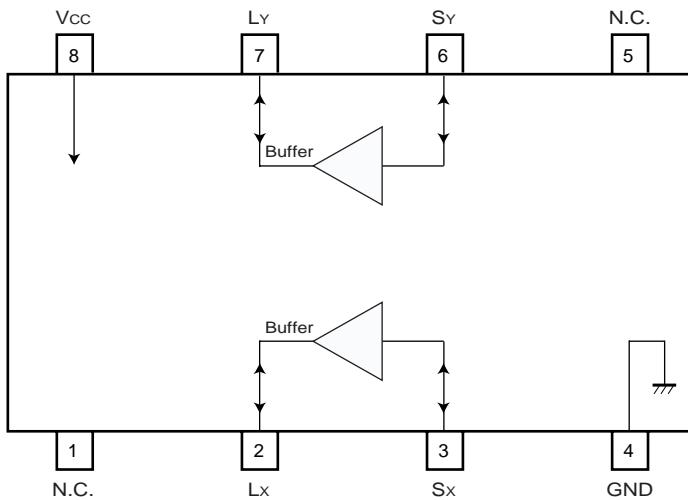


● Pin Function

Pin No.	Pin Name	Equivalent Circuit	Pin Function
2 7	Lx LY	<p>This diagram shows the equivalent circuit for the Lx and LY pins. It includes a Vcc connection, a GND connection, and a 35.7 ohm resistor. The output path is controlled by a switch, which is part of an I²C bus interface logic.</p>	Buffer output
3 6	Sx SY	<p>This diagram shows the equivalent circuit for the Sx and SY pins. It includes a Vcc connection, a GND connection, and a 35.7 ohm resistor. The input path is controlled by a switch, which is part of an I²C bus interface logic.</p>	Buffer input
4	GND	—	Ground
8	Vcc	—	Power supply


■ NJM2195L (HD AUDIO AMP ASSY: IC3501)

- Focus and SRS IC





• Pin Arrangement (Top view)

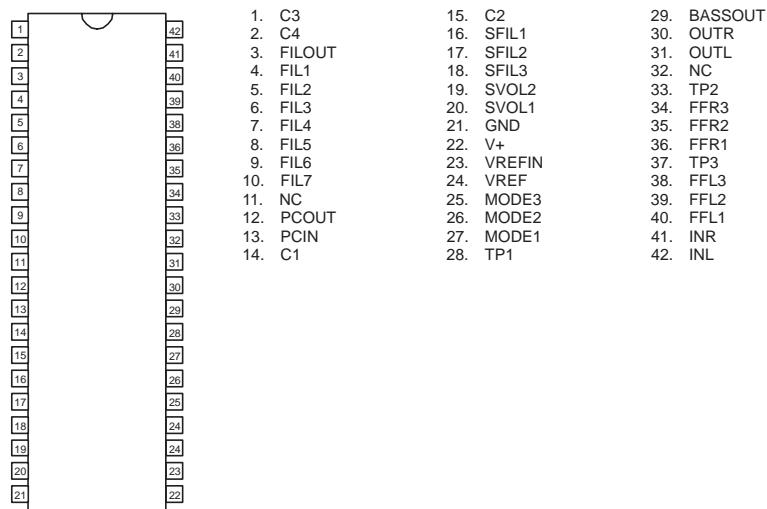




• Block Diagram

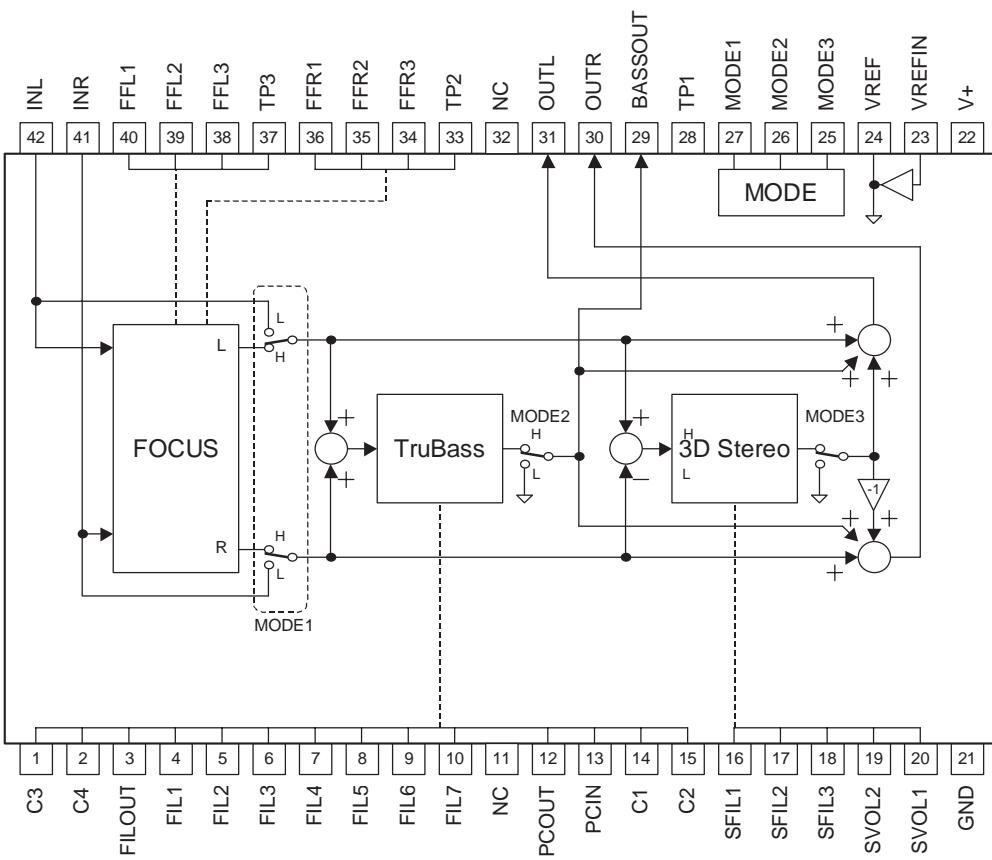

● Pin Function

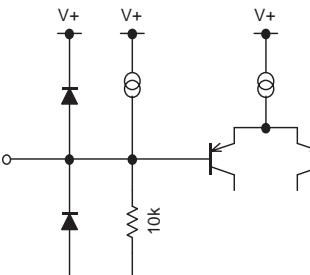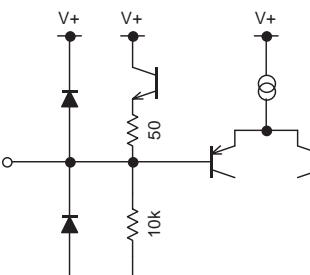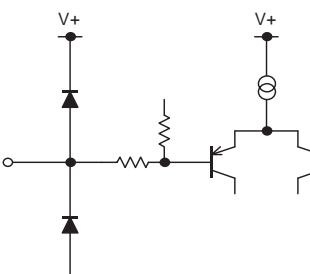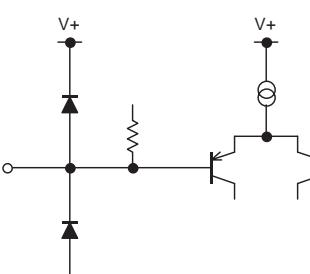No.			Pin Name	Equivalent Circuit				
SDIP42	SOP40	QFP48						
14	13	9	C1			0V	A	
15	14	10	C2			0V	B	
16 17 18	15 16 17	11 14 15	SFIL1 SFIL2 SFIL3			V+/2	C	
19 2 5	18 2 5	16 44 47	SVOL2 C4 FIL2	WIDTH	VR		V+/2	D

● Pin Function

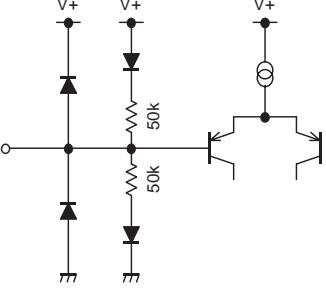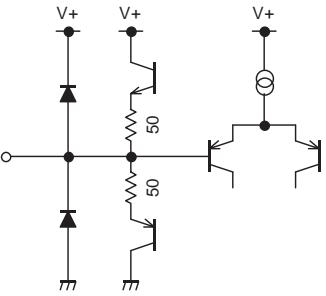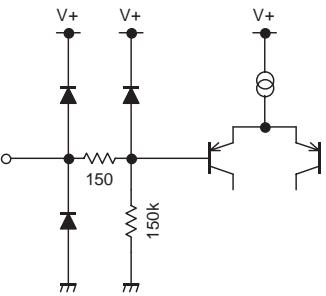	No.		Pin Name		Equivalent Circuit	
	SDIP42	SOP40	QFP48			
A	21	20	18	GND	GND	0V
B	22	21	19	V+		V+
C	23	22	20	VREFIN		V+/2
D	24 29 30 31 36 40 3	23 28 29 30 34 38 3	21 BASSOUT OUTR OUTL FFR1 FFL1 FILOUT	VREF TruBass Rch Lch		V+/2
E	25 26 27	24 25 26	22 MODE3 MODE2 MODE1	3 2 1		0V


● Pin Function

No.			Pin Name		Equivalent Circuit	
SDIP42	SOP40	QFP48				
28 35 39	27 33 37	27 33 39	TP1 FFR2 FFL2			V+/2
33 37	31 35	31 35	TP2 TP3			
41 42	39 40	41 42	INR INL	Rch Lch		V+/2
4	4	46	FIL1			V+/2

■ MBM29PL160BD (DIGITAL VIDEO ASSY: IC5303)

- Flash Memory IC


- Block Diagram

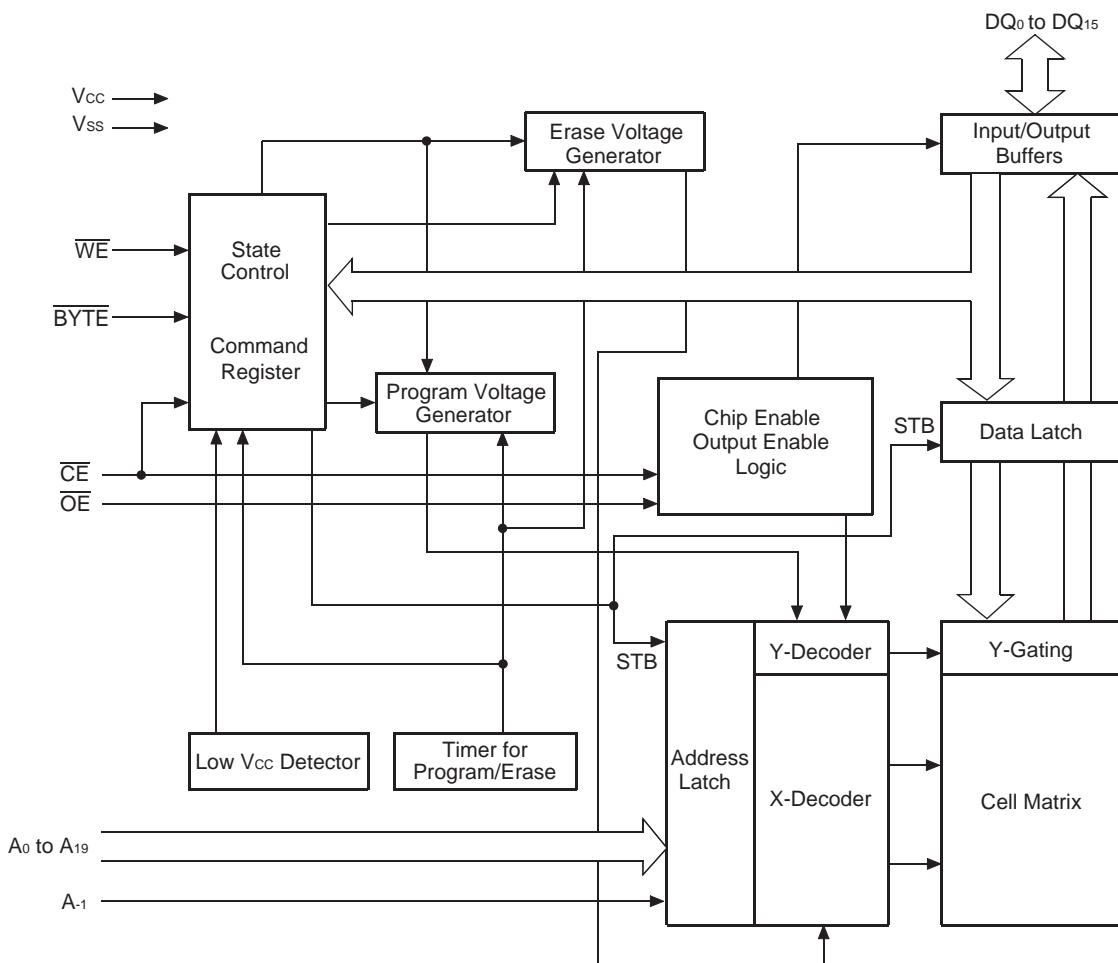


■ SII169CTG100 (PANEL IF ASSY: IC4202)

- Receiver IC

● Pin Arrangement (Top view)

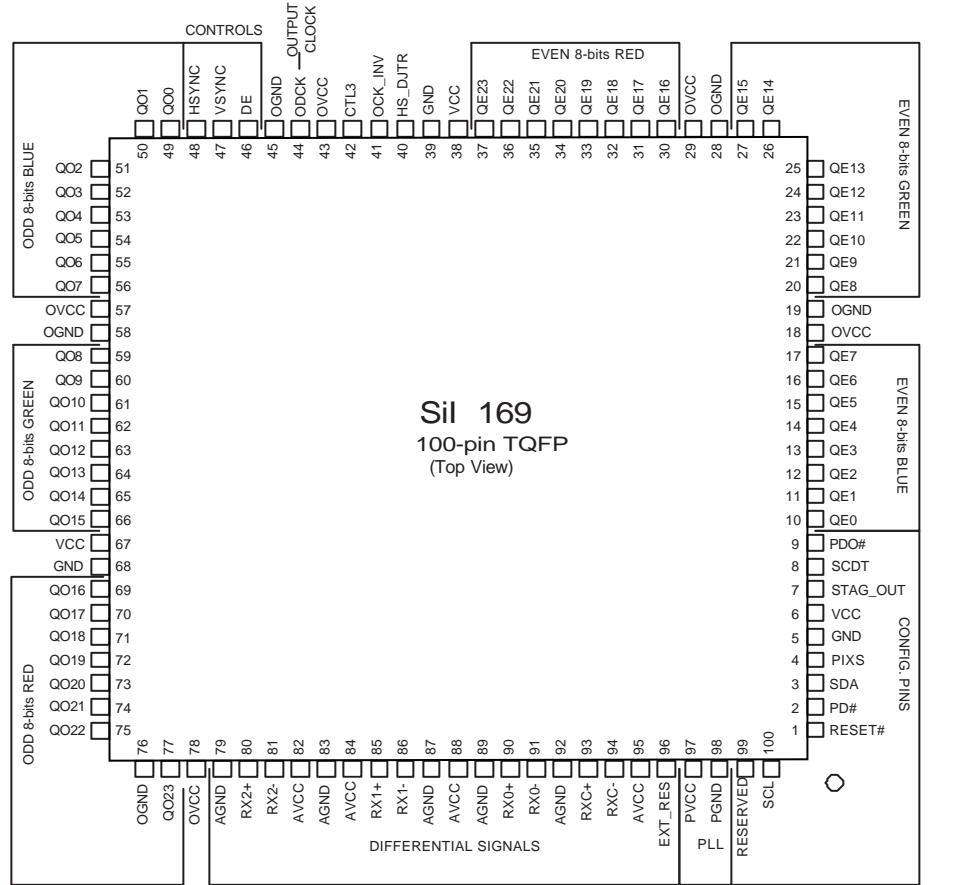


● Block Diagram

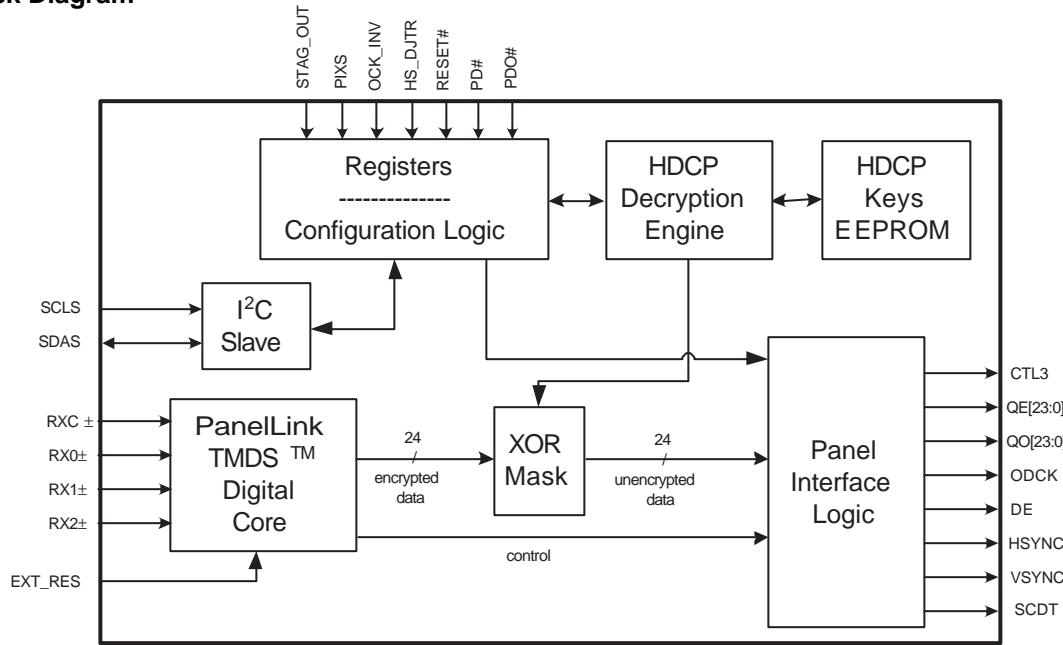

■ STK795-510 (43 X DRIVE ASSY: IC1203, IC1207)

- PDP Mask Module IC


● Block Diagram

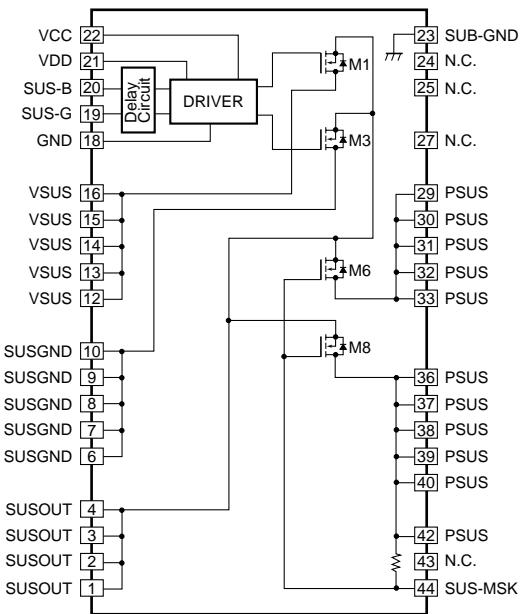

■ STK795-511 (43 Y DRIVE ASSY: IC2303, IC2307)

- PDP Mask Module IC


● Block Diagram

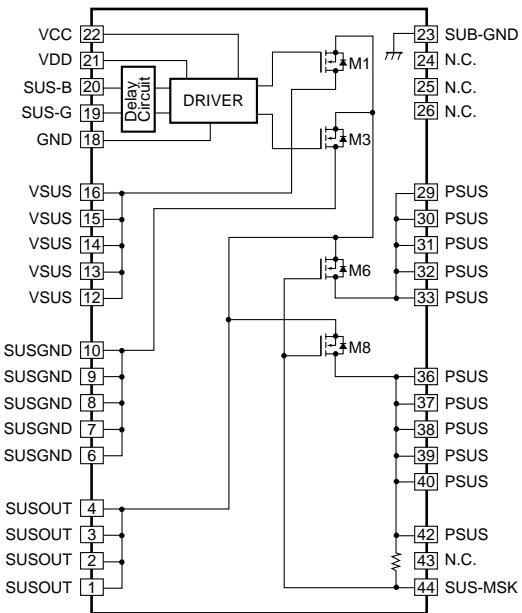

■ LA4625 (HD AUDIO ASSY: IC3504)

- 2ch BTL AF Power Amp IC

● Block Diagram

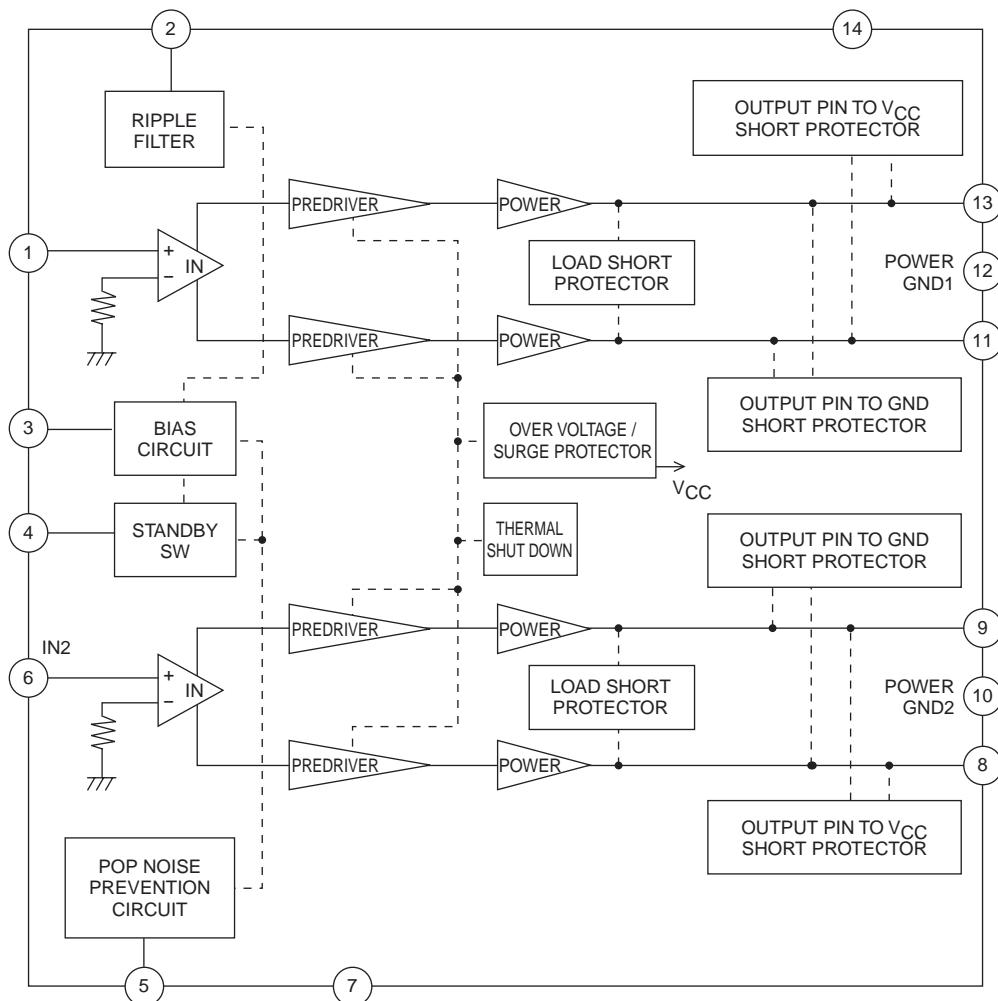

■ M30626FHPGP (DIGITAL VIDEO ASSY : IC5201)

- PDP UCOM

● Pin Function (1/2)

No.	Pin Name	Function	I/O	ACTIVE
1	VSUS	[D/A] Vofs power control	O	
2	VOFS	[D/A] Vofs power control	O	
3	TXD_IC4	3 serial communication with IC4MANTA - data transmission	O	
4	RXD_IC4	3 serial communication with IC4MANTA - data receive	I	
5	CLK_IC4	3 serial communication with IC4MANTA - clock output	O	
6	BYTE	(GND connection)	I	
7	CNVSS	Pin for processor mode setting (pull-down)	I	
8	NC	NC pin		
9	NC	NC pin		
10	RST_MD	Reset input	I	L
11	XOUT	Output for main clock	O	-
12	VSS	GND	-	-
13	XIN	Input for main clock	I	-
14	VCC1	Power supply = STB3.3V	-	-
15	NMI	(pull-up)	I	
16	REM_B	(Interruption) Remote control signal input (in the panel unit)	I	
17	KEY_B	(Interruption) Key signal input (in the panel unit)	I	
18	RST2	(Interruption) IC4 reset detection	I	L
19	HD_IN_B	HD signal existence distinction	I	L
20	PD_MUTE	Mute the power down output to the POWER SUPPLY Unit	O	L
21	PS_PD	PD signal in the POWER SUPPLY Unit	I	H
22	DCC_PD	PD signal of DC-DC converter	I	H
23	NC	NC pin		
24	NC	NC pin		
25	VD_IN	V. frequency count	I	L
26	EEP_RST	EEPROM power SW	O	H
27	E_SCL	IIC clock output for EEPROM	O	
28	E_SDA	IIC data I/O for EEPROM	I/O	
29	TXD	Communication with flash ROM writer - data transmission	O	
30	RXD	Communication with flash ROM writer - data receive	I	
31	SCLK	Communication with flash ROM writer - clock input	I	
32	BUSY	Communication with flash ROM writer - busy output	O	
33	TXD0	UART communication with main UCOM (external PC) - data transmission	O	
34	RXD0	UART communication with main UCOM (external PC) - data receive	I	
35	NC	NC pin		
36	REQ_MD	Communication request to the main UCOM	O	H
37	PSW_D	Mute of DC-DC converter	O	H
38	WE_IC4	In IC4 (MANTA) rewriting, control for communication path switch	O	H
39	EPM	Setting pin for flash rewriting mode (pull-down)	I	
40	IC4_RST	IC4 forced reset	O	L
41	IC4_CE	Enable for IC4 communication	O	L
42	IC4_BUSY	Busy input for IC4 communication	I	H
43	REQ_IC4	Communication request from the IC4	I	H
44	CE	Setting pin for flash rewriting mode (pull-up)	I	
45	PSIZE	Panel size distinction	I	
46	B_SCL	IIC clock output for backup EEPROM	O	H
47	B_SDA	IIC DATA I/O for backup EEPROM	I/O	H
48	ADR_PD	PD signal of address junction	I	H
49	LED_G	Green LED control	O	L
50	LED_R	Red LED control	O	L

■ M30626FHPGP (DIGITAL VIDEO ASSY : IC5201)

- PDP UCOM

● Pin Function (2/2)

No.	Pin Name	Function	I/O	ACTIVE
51	DRV_OFF	Driving OFF	O	H
52	RELAY	Power ON control output	O	H
53	POWER	Power ON control input	I	H
54	MR_ST_B	MDR connection detection	I	L
55	OP_DET	Rear case open detection	I	
56	NC	NC pin		
57	PNL_MUTE	Panel mute	I	
58	DITHER	PC/VIDEO dither switch (panel module exclusive use)	I	
59	NC	NC pin		
60	VCC2	Power supply = STB 3.3V	-	-
61	PD_TRG	PD detection	I	L
62	VSS	GND	-	-
63	VH_PD	Vh power decrease PD	I	H
64	YDRV_PD	Y drive PD signal	I	H
65	YRES_PD	Y drive PD signal	I	H
66	YDCDC_PD	PD signal of Y drive DC-DC converter	I	H
67	IC5V_PD	5V power decrease PD	I	H
68	Xsus_PD	X drive PD signal	I	H
69	XDCDC_PD	PD signal of X drive DC-DC converter	I	H
70	XDRV_PD	X drive PD signal	I	H
71	NC	NC pin		
72	MR_AC	MR power monitor	I	H
73	AC_DET	AC power monitor at panel side (same signal as CST1)	I	L
74	DVI_MUTE	Mute of panel link output	O	H
75	A_MUTE	Audio mute	O	H
76	A_NG	Audio NG detection	I	L
77	A_SCL	IIC clock output for audio/others	O	L
78	A_SDA	IIC data I/O for audio/others	I/O	L
79	TRUBASS	TRUBASS ON/OFF	O	H
80	STB_SW	Standby setting of audio amp.	O	L
81	FOCUS	FOCUS ON/OFF	O	H
82	SRS	SRS ON/OFF	O	H
83	DDC_WP	DDCROM write protection	O	H
84	DVI_DET	DVI cable disconnection detection	I	H
85	RSTBTMDS	Reset detection of panel link receiver	I	L
86	L_SYNC	DE omission detection of the panel link	I	L
87	NC	NC pin		
88	NC	NC pin		
89	MASK1	[A/D] Mask display setting	I	
90	MAX_PLS2	[A/D] Brightness setting for panel module	I	
91	MAX_PLS1	[A/D] Brightness setting for panel module	I	
92	TEMP	[A/D] AD input for temperature sensor	I	
93	MODE	[A/D] Operation mode setting	I	
94	AVSS	GND for A/D input	-	-
95	MODEL	[A/D] CMX/HD/TW/WX distinction	I	
96	VREF	Reference voltage for A/D input	-	-
97	AVCC	Power supply for A/D input = STB3.3V	-	-
98	NC	NC pin		
99	NC	NC pin		
100	AMG_MD	Address emergency monitor	I	H

■ PD5856A (DIGITAL VIDEO ASSY : IC5401)

- PDP ASIC IC4

● Pin Function (1/10)

Ball No.	No.	Pin Name	Function
A1	1	BAI_6	A phase signal input of B video (sixth bit)
B1	2	BAI_5	A phase signal input of B video (fifth bit)
C1	3	BAI_4	A phase signal input of B video (fourth bit)
D1	4	NC	NC pin
E1	5	NC	NC pin
F1	6	BAI_3	A phase signal input of B video (fifth bit)
G1	7	BAI_2	A phase signal input of B video (fourth bit)
H1	8	FIELD	FIELD signal input
J1	9	XSUSB_12	X-Drive control signal output
K1	10	XSUSB_10	X-Drive control signal output
L1	11	XSUSB_4	X-Drive control signal output
M1	12	XSUSB_0	X-Drive control signal output
N1	13	XSUSA_10	X-Drive control signal output
P1	14	XSUSA_4	X-Drive control signal output
R1	15	XSUSA_2	X-Drive control signal output
T1	16	ADRS_0	Address control signal output
U1	17	AD6TXOUT3M	Address LVDS signal output
V1	18	AD6TXCLKOUTM	Address LVDS signal output
W1	19	AD6TXOUT2M	Address LVDS signal output
Y1	20	AD6TXOUT1M	Address LVDS signal output
AA1	21	AD6TXOUT0M	Address LVDS signal output
AB1	22	AD7TXOUT3M	Address LVDS signal output
AC1	23	AD7TXCLKOUTM	Address LVDS signal output
AD1	24	AD7TXOUT2M	Address LVDS signal output
AE1	25	AD7TXOUT1M	Address LVDS signal output
AF1	26	AD7TXOUT0M	Address LVDS signal output
AF2	27	AD7TXOUT0P	Address LVDS signal output
AF3	28	VSSLA	GND
AF4	29	AD3TXOUT3M	Address LVDS signal output
AF5	30	AD3TXCLKOUTM	Address LVDS signal output
AF6	31	AD3TXOUT2M	Address LVDS signal output
AF7	32	AD3TXOUT1M	Address LVDS signal output
AF8	33	AD3TXOUT0M	Address LVDS signal output
AF9	34	AD2TXOUT3M	Address LVDS signal output
AF10	35	AD2TXCLKOUTM	Address LVDS signal output
AF11	36	AD2TXOUT2M	Address LVDS signal output
AF12	37	AD2TXOUT1M	Address LVDS signal output
AF13	38	AD2TXOUT0M	Address LVDS signal output
AF14	39	AD1TXOUT3M	Address LVDS signal output
AF15	40	AD1TXCLKOUTM	Address LVDS signal output
AF16	41	AD1TXOUT2M	Address LVDS signal output
AF17	42	AD1TXOUT1M	Address LVDS signal output
AF18	43	AD1TXOUT0M	Address LVDS signal output
AF19	44	AD0TXOUT3M	Address LVDS signal output
AF20	45	AD0TXCLKOUTM	Address LVDS signal output
AF21	46	AD0TXOUT2M	Address LVDS signal output
AF22	47	AD0TXOUT1M	Address LVDS signal output
AF23	48	AD0TXOUT0M	Address LVDS signal output
AF24	49	VSSL15	GND
AF25	50	AD4TXOUT3P	Address LVDS signal output

■ PD5856A (DIGITAL VIDEO ASSY : IC5401)

- PDP ASIC IC4

● Pin Function (2/10)

Ball No.	No.	Pin Name	Function
AF26	51	AD4TXOUT3M	Address LVDS signal output
AE26	52	AD4TXCLKOUTM	Address LVDS signal output
AD26	53	AD4TXOUT2M	Address LVDS signal output
AC26	54	AD4TXOUT1M	Address LVDS signal output
AB26	55	AD4TXOUT0M	Address LVDS signal output
AA26	56	AD5TXOUT3M	Address LVDS signal output
Y26	57	AD5TXCLKOUTM	Address LVDS signal output
W26	58	AD5TXOUT2M	Address LVDS signal output
V26	59	AD5TXOUT1M	Address LVDS signal output
U26	60	AD5TXOUT0M	Address LVDS signal output
T26	61	SDIDBI_N	JTAG signal
R26	62	SDI JTAG	JTAG signal
P26	63	GPIO0_3	Microcomputer macro general-purpose port
N26	64	GPIO0_1	Microcomputer macro general-purpose port
M26	65	YSUSA_4	Y-Drive control signal output
L26	66	YSUSA_10	Y-Drive control signal output
K26	67	YSUSA_14	Y-Drive control signal output
J26	68	YSUSB_4	Y-Drive control signal output
H26	69	YSUSB_6	Y-Drive control signal output
G26	70	YSUSB_10	Y-Drive control signal output
F26	71	YSUSB_14	Y-Drive control signal output
E26	72	NC	NC pin
D26	73	NC	NC pin
C26	74	SCAN_10	Scan control signal output
B26	75	CSIOTXD	Communication with microcomputer
A26	76	CSRD_N	Communication with microcomputer
A25	77	CSCS_N0	Communication with microcomputer
A24	78	EXA16	Flash memory address bus
A23	79	EXA15	Flash memory address bus
A22	80	EXA14	Flash memory address bus
A21	81	EXA13	Flash memory address bus
A20	82	EXA12	Flash memory address bus
A19	83	EXA10	Flash memory address bus
A18	84	EXA7	Flash memory address bus
A17	85	EXA1	Flash memory address bus
A16	86	EXDIO_3	Flash memory data bus
A15	87	EXDIO_5	Flash memory data bus
A14	88	EXDIO_11	Flash memory data bus
A13	89	TRNSEND_O	NC pin
A12	90	RBI_5	B phase signal input of R video (fifth bit)
A11	91	RBI_0	B phase signal input of R video (0 bit)
A10	92	GBI_8	B phase signal input of G video (eighth bit)
A9	93	GBI_2	B phase signal input of G video (second bit)
A8	94	BBI_6	B phase signal input of B video (sixth bit)
A7	95	BBI_0	B phase signal input of B video (0 bit)
A6	96	VDI	VD signal input
A5	97	RAI_5	A phase signal input of R video (fifth bit)
A4	98	DCLKI	CLK input
A3	99	GAI_4	A phase signal input of G video (fourth bit)
A2	100	BAI_9	A phase signal input of B video (ninth bit)

■ PD5856A (DIGITAL VIDEO ASSY : IC5401)

- PDP ASIC IC4

● Pin Function (3/10)

Ball No.	No.	Pin Name	Function
B2	101	BAI_8	A phase signal input of B video (eighth bit)
C2	102	BAI_7	A phase signal input of B video (seventh bit)
D2	103	GND	GND
E2	104	NC	NC
F2	105	NC	NC
G2	106	BAI_1	A phase signal input of B video (first bit)
H2	107	XSUSB_15	X-Drive control signal output
J2	108	GND	GND
K2	109	XSUSB_9	X-Drive control signal output
L2	110	XSUSB_3	X-Drive control signal output
M2	111	XSUSA_15	X-Drive control signal output
N2	112	XSUSA_9	X-Drive control signal output
P2	113	GND	GND
R2	114	XSUSA_1	X-Drive control signal output
T2	115	TEST2	Test signal input (Not used)
U2	116	AD6TXOUT3P	Address LVDS signal output
V2	117	AD6TXCLKOUTP	Address LVDS signal output
W2	118	AD6TXOUT2P	Address LVDS signal output
Y2	119	AD6TXOUT1P	Address LVDS signal output
AA2	120	AD6TXOUT0P	Address LVDS signal output
AB2	121	AD7TXOUT3P	Address LVDS signal output
AC2	122	AD7TXCLKOUTP	Address LVDS signal output
AD2	123	AD7TXOUT2P	Address LVDS signal output
AE2	124	AD7TXOUT1P	Address LVDS signal output
AE3	125	VSSLA	GND
AE4	126	AD3TXOUT3P	Address LVDS signal output
AE5	127	AD3TXCLKOUTP	Address LVDS signal output
AE6	128	AD3TXOUT2P	Address LVDS signal output
AE7	129	AD3TXOUT1P	Address LVDS signal output
AE8	130	AD3TXOUT0P	Address LVDS signal output
AE9	131	AD2TXOUT3P	Address LVDS signal output
AE10	132	AD2TXCLKOUTP	Address LVDS signal output
AE11	133	AD2TXOUT2P	Address LVDS signal output
AE12	134	AD2TXOUT1P	Address LVDS signal output
AE13	135	AD2TXOUT0P	Address LVDS signal output
AE14	136	AD1TXOUT3P	Address LVDS signal output
AE15	137	AD1TXCLKOUTP	Address LVDS signal output
AE16	138	AD1TXOUT2P	Address LVDS signal output
AE17	139	AD1TXOUT1P	Address LVDS signal output
AE18	140	AD1TXOUT0P	Address LVDS signal output
AE19	141	AD0TXOUT3P	Address LVDS signal output
AE20	142	AD0TXCLKOUTP	Address LVDS signal output
AE21	143	AD0TXOUT2P	Address LVDS signal output
AE22	144	AD0TXOUT1P	Address LVDS signal output
AE23	145	AD0TXOUT0P	Address LVDS signal output
AE24	146	VSSL15	GND
AE25	147	AD4TXCLKOUTP	Address LVDS signal output
AD25	148	AD4TXOUT2P	Address LVDS signal output
AC25	149	AD4TXOUT1P	Address LVDS signal output
AB25	150	AD4TXOUT0P	Address LVDS signal output

■ PD5856A (DIGITAL VIDEO ASSY : IC5401)

- PDP ASIC IC4

● Pin Function (4/10)

Ball No.	No.	Pin Name	Function
AA25	151	AD5TXOUT3P	Address LVDS signal output
Y25	152	AD5TXCLKOUTP	Address LVDS signal output
W25	153	AD5TXOUT2P	Address LVDS signal output
V25	154	AD5TXOUT1P	Address LVDS signal output
U25	155	AD5TXOUT0P	Address LVDS signal output
T25	156	SDITRST_N	JTAG signal
R25	157	RESETX	Reset input
P25	158	GND	GND
N25	159	GPIO0_0	Microcomputer macro general-purpose port
M25	160	YSUSA_5	Y-Drive control signal output
L25	161	YSUSA_11	Y-Drive control signal output
K25	162	YSUSA_15	Y-Drive control signal output
J25	163	GND	GND
H25	164	YSUSB_7	Y-Drive control signal output
G25	165	YSUSB_11	Y-Drive control signal output
F25	166	NC	NC pin
E25	167	NC	NC pin
D25	168	GND	GND
C25	169	SCAN_11	Scan control signal output
B25	170	CSIORXD	Communication with UCOM
B24	171	CSIOSCKI	Communication with UCOM
B23	172	UARTTXD	Communication with UCOM
B22	173	UARTRXD	Communication with UCOM
B21	174	CSWR_N0	Communication with UCOM
B20	175	GND	GND
B19	176	EXA9	Flash memory address bus
B18	177	EXA6	Flash memory address bus
B17	178	EXA0	Flash memory address bus
B16	179	GND	GND
B15	180	EXDIO_6	Flash memory data bus
B14	181	EXDIO_12	Flash memory data bus
B13	182	RBI_9	B phase signal input of R video (ninth bit)
B12	183	RBI_4	B phase signal input of R video (fourth bit)
B11	184	GND	GND
B10	185	GBI_7	B phase signal input of G video (seventh bit)
B9	186	GBI_1	B phase signal input of G video (first bit)
B8	187	BBI_5	B phase signal input of B video (fifth bit)
B7	188	GND	GND
B6	189	HDI	HD signal input
B5	190	RAI_4	A phase signal input of R video (fourth bit)
B4	191	GAI_9	A phase signal input of G video (ninth bit)
B3	192	GAI_3	A phase signal input of G video (third bit)
C3	193	GAI_2	A phase signal input of G video (second bit)
D3	194	VDDD33	3.3V power supply
E3	195	GAI_1	A phase signal input of G video (first bit)
F3	196	GAI_0	A phase signal input of G video (0 bit)
G3	197	NC	NC pin
H3	198	XSUSB_14	X-Drive control signal output
J3	199	VDDIO	3.3V power supply
K3	200	XSUSB_8	X-Drive control signal output

■ PD5856A (DIGITAL VIDEO ASSY : IC5401)

• PDP ASIC IC4

● Pin Function (5/10)

Ball No.	No.	Pin Name	Function
L3	201	XSUSB_2	X-Drive control signal output
M3	202	XSUSA_14	X-Drive control signal output
N3	203	XSUSA_8	X-Drive control signal output
P3	204	VDDIO	3.3V power supply
R3	205	XSUSA_0	X-Drive control signal output
T3	206	TEST1	Test signal input (Not used)
U3	207	VSSLA	GND
V3	208	VSSLA	GND
W3	209	VSSLA	GND
Y3	210	VSSLA	GND
AA3	211	VSSLA	GND
AB3	212	VSSLA	GND
AC3	213	VSSLA	GND
AD3	214	VSSLA	GND
AD4	215	VSSLA	GND
AD5	216	VSSLA	GND
AD6	217	VSSLA	GND
AD7	218	VSSLA	GND
AD8	219	VSSLA	GND
AD9	220	VSSLA	GND
AD10	221	VSSLA	GND
AD11	222	VSSLA	GND
AD12	223	VSSLA	GND
AD13	224	VSSLA	GND
AD14	225	VSSLA	GND
AD15	226	VSSLA	GND
AD16	227	VSSLA	GND
AD17	228	VSSLA	GND
AD18	229	VSSLA	GND
AD19	230	VSSLA	GND
AD20	231	VSSLA	GND
AD21	232	VSSLA	GND
AD22	233	VSSLA	GND
AD23	234	VSSLA	GND
AD24	235	VSSLA	GND
AC24	236	VSSLA	GND
AB24	237	VSSLA	GND
AA24	238	VSSLA	GND
Y24	239	VSSLA	GND
W24	240	VSSLA	GND
V24	241	VSSLA	GND
U24	242	VSSLA	GND
T24	243	SDITDO	JTAG signal
R24	244	GPIO0_7	Microcomputer macro general-purpose port
P24	245	VDDIO	3.3V power supply
N24	246	YSUSA_0	Y-Drive control signal output
M24	247	YSUSA_6	Y-Drive control signal output
L24	248	YSUSA_12	Y-Drive control signal output
K24	249	YSUSB_0	Y-Drive control signal output
J24	250	VDDD33	3.3V power supply

■ PD5856A (DIGITAL VIDEO ASSY : IC5401)

- PDP ASIC IC4

● Pin Function (6/10)

Ball No.	No.	Pin Name	Function
H24	251	YSUSB_8	Y-Drive control signal output
G24	252	NC	NC pin
F24	253	YSUSB_15	Y-Drive control signal output
E24	254	SCAN_3	Scan control signal output
D24	255	VDDD33	3.3V power supply
C24	256	SCAN_12	Scan control signal output
C23	257	SCAN_13	Scan control signal output
C22	258	SCAN_14	Scan control signal output
C21	259	SCAN_15	Scan control signal output
C20	260	VDDIO	3.3V power supply
C19	261	EXA8	Flash memory address bus
C18	262	EXA5	Flash memory address bus
C17	263	CLKD	CLK input (60MHz)
C16	264	VDDIO	3.3V power supply
C15	265	EXDIO_7	Flash memory data bus
C14	266	EXDIO_13	Flash memory data bus
C13	267	RBI_8	B phase signal input of R video (eighth bit)
C12	268	RBI_3	B phase signal input of R video (third bit)
C11	269	VDDIO	3.3V power supply
C10	270	GBI_6	B phase signal input of G video (sixth bit)
C9	271	GBI_0	B phase signal input of G video (0 bit)
C8	272	BBI_4	B phase signal input of B video (fourth bit)
C7	273	VDDIO	3.3V power supply
C6	274	RAI_9	A phase signal input of R video (ninth bit)
C5	275	RAI_3	A phase signal input of R video (third bit)
C4	276	GAI_8	A phase signal input of G video (eighth bit)
D4	277	GAI_7	A phase signal input of G video (seventh bit)
E4	278	GAI_6	A phase signal input of G video (sixth bit)
F4	279	GAI_5	A phase signal input of G video (fifth bit)
G4	280	VCMP	GND
H4	281	XSUSB_13	X-Drive control signal output
J4	282	XSUSB_11	X-Drive control signal output
K4	283	XSUSB_7	X-Drive control signal output
L4	284	XSUSB_1	X-Drive control signal output
M4	285	XSUSA_13	X-Drive control signal output
N4	286	XSUSA_7	X-Drive control signal output
P4	287	XSUSA_3	X-Drive control signal output
R4	288	ADRS_3	Address control signal output
T4	289	TESTAN	Test signal input (Not used)
U4	290	VDDLA	3.3V power supply
V4	291	VDDLA	3.3V power supply
W4	292	VDDLA	3.3V power supply
Y4	293	VDDLA	3.3V power supply
AA4	294	VDDLA	3.3V power supply
AB4	295	VDDLA	3.3V power supply
AC4	296	VDDLA	3.3V power supply
AC5	297	VDDLA	3.3V power supply
AC6	298	VDDLA	3.3V power supply
AC7	299	VDDLA	3.3V power supply
AC8	300	VDDLA	3.3V power supply

■ PD5856A (DIGITAL VIDEO ASSY : IC5401)

- PDP ASIC IC4

● Pin Function (7/10)

Ball No.	No.	Pin Name	Function
A	AC8	300	VDDLA
	AC9	301	VDDLA
	AC10	302	VDDLA
B	AC11	303	VDDLA
	AC12	304	VDDLA
	AC13	305	VDDLA
	AC14	306	VDDBG
C	AC15	307	VDDLA
	AC16	308	VDDLA
	AC17	309	VDDLA
	AC18	310	VDDLA
	AC19	311	VDDLA
D	AC20	312	VDDLA
	AC21	313	VDDLA
	AC22	314	VDDLA
	AC23	315	VDDLA
	AB23	316	VDDLA
E	AA23	317	VDDLA
	Y23	318	VDDLA
	W23	319	VDDLA
	V23	320	VDDLA
	U23	321	VDDLA
F	T23	322	SDITDI
	R23	323	GPIO0_6
	P23	324	GPIO0_2
	N23	325	YSUSA_1
	M23	326	YSUSA_7
	L23	327	YSUSA_13
	K23	328	YSUSB_1
	J23	329	YSUSB_5
	H23	330	YSUSB_9
	G23	331	VCMP
	F23	332	SCAN_0
	E23	333	SCAN_4
	D23	334	SCAN_7
	D22	335	SCAN_8
	D21	336	SCAN_9
	D20	337	EXA11
	D19	338	EXA19
	D18	339	EXA4
	D17	340	EXDIO_0
	D16	341	EXDIO_4
	D15	342	EXDIO_8
	D14	343	EXDIO_14
	D13	344	RBI_7
	D12	345	RBI_2
	D11	346	GBI_9
	D10	347	GBI_5
	D9	348	BBI_9
	D8	349	BBI_3

■ PD5856A (DIGITAL VIDEO ASSY : IC5401)

• PDP ASIC IC4

● Pin Function (8/10)

Ball No.	No.	Pin Name	Function
D7	350	DEI	DE signal input
D6	351	RAI_8	A phase signal input of R video (eighth bit)
D5	352	RAI_2	A phase signal input of R video (second bit)
E5	353	RAI_1	A phase signal input of R video (first bit)
F5	354	RAI_0	A phase signal input of R video (0 bit)
G5	355	BAI_0	A phase signal input of B video (0 bit)
H5	356	VSS15	GND
J5	357	VDDHR	3.3V power supply
K5	358	XSUSB_6	X-Drive control signal output
L5	359	VSSD15	GND
M5	360	XSUSA_12	X-Drive control signal output
N5	361	XSUSA_6	X-Drive control signal output
P5	362	VSS15	GND
R5	363	ADRS_2	Address control signal output
T5	364	TESTBN	Test signal input (Not used)
U5	365	VSSL15	GND
V5	366	VSSLA	GND
W5	367	VSSLA	GND
Y5	368	VSSL15	GND
AA5	369	VDDLP	3.3V power supply
AB5	370	VSSL15	GND
AB6	371	VSSLA	GND
AB7	372	VSSLA	GND
AB8	373	VSSL15	GND
AB9	374	VSSLA	GND
AB10	375	VSSLA	GND
AB11	376	VSSL15	GND
AB12	377	VSSLA	GND
AB13	378	VSSLA	GND
AB14	379	REFRIN	Reference current generation
AB15	380	VSSBG	GND
AB16	381	VSSL15	GND
AB17	382	VSSLA	GND
AB18	383	VSSLA	GND
AB19	384	VSSL15	GND
AB20	385	VSSLA	GND
AB21	386	VSSLA	GND
AB22	387	VSSLA	GND
AA22	388	VDDLA	3.3V power supply
Y22	389	VSSL15	GND
W22	390	VSSLA	GND
V22	391	VSSLA	GND
U22	392	VSSL15	GND
T22	393	SDITMS	JTAG signal
R22	394	GPIOO_5	Microcomputer macro general-purpose port
P22	395	VSS15	GND
N22	396	YSUSA_2	Y-Drive control signal output
M22	397	YSUSA_8	Y-Drive control signal output
L22	398	VSSD15	GND
K22	399	YSUSB_2	Y-Drive control signal output

■ PD5856A (DIGITAL VIDEO ASSY : IC5401)

- PDP ASIC IC4

● Pin Function (9/10)

Ball No.	No.	Pin Name	Function
J22	400	VDDHL	3.3V power supply
H22	401	VSSD15	GND
G22	402	YSUSB_12	Y-Drive control signal output
F22	403	SCAN_1	Scan control signal output
E22	404	SCAN_5	Scan control signal output
E21	405	SCAN_6	Scan control signal output
E20	406	VSS15	GND
E19	407	EXA18	Flash memory address bus
E18	408	EXA3	Flash memory address bus
E17	409	EXDIO_1	Flash memory data bus
E16	410	VSS15	GND
E15	411	EXDIO_9	Flash memory data bus
E14	412	EXDIO_15	Flash memory data bus
E13	413	RBI_6	B phase signal input of R video (sixth bit)
E12	414	CLKS	CLK input (85MHz)
E11	415	VSS15	GND
E10	416	GBI_4	B phase signal input of G video (fourth bit)
E8	418	BBI_2	B phase signal input of B video (second bit)
E9	417	BBI_8	B phase signal input of B video (eighth bit)
E7	419	VSS15	GND
E6	420	RAI_7	A phase signal input of R video (seventh bit)
F6	421	RAI_6	A phase signal input of R video (sixth bit)
G6	422	APL_DT	APL value trigger input
H6	423	VDD15	1.5V power supply
J6	424	VBB	VBB power monitor in the DRAM
K6	425	XSUSB_5	X-Drive control signal output
L6	426	VDDD15	1.5V power supply
M6	427	XSUSA_11	X-Drive control signal output
N6	428	XSUSA_5	X-Drive control signal output
P6	429	VDD15	1.5V power supply
R6	430	ADRS_1	Address control signal output
T6	431	TESTCN	Test signal input (Not used)
U6	432	VDDL15	1.5V power supply
V6	433	VDDLA	3.3V power supply
W6	434	VDDLA	3.3V power supply
Y6	435	VDDL15	1.5V power supply
AA6	436	VDDLA	3.3V power supply
AA7	437	VDDLA	3.3V power supply
AA8	438	VDDL15	1.5V power supply
AA9	439	VDDLA	3.3V power supply
AA10	440	VDDLA	3.3V power supply
AA11	441	VDDL15	1.5V power supply
AA12	442	VDDLA	3.3V power supply
AA13	443	VDDLA	3.3V power supply
AA14	444	VDDLA	3.3V power supply
AA15	445	VDDLA	3.3V power supply
AA16	446	VDDL15	1.5V power supply
AA17	447	VDDLA	3.3V power supply
AA18	448	VDDLA	3.3V power supply
AA19	449	VDDL15	1.5V power supply

■ PD5856A (DIGITAL VIDEO ASSY : IC5401)

- PDP ASIC IC4


● Pin Function (10/10)

Ball No.	No.	Pin Name	Function
AA20	450	VDDLA	3.3V power supply
AA21	451	VDDLA	3.3V power supply
Y21	452	VDDL15	1.5V power supply
W21	453	VDDLA	3.3V power supply
V21	454	VDDLA	3.3V power supply
U21	455	VDDL15	1.5V power supply
T21	456	SDITCK	JTAG signal
R21	457	GPIOO_4	Microcomputer macro general-purpose port
P21	458	VDD15	1.5V power supply
N21	459	YSUSA_3	Y-Drive control signal output
M21	460	YSUSA_9	Y-Drive control signal output
L21	461	VDDD15	1.5V power supply
K21	462	YSUSB_3	Y-Drive control signal output
J21	463	VBB	VBB power monitor in the DRAM
H21	464	VDDD15	1.5V power supply
G21	465	YSUSB_13	Y-Drive control signal output
F21	466	SCAN_2	Scan control signal output
F20	467	VDD15	1.5V power supply
F19	468	EXA17	Flash memory address bus
F18	469	EXA2	Flash memory address bus
F17	470	EXDIO_2	Flash memory data bus
F16	471	VDD15	1.5V power supply
F15	472	EXDIO_10	Flash memory data bus
F14	473	TRNSEND_I	NC pin
F13	474	VDD15	1.5V power supply
F12	475	RBI_1	B phase signal input of R video (first bit)
F11	476	VDD15	1.5V power supply
F10	477	GBI_3	B phase signal input of G video (third bit)
F9	478	BBI_7	B phase signal input of B video (seventh bit)
F8	479	BBI_1	B phase signal input of B video (first bit)
F7	480	VDD15	1.5V power supply

8. PANEL FACILITIES AND SPECIFICATIONS

A ■ PLASMA DISPLAY (PDP-434PU, PDP-434PG, PDP-434PE)

- Front view

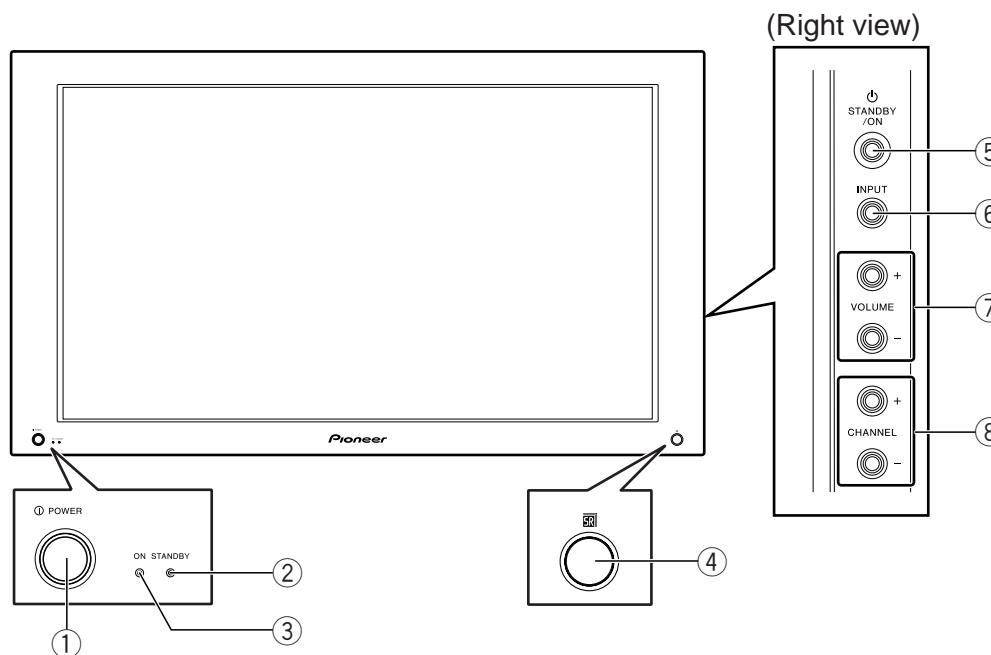

① POWER button
 ② STANDBY indicator
 ③ POWER ON indicator
 ④ Remote control sensor

⑤ STANDBY/ON button
 ⑥ INPUT button
 ⑦ VOLUME +/− buttons
 ⑧ CHANNEL +/− buttons

• Rear view

